



Litton

# BIONETICS

SUMMARY OF MUTAGENICITY  
SCREENING STUDIES  
HOST-MEDIATED ASSAY  
CYTOGENETICS  
DOMINANT LETHAL ASSAY  
CONTRACT FDA 71-268  
COMPOUND FDA 71-33  
STANNOUS CHLORIDE

Summary of mutagenicity screening studies, host-mediated assay cytogenetics dominant lethal assay-Contract FDA 71-268 & Compound FDA 71-33  
(**Stannous Chloride**)

DRC

5516 Nicholson Lane  
Kensington, Maryland  
20795

LBI PROJECT #2446

028

SUMMARY OF MUTAGENICITY  
SCREENING STUDIES  
HOST-MEDIATED ASSAY  
CYTOGENETICS  
DOMINANT LETHAL ASSAY  
CONTRACT FDA 71-268  
COMPOUND FDA 71-33  
STRONTIUM CHLORIDE

SUBMITTED TO

FOOD & DRUG ADMINISTRATION  
DEPARTMENT OF HEALTH, EDUCATION AND WELFARE  
ROCKVILLE, MARYLAND

SUBMITTED BY

LITTON BIOMETRICS, INC.  
5516 NICHOLSON LANE  
KENSINGTON, MARYLAND

DECEMBER 31, 1974



BIONETICS



BIONETICS

3500 Michelson Lane, Kensington, Maryland 20748 301 931-5800

December 31, 1974

Mr. Leonard Appleby, Contracting Officer  
Department of Health, Education and Welfare  
Public Health Service  
Food and Drug Administration, CA-212  
5600 Fishers Lane, Room 5C-13  
Rockville, Maryland 20852

Reference: Contract FDA 71-268; LBI Project #2446

Dear Mr. Appleby:

Litton Bionetics, Inc., is pleased to submit a report for the referenced contract entitled "Mutagenicity Screening Studies" for compound FDA 71-33, Stannous Chloride.

Included in this report are the results and raw data of the three tests conducted: Host-Mediated Assay, Cytogenetic Studies and Dominant Lethal Assay. Eight (8) copies are being submitted for your review.

Upon completion of the toxicology work an evaluation was made of our results to those appearing in the literature. In cases where our values were lower, the toxicology was repeated. In some instances either the Host-Mediated Assay, Dominant Lethal Assay and/or Cytogenetic Studies were also repeated at one or more levels to fulfill the requirements of the contract. In some cases, the acute and/or subacute assays were involved.

If there are any questions concerning this report, or, if additional information is required, please do not hesitate to contact us.

Sincerely,

LITTON BIONETICS, INC.

Robert J. Weir, Ph.D.  
Vice President

RJM:lls  
Enclosures (8)

## TABLE OF CONTENTS

	Page No.
<b>I. REPORT .....</b>	1
A. Introduction .....	1
B. Objective .....	2
C. Compound .....	3
1. Test Material .....	3
2. Dosages .....	4
D. Methods .....	4
E. Summary .....	4
1. Host-Mediated Assay .....	5
2. Cytogenetics .....	5
a. <u>In vivo</u> .....	5
b. <u>In vitro</u> .....	5
3. Dominant Lethal .....	6
F. Results and Discussion .....	6
1. Toxicity Data - Test I .....	6
a. <u>In vivo</u> .....	6
b. <u>In vitro</u> .....	8
c. Toxicity data sheets .....	12
2. Host-Mediated Assay - Test I .....	14
a. Host-mediated assay summary sheets .....	14
b. Host-mediated assay data sheets .....	16
3. Toxicity Data - Test II .....	43
Toxicity data sheets .....	44
4. Host-Mediated Assay - Test II .....	46
a. Host-mediated assay summary sheets .....	47
b. Host-mediated assay data sheets .....	49
5. Cytogenetics - Test I .....	59
a. <u>In vivo</u> .....	59
b. <u>In vitro</u> .....	59
c. Cytogenetic summary sheets .....	60
6. Cytogenetics - Test II .....	64
Cytogenetic summary sheets .....	65
7. Dominant Lethal Study - Test I .....	67
Dominant lethal assay summary sheets .....	69
8. Dominant Lethal Study - Test II .....	86
Dominant lethal assay summary sheets .....	87
<b>II. MATERIALS AND METHODS .....</b>	96
A. Animal Husbandry .....	96
1. Animals (Rats and Mice) .....	96
2. Preparation of Diet .....	96
3. Husbandry .....	96



**BIONETICS**

## TABLE OF CONTENTS (continued)

Page No.

## II. MATERIALS AND METHODS (continued)

B.	Dosage Determination .....	96
1.	Acute LD <sub>50</sub> and LD <sub>5</sub> Determination .....	96
2.	Subacute Studies .....	98
C.	Mutagenicity Testing Protocols .....	98
1.	Host-Mediated Assay .....	99
a.	Acute study .....	101
b.	Subacute study .....	101
c.	<u>In vitro</u> study .....	102
2.	Cytogenetic Studies .....	102
a.	<u>In vivo</u> study .....	104
b.	<u>In vitro</u> study .....	106
3.	Dominant Lethal Assay .....	107
D.	Supplementary Materials and Methods .....	107
1.	Host-Mediated Assay <u>In Vitro</u> and Formulae .....	107
a.	Bacterial <u>In vitro</u> plate tests .....	107
b.	<u>In vitro</u> for mitotic recombination .....	107
c.	Minimal medium (bacteria) .....	108
d.	Complete medium (bacteria) .....	109
e.	Complete medium (yeast) .....	109
2.	Cytogenetics <u>In Vitro</u> Preparation of Anaphase Chromosomes .....	110
3.	Statistical Analyses of Dominant Lethal Studies .....	111
a.	The fertility index .....	111
b.	Total number of implantations .....	111
c.	Total number of <u>corpora lutea</u> .....	111
d.	Preimplantation Losses .....	111
e.	Dead implants .....	112
f.	One or more dead implants .....	112
g.	Two or more dead implants .....	112
h.	Dead implants per total implants .....	112
E.	References .....	115
1.	Host-Mediated Assay .....	115
2.	Cytogenetics .....	115
3.	Dominant Lethal .....	116
F.	Abbreviations .....	117



BIOMETRICS

I. REPORT

A. Introduction

Litton Biometrics, Inc. (LBI) has investigated the possible mutagenicity of compounds selected and provided by the Food and Drug Administration under Contract 71-268. LBI's investigation utilized the three mammalian test systems herein described -- Host-Mediated Assay, Cytogenetic Studies and Dominant Lethal Assay. These tests provide information as to the types of genetic damage caused by environmental compounds -- pesticides, chemicals, food additives, drugs and cosmetics.

The Host-Mediated Assay is based upon the assumption that the action of a mutagen on the genetics of bacteria is similar to that in man. This is further strengthened by the use of an eukaryotic organism (Saccharomyces cerevisiae). Since the mutation frequencies are well established for the indicator organism, any deviation due to the action of the test compound is readily detectable. As some compounds are mutagenic in bacteria and not in the host animal, and vice versa, this test is able to differentiate an action which may have been due to hosts' ability to detoxify or potentiate a suspected mutagen. This action is dependent upon the ability of the compound to gain access to the peritoneal cavity. Coupled with the direct action of the compound on the indicator organism in vitro, the assay provides a clear insight into host-mediation of mutagenicity.

Cytogenetics provides a valuable tool for the direct observation of chromosomal damage in somatic cells. Alteration of the chromosome number and/or form in somatic cells may be an index of mutation. These studies utilized examination of bone marrow cells arrested in G-metaphase from rats exposed to the test compound as compared to positive and negative control animals. If mutational



changes occur, the types of damage expected due to the action of chemicals are structural rearrangements, breaks and other forms of damage to the chromosomal complement of the cells exposed.

For the in vitro cytogenetic studies, we have a more rapid and inexpensive means of determining chromosomal damage. This is accomplished by observing cells in anaphase. As the chromatids separate and move along the spindle, aberrations may occur. Chromatids which do not migrate to the daughter cells may lead to uneven distribution of parts or of entire chromatids (mitotic nondysjunction). These give rise to "side arm" bridges which have been interpreted as point stickiness or localized failures of chromosome duplication point errors. These aberrations (bridges, pseudochiasmata, multipolar cells, acentric fragments, etc.) are extremely sensitive indicators of genetic damage.

The Dominant Lethal Test is an accurate and sensitive measure of the amount and type of fetal wastage which may occur following administration of a potential mutagen. Dominant lethal mutations are indicators of lethal genetic lesions. The effects of mutagens on the chromosomal complement of the spermatozoa of treated males results in alterations of form and number of chromosomes. Structural rearrangements and aneuploidy may lead to the production of non-viable zygotes, early and late fetal deaths, abortions and congenital malformations. In addition, aberrations could lead to sterility or reduced reproductive capacity of the F<sub>1</sub> generation. The action of a mutagen on specific portions of spermatogenesis is also apparent in this test.

#### B. Objective

The purpose of these studies is to determine any mutagenic effect of the test compound by employing the Host-Mediated Assay, Cytogenetic Studies



BIOMETRICS

and the Dominant Lethal Assay, both in vivo and in vitro tests are employed with the cytogenetic and microbial test systems. These tests and their descriptions are referenced in the Appendices A through F.

C. Compound

1. Test Material

Compound FDA 71-33, Stannous Chloride, Crystal #8176, Lot Y8Z, as supplied by the Food and Drug Administration.

2. Dosages

The animals employed, the determination of the dosage levels and the route of administration are contained in the technical discussion.

The dosage levels employed for compound FDA 71-33 are as follows for the Cytogenetic Studies in vivo in rats.

	<u>Test I<sup>+</sup></u>	<u>Test II<sup>+</sup></u>
Low Level	4.0 mg/kg	-----
Intermediate Level	40.0 mg/kg	-----
LD <sub>5</sub>	400.0 mg/kg	1300.0 mg/kg (acute)
Negative Control	Saline	Saline
Positive Control (TEM*)	0.3 mg/kg	0.3 mg/kg

The dosage levels employed for compound FDA 71-33 are as follows for the Host-Mediated Assay in vivo in mice.

	<u>Test I<sup>+</sup></u>	<u>Test II<sup>+</sup></u>
Low Level	4.0 mg/kg	-----
Intermediate Level	40.0 mg/kg	-----
LD <sub>5</sub>	400.0 mg/kg	1300.0 mg/kg (acute)
Negative Control	Saline	Saline
Positive Control (EMS**) (DNN***)	350 mg/kg 100 mg/kg	350 mg/kg 100 mg/kg

\* Triethylene Melamine

\*\* Ethyl Methane Sulfonate

\*\*\* Dimethyl Nitrosamine

+ These two tests were performed at different time intervals.



BIOMETRICS

The dosage levels employed for compound FDA 71-33 are as follows for the Dominant Lethal Assay in vivo in rats.

	Test I <sup>+</sup>	Test II <sup>+</sup>
Low Level	4.0 mg/kg	-----
Intermediate Level	40.0 mg/kg	-----
LD <sub>5</sub>	400.0 mg/kg	1300.0 mg/kg (acute)
Negative Control	Saline	Saline
Positive Control (TEM*)	0.3 mg/kg	0.3 mg/kg

The in vitro Cytogenetic Studies were performed employing three logarithmic dose levels.

Low Level	0.1 mcg/ml
Medium Level	1.0 mcg/ml
High Level	10.0 mcg/ml
Negative Control	Saline
Positive Control (TEM*)	0.1 mcg/ml

The discussion of this test is contained in the technical discussion.

D. Methods

The protocols employed are explained in Appendices C and D.

E. Summary

1. Host-Mediated Assay

Compound FDA 71-33, Stannous Chloride, was not genetically active in vitro or in the Host-Mediated Assays with Salmonella strains TA-1530 and G-46 and Saccharomyces strain D3.

\*Triethylene Melamine

+These two tests were performed at different time intervals.



BIONETICS

2. Cytogenetics

a. In vivo

The compound produced no detectable significant aberration of the bone marrow metaphase chromosomes of rats when administered orally at the dosage levels employed in this study.

b. In vitro

The compound produced no significant aberration in the anaphase chromosomes of human tissue culture cells when tested at the dosage levels employed in this study.

3. Dominant Lethal

This compound was considered to be non-mutagenic in rats in the Dominant Lethal Assay when using the dosages employed in this study.



BIONETICS

F. Results and Discussion

1. Toxicity Data - Test I

a. In vivo

Compound FDA 71-33 was suspended in 0.85% saline and administered to ten male rats by oral intubation. The average body weight of the animals was 360 grams, and each received an acute dose of 2500 mg/kg of body weight. All animals were found dead within 48 hours.

Findings at necropsy indicated inflamed intestinal linings and a vascular stomach.

Dose levels of 100, 200, 400, 800, 1600 and 3200 mg/kg were selected to determine an acute LD<sub>50</sub>.

The toxicity data is presented on the LD<sub>50</sub> reporting form using the Litchfield-Wilcoxon method.

The LD<sub>50</sub> was determined as 720 mg/kg. The LD<sub>5</sub> dose level was derived from the raw data LD<sub>50</sub> probit line (uncorrected). The LD<sub>50</sub> derived from both corrected and uncorrected probit lines were within confidence limits of each other. The acute doses used were LD<sub>5</sub> - 400 mg/kg, intermediate level - 40 mg/kg and the low level - 4.0 mg/kg. The subacute dose levels used were the same as those for the acute. The data on the dose levels, number of animals and the necropsy findings are presented in the toxicity data sheets.

b. In vitro

The compound was suspended in 0.85% saline and added to tubes of WI-38 cells in the logarithmic phase of growth. The cells were observed for cytopathic effect (CPE) and mitoses at 24 and 48 hours with the following results.



<u>Tube No.</u>	<u>No. of cells</u>	<u>Conc. mcg/ml</u>	<u>CPE</u>	<u>Mitoses</u>
1	$5 \times 10^5$	1000	+	-
2	"	1000	+	-
3	"	500	+	-
4	"	500	+	-
5	"	100	+	-
6	"	100	+	-
7	"	50	+	-
8	"	50	+	-
9	"	10	-	+
10	"	10	-	+

A closer range of concentrations was employed, as follows.

1	$5 \times 10^5$	50	+	+
2	"	50	+	+
3	"	20	±	+
4	"	20	-	+
5	"	10	-	+
6	"	10	-	+
7	"	5	-	+
8	"	5	-	+
9	"	1	-	+
10	"	1	-	+

The dose levels employed were 10 mcg/ml as the high level, 1.0 mcg/ml as the intermediate level, and 0.1 mcg/ml as the low level.

c. TOXICITY DATA SHEETS  
CONTRACT FDA 71-268  
COMPOUND FDA 71-33  
SEMANOUS CHLORIDE  
TEST I

TOXICITY DATA  
COMPOUND FDA 71-33

Solvent: 0.85% Saline

Dosage Form: Suspension

Animals: Male rats with an average body weight of 360 grams. All animals were observed for ten (10) days.

Range Finding:

<u>Dose mg/kg</u>	<u>No. Dead/No. Animals</u>	<u>Mercropsy and Day of Death</u>
2500	10/10	Day 1 (8) and Day 2 (2): Ulceration of stomach.

LD<sub>50</sub>:

100	0/5	None
200	0/5	None
400	0/5	None
800	3/5	Day 1 (1) and Day 2 (2): Ulceration of stomach; red intestinal lining.
1600	5/5	Day 1 (3) and Day 2 (2): Ulceration of stomach; red intestinal lining.
3200	5/5	Day 1 (4) and Day 2 (1): Ulceration of stomach; red intestinal lining.



BIONETICS

LD<sub>50</sub> REPORTING FORM USING LITCHFIELD-WILCOXON METHODDOSE EFFECT CURVE FOR COMPOUND FDA 71-33

DOSE	PROPORTION	OBSERVED PERCENT	EXPECTED PERCENT	OBS-EXPT PERCENT	CONTRIE. TO (chi) <sup>2</sup>
400	.5/5	.100	.121	-.021	.0207
800	3/5	.600	.548	.052	.0545
1600	4.5/5	.900	.921	-.021	.0303

Total animals = 1510BX-EXPT Total = .094Number Doses, K = 3(CHI)<sup>2</sup> = .1056Animals/Dose = 5Degrees of Freedom, n=k-2\* 1(CHI)<sup>2</sup> for n of k-2 = 3.84since .1056 is less than 3.84,  
therefore data not significantly  
heterogeneousLD<sub>64</sub> = 1270LD<sub>50</sub> = 720LD<sub>16</sub> = 435


$$fLD_{50} = \frac{5}{\sqrt{N!}} \cdot \frac{2.77}{2.77} = \frac{2.236}{\sqrt{N!}} = \frac{2.236}{\sqrt{5}} = \frac{2.236}{2.236} = \frac{1.941}{1.941}$$

$$LD_{50} \times fLD_{50} = \frac{720}{1.941} = \frac{720}{1.941} = 371$$

$$\frac{LD_{50}}{fLD_{50}} = \frac{720}{1.941} = 371$$

$$LD_{50} \text{ and } 19/20 \text{ Confidence Limits} = P( 371 \leq LD_{50} \leq 1398 ) = .95$$

Attached should be a plot of the dose-effect curve on log-probit paper.

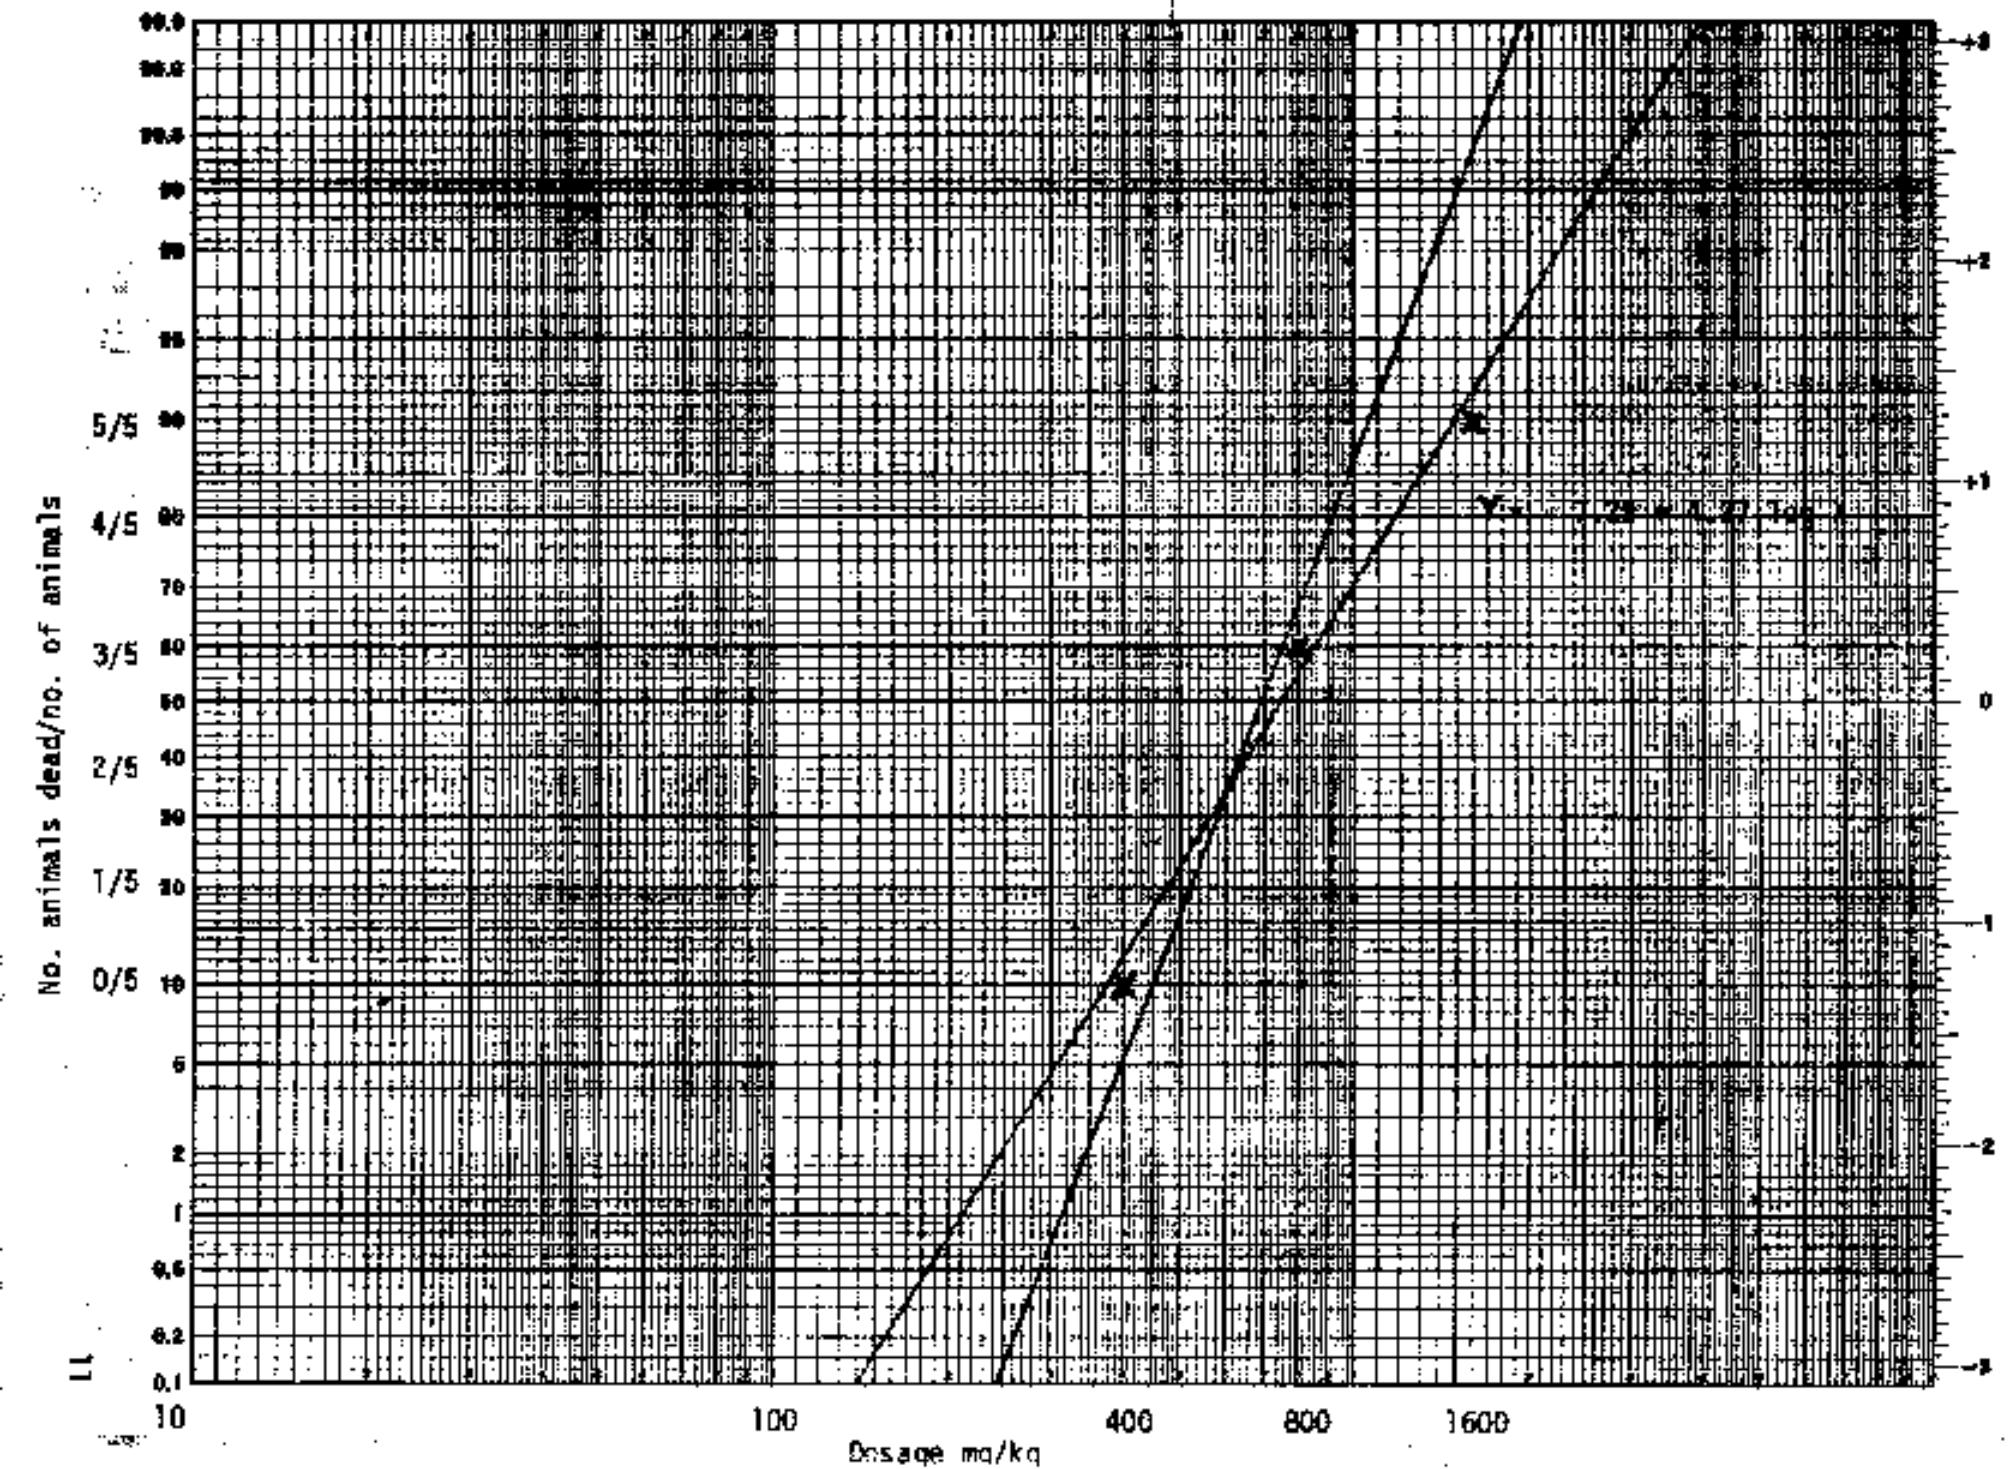

2. Host-Mediated Assay - Test I

Compound FDA 71-33 was not mutagenic in Salmonella strain 6-46 in any of the assays. The results with strain TA-1530 showed an elevated frequency at the subacute high dose level. This increase may be real or possibly the result of high mutant counts for two animals (Numbers 6 and 8). All assays with Saccharomyces were negative.



BIONETICS

## EVALUATION SHEET

Compound: 71-33 Stannous Chloride

<u>Indicator Strain</u>	<u>In Vitro</u>	<u>In Vivo</u>			<u>Other Comments</u>
		<u>Possible Low Recoveries</u>	<u>Controls</u>		
TA-1530 5/26/72 all	pos.  <u>neg.</u>	NC PC AL AI AH SANC SAL SAI SAH	NC OK PC OK SANC		1. Subacute high dose appears positive but I feel that it most likely would be negative if animals 668 were dropped.
G-46 6/16/72 all	pos.  <u>neg.</u>	NC PC AL AI AH SANC SAL SAI SAH	NC OK PC OK SANC		1. All doses negative
D3 NC, PC Acutes (5/8/72) SANC, S-acutes (5/12/72)	pos.  <u>neg.</u>	NC PC AI AI AH SANC SAL SAI SAH	NC OK PC OK SANC OK		1. AL freq. is slightly elevated probably resulting from the lowered recovery. 2. SAH dose shows slightly high freq. but I don't consider positive.

Summary: All data should be acceptable. None of the dose levels were definite positives for any organism. All controls took good.

**4. HOST-MEDIATED ASSAY SUMMARY SHEETS**

**CONTRACT FDA 71-268**

**COMPOUND FDA 71-33**

**STANNOUS CHLORIDE**

**TEST I**



**BIONETICS**

## HOST MEDIATED ASSAY

## SUMMARY SHEET

COMPOUND: FDA 71-33

	SALMONELLA		SACCHAROMYCES D-3	
	TA1530	G-46		
	MHF (X 10E-8)	MFT/MFC	MHF (X 10E-8)	MFT/MFC
ACUTE				
NC	.67		.90	5.79
PC	6.98	10.42	36.50	53.25
AL	1.21	1.81	2.67	7.17
AI	1.02	1.52	3.49	4.71
ALD5	.70	1.04	1.63	3.43
SU-ACTUE				
NC	.67		.90	4.50
SL	1.19	1.78	3.22	4.56
SI	.96	1.43	2.60	4.03
SLD5	5.62	8.39	3.26	11.05
IN VITRO	TA1530	G-46	% CONC	D-3
TCPD	-	-	0.25	63.7
NC	-	-	-	100.0
PC	+	+	0.5	68.8
			% SURVIVAL	R X 10E5
				4
				5
				267

STOP

5

R

U+St.5

G

b. HOST-MEDIATED ASSAY DATA SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-33

STANNOUS CHLORIDE

TEST I

### **Most Mediated Assay - Adjusted Raw CFU x 10<sup>7</sup>/0.6 ml**

The true raw colony counts were lost through automation for this compound. Thus, the source of the adjusted raw CFU x 10<sup>7</sup>/0.6 ml (Column A) was the true raw counts as assimilated by the automatic colony counter, multiplied by the automatic program by 0.1666666666667 (Column B) and then divided by 0.16667 (the check figure). The original concept was that the true CFU x 10<sup>7</sup>/0.6 ml would be printed as column A. Through a programming anomaly the Column B check figure was obtained as the raw CFU x 10<sup>7</sup>/0.6 ml and recorded as such.

- Step 1:** Technician set counter - plates on counter.
- Step 2:** Automatic equipment accumulates counts on 3 plates of 10<sup>-6</sup> dilution as CFU x 10<sup>7</sup>/0.6 ml.
- Step 3:** Automatic equipment multiplies count obtained in step 1 by 0.1666666666667 to obtain total count/ml at 10<sup>8</sup>.
- Step 4:** Automatic check of result of step 3.  
 $TC \times 10^8 \div 0.16667 = CFU \times 10^7/0.6 \text{ ml}$
- Step 5:** Technician was to record the true raw CFU x 10<sup>7</sup>/0.6 ml in log book, however, the computer developed a quirk and provided the Column B check figure as the raw count.

To clarify the problem Column A is headed Adjusted Raw CFU X 10E<sup>7</sup>/0.6 ml in each case where the check figure was provided as the raw count.



**BIONETICS**

ALTERNATE PRINT FILE  
RUN 200-CFU007+ 160+10000  
LOG NUMBER# 200

1P. PAP+6 PRINT ON SIX-PART PAPER

HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: MAY 26, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X $10E7/0.6\text{ML}$	B TOTAL CFU X $10E9/1.0\text{ML}$	C TOTAL NO. MUTANTS X $10E0/1.0\text{ML}$	D MUTATION FRE (C/B) $\times 10E-8$
1	17.84	2.99	1.00	.33
2	26.94	3.92	4.00	1.15
3	15.08	2.13	1.00	.65
4	13.74	2.29	3.00	1.31
5	14.56	2.43	2.00	.82
6	40.14	6.69	5.00	.75
7	32.34	5.39	3.00	.56
8	57.96	9.66	5.00	.52
9	29.54	4.99	3.00	.60
10	37.26	6.21	1.00	.15

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E-8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	4.63	2.80	.67
RANGE	7.48	4.00	1.15
MAX	9.66	5.00	1.31
MIN	2.13	1.00	.15

NO OUTLIERS.

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA TA1535

DOSE LEVEL: POSITIVE CONTROL - DNA - 100 µG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: MAY 26, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E8/1.0ML	D MUTATION FRE (C/B) X 10E-3
1	26.76	4.46	35.00	8.07
2	27.00	4.50	18.00	4.00 *
3	21.06	3.51	20.00	5.70
4	29.70	4.95	32.00	6.45
5	37.50	6.25	43.00	6.38
6	35.15	5.88	38.00	6.43
7	18.06	3.01	24.00	7.97
8	24.06	4.01	42.00	10.47 *
9	34.56	5.76	37.00	6.42
10	43.38	7.23	53.00	7.33

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. C (X 10E8)	COL. D (X 10E-8)
MEAN	4.95	34.30	6.92
RANGE	4.22	35.00	6.47
MAX	7.23	53.00	10.47
MIN	3.01	18.00	4.00

\* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E8)	COL. D (X 10E-8)
MEAN	5.13	35.37	6.92
RANGE	4.22	33.00	2.37
MAX	7.23	53.00	6.47
MIN	3.01	20.00	5.70

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA TA1535

DOSE LEVEL: Log + 4 MG/KG

TREATMENT: IN VIVO- ORAL, ACUTE

DATE STARTED: MAY 26, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X $10^{E7}/6.6\text{ML}$	B TOTAL CFU X $10^{E8}/1.0\text{ML}$	C TOTAL NO. MUTANTS X $10^{E0}/1.0\text{ML}$	D MUTATION FRE (C/B) $\times 10^{E-3}$
1	21.18	3.53	8.00	2.27
2	20.82	3.47	6.00	1.73
3	18.34	3.06	4.00	1.31
4	15.72	2.62	2.00	.76
5	18.52	3.09	1.00	.32
6	19.96	3.35	4.00	1.20
7	13.38	2.23	1.00	.45
8	29.94	4.99	8.00	1.60

NO. OF ANIMALS EQUALS 8

NO. OF DEAD ANIMALS EQUALS 1

TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X $10^{E8}$ )	COL. C (X $10^{E0}$ )	COL. D (X $10^{E-3}$ )
MEAN	3.29	4.25	1.21
RANGE	2.76	7.00	1.94
MAX	4.99	8.00	2.27
MIN	2.23	1.00	.32

NO OUTLIERS

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-53

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: INTERMEDIATE - 40 MG/KG

TREATMENT: IN VIVO: ORAL, ACUTE

DATE STARTED: MAY 26, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	30.96	5.16	7.00	1.35
2	29.58	4.93	5.00	1.01
3	18.64	3.11	3.00	.97
4	37.98	6.33	2.00	.32
5	17.34	2.89	6.00	2.08
6	45.96	7.56	5.00	.65
7	16.36	2.73	3.00	1.10
8	18.04	3.01	2.00	.67

NO. OF ANIMALS EQUALS 8

NO. OF DEAD ANIMALS EQUALS 1

TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	4.48	4.13	1.02
RANGE	4.93	5.00	1.76
MAX	7.66	7.00	2.08
MIN	2.73	2.00	.32

\* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	4.70	3.86	.37
RANGE	4.93	5.00	1.04
MAX	7.66	7.00	1.36
MIN	2.73	2.00	.32

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: LD<sub>5</sub> = 400 MG/KG

TREATMENTS: IN VIVO, ORAL, ACUTE

DATE STARTED: MAY 26, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	27.96	4.66	2.00	.43
2	58.80	9.80	12.00	1.22
3	20.94	3.49	1.00	.29
4	31.06	5.31	4.00	.75
5	11.94	1.99	2.00	1.01
6	18.94	3.16	1.30	.32
7	24.50	4.13	3.00	.73
8	16.96	2.33	2.00	.71
9	36.96	6.16	5.00	.81

NO. OF ANIMALS EQUALS: 9

TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	4.61	3.55	.70
RANGE	7.81	11.00	.94
MAX	9.60	12.00	1.22
MIN	1.99	1.00	.29

NO OUTLIERS.

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FPA 71-33

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: LOW + 4 MG/KG

TREATMENT: IN VIVO+ ORAL, SUBACUTE

DATE STARTED: MAY 26, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X 10E7/0.5ML	B TOTAL CFU X 10E6/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	96.00	16.00	30.00	1.87
2	133.38	22.23	20.00	.90
3	139.08	23.18	22.00	.95
4	74.70	12.45	10.00	.80
5	211.96	35.31	38.00	1.08
6	199.56	33.18	44.00	1.33
7	166.52	27.77	12.00	.43
8	151.68	25.28	42.00	1.66
9	109.92	19.32	31.00	1.62
10	153.56	27.23	32.00	1.17

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E6)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	24.10	26.10	1.19
RANGE	22.66	34.00	1.64
MAX	35.31	44.00	1.67
MIN	12.45	10.00	.43

NO OUTLIERS.

DISK CSC85F, 05 DEC 72 16:48:24, USER CFU007 200

CARDS IN 513 OUT 0 LINES, 522, PROCESSING TIME 21.99 SECONDS

ALTERNATE PRINT FILE  
RUN 200-CFU007\*  
JOB NUMBER 200

\*65+10000

AP PAPER PRINT ON SIX-PART PAPER

HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FGA 71-33

ORGANISM: SALMONELLA TA1535

DOSE LEVEL: INTERMEDIATE - 40 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: MAY 26, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-3
1	16.96	2.66	1.00	.37
2	44.96	7.49	9.00	1.27
3	10.08	1.61	2.00	1.19
4	39.50	6.65	7.00	1.05
5	17.38	2.90	2.00	.69
6	44.40	7.40	9.00	1.23
7	44.50	7.43	11.00	1.48
8	19.72	3.25	2.00	.61

NO. OF ANIMALS EQUALS 8  
TOTAL CFU OUT OF RANGE EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-3)
MEAN	4.93	5.25	.96
RANGE	5.81	10.00	1.11
MAX	7.49	11.00	1.48
MIN	1.68	1.00	.37

NO. OUTLIERS,

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA TA1535

DOSE LEVELS: LD5 = 40 0 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: MAY 26, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E6/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	20.16	3.35	10.00	2.99
2	40.08	6.68	21.00	3.14
3	59.58	9.93	23.00	2.32
4	22.98	3.83	11.00	2.37
5	11.24	1.99	14.00	7.00
6	10.96	1.63	19.00	10.38
7	19.72	3.29	17.00	5.17
8	16.96	2.83	29.00	10.25
9	32.94	5.49	33.00	6.01
10	27.56	4.80	26.00	6.00

NO. OF ANIMALS EQUALS . 10

	COL. B (X 10E6)	COL. C (X 10E6)	COL. D (X 10E-8)
MEAN	4.38	20.50	5.52
RANGE	6.10	23.00	8.07
MAX	9.93	33.00	10.38
MIN	1.63	10.00	2.32

NO OUTLIERS.

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA-71-33

ORGANISM: SALMONELLA 6-46

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JUNE 16, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X $10^{E7}/0.06ML$	B TOTAL CFU X $10^{E8}/1.0ML$	C TOTAL NO. MUTANTS X $10^{E0}/1.0ML$	D MUTATION FRE (C/B) X $10^{E-8}$
1	41.28	6.88	5.00	.73
2	40.50	6.75	6.00	.89
3	50.94	8.49	6.00	.71
4	52.38	8.73	10.00	1.15
5	24.12	4.02	5.00	1.24
6	44.94	7.49	5.00	.67
7	62.82	10.47	9.00	.86
8	65.94	10.99	11.00	1.00

NO. OF ANIMALS EQUALS 8

NO. OF DEAD ANIMALS EQUALS 1

TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X $10^{E8}$ )	COL. C (X $10^{E0}$ )	COL. D (X $10^{E-8}$ )
MEAN	7.98	7.12	.90
RANGE	6.97	6.00	.58
MAX	10.99	11.00	1.24
MIN	4.02	5.00	.67

NO OUTLIERS.

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA G-46

DOSE LEVEL: POSITIVE CONTROL - DNN - 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JUNE 16, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X 10E7/0.1ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-3
1	14.46	2.41	68.00	26.22
2	27.12	4.52	64.00	14.16
3	26.32	4.72	74.00	15.58
4	29.70	4.95	72.00	14.55
5	31.74	5.29	130.00	24.57
6	19.96	3.63	170.00	51.05
7	22.26	3.71	77.00	20.75
8	12.30	2.05	147.00	71.71
9	12.78	2.13	187.00	97.79

NO. OF ANIMALS EQUALS 9

TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-3)
MEAN	3.68	109.89	36.59
RANGE	3.24	123.00	73.53
MAX	5.29	187.00	67.79
MIN	2.05	64.00	14.16

NO OUTLIERS.

## HOST MEDIATED ASSAY REPORT SHEET

COMPOUNDS: FDA 71-83

ORGANISM: SALMONELLA G-46

DOSE LEVELS: LOW = 4 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JUNE 16, 1972

ANIMAL NUMBER	A ADJUSTED RAU CFU X 10E7/0.5ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	25.74	4.29	11.00	2.56
2	37.62	6.27	29.00	4.63 *
3	41.22	6.87	12.00	1.75
4	45.74	7.79	10.00	1.28
5	43.74	7.29	18.00	2.47
6	43.48	8.08	22.00	2.72
7	23.26	4.71	16.00	3.40
8	26.32	4.67	12.00	2.57

NO. OF ANIMALS EQUALS 8

NO. OF DEAD ANIMALS EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.25	14.25	2.67
RANGE	3.79	19.00	3.34
MAX	8.08	29.00	4.63
MIN	4.29	10.00	1.28

\* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.24	14.43	2.39
RANGE	3.79	12.00	2.11
MAX	8.03	22.00	3.40
MIN	4.29	10.00	1.28

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-53

ORGANISM: SALMONELLA G-46

DOSE LEVEL: INTERMEDIATE 40 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JUNE 16, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E5/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE. (C/E) X 10E-8
1	32.70	5.45	24.00	4.40 *
2	45.30	7.35	27.00	3.58
3	28.74	4.79	12.00	2.51
4	31.14	5.19	20.00	3.95
5	32.94	5.49	17.00	3.10
6	30.72	5.12	19.00	3.71
7	33.42	5.57	19.00	3.41
8	36.42	6.07	22.00	3.63
9	26.34	4.39	14.00	3.19
10	47.88	7.98	26.00	3.51

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	5.76	20.20	3.49
RANGE	3.59	16.00	1.99
MAX	7.98	28.00	4.40
MIN	4.39	12.00	2.51

## \* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	5.92	20.75	3.50
RANGE	3.59	16.00	.76
MAX	7.98	28.00	3.05
MIN	4.39	14.00	3.10

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA 6-95

DOSE LEVEL: LD5 = 400 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JUNE 16, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E9/1.0ML	D MUTATION FRE (C/B) X 10E-9
1	53.10	8.85	16.00	1.81
2	62.46	10.41	10.00	.96
3	70.38	11.73	11.00	.94
4	59.34	9.69	19.00	1.92
5	75.78	12.63	25.00	1.93
6	55.56	9.25	25.00	2.69
7	66.48	11.62	25.00	2.53
8	59.92	9.99	19.00	1.90
9	7.02	1.17	2.00	1.71

NO. OF ANIMALS EQUALS 9

NO. OF CONTAMINATED EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E9)	COL. D (X 10E-9)
MEAN	9.45	17.22	1.83
RANGE	11.46	26.00	1.76
MAX.	12.63	26.00	2.69
MIN	1.17	2.00	.94

NO OUTLIERS.

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA G-46

DOSE LEVEL: Low = 4 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: JUNE 16, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	25.20	4.20	7.00	1.67
2	26.40	4.40	31.00	7.05
3	36.82	6.47	34.00	5.25
4	28.02	4.67	10.00	2.14
5	49.30	6.30	54.00	6.51
6	30.18	5.03	19.00	3.78
7	16.20	2.70	8.00	2.95
8	25.80	4.30	4.00	.93
9	22.58	3.78	2.00	.93
10	36.94	5.10	7.00	1.36

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	4.90	17.60	3.22
RANGE	5.60	52.00	6.52
MAX	9.30	54.00	7.05
MIN	2.70	2.00	.53

NO OUTLIERS

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA G-46

DOSE LEVEL: INTERMEDIATE - 40 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: JUNE 16, 1972

ANIMAL NUMBER	A ADJUSTED RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/A) X 10E-8
1	46.50	7.75	19.00	2.45
2	45.90	7.65	14.00	1.83
3	32.70	5.45	15.00	2.75
4	37.30	6.30	15.00	2.38
5	51.00	8.50	17.00	2.00
6	24.68	3.43	5.00	1.44
7	32.58	5.43	19.00	3.50
8	24.00	4.00	15.00	4.00
9	31.32	5.22	18.00	3.45
10	41.70	6.95	15.00	2.16

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.67	15.30	2.50
RANGE	5.02	14.00	2.56
MAX	6.50	19.00	4.00
MIN	3.48	5.00	1.44

NO OUTLIERS.

## HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA 9-46

DOSE, LEVEL: LD<sub>5</sub> = 400 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: JUNE 16, 1972

ANIMAL NUMBER	A ADJUSTED		C TOTAL NO. MUTANTS X 10E8/1.0ML	D MUTATION FRE. (C/B) X 10E-8
	RAW CFU X 10E7/0.6ML	TOTAL CFU X 10E8/1.0ML		
1	64.20	10.70	16.00	1.50
2	40.92	6.82	38.00	5.57
3	45.90	7.65	22.00	2.88
4	9.00	1.50	1.00	.67
5	44.52	7.42	24.00	3.23
6	40.30	6.80	37.00	5.44
7	27.42	4.57	7.00	1.53
8	34.02	5.67	39.00	6.88
9	52.08	8.66	18.00	2.07
10	36.60	6.00	17.00	2.83

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. C (X 10E9)	COL. D (X 10E-8)
MEAN	6.58	21.90	3.26
RANGE	9.20	38.00	6.21
MAX	10.70	39.00	6.88
MIN	1.50	1.00	.57

NO OUTLIERS

PCK CSC6SF, 05 DEC 72 18:17:19 USER CFU007 200

CHARS. IN 537 OUT 0 LINES 543. PROCESSING TIME 23.42 SECONDS

## HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SACCHAROMYCES D-3

DOSE LEVELS: NEGATIVE CONTROL = SALINE

TREATMENT: IN VIVO: ORAL, ACUTE DATE STARTED: MAY 8, 1972

ANIMAL NUMBER	A		B	C	D
	RAW CFU X 10E5/1.0ML	SCREENED X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOMB/CFU SCREENED X 10E-5
1	400.00	.46	2.00	5.00	
2	131.00	.13	1.00	7.63	
3	170.00	.17	2.00	11.76	
4	112.00	.11	1.00	8.93	
5	305.00	.30	2.00	6.56	
6	552.00	.55	3.00	5.43	
7	213.00	.21	2.00	9.39	
8	402.00	.40	1.00	2.49	
9	381.00	.38	1.00	2.62	
10	272.00	.27	2.00	7.35	
TOTAL		2.94	17.00		

NO. OF ANIMALS EQUALS: 10

MEAN C/MEAN B = 5.79

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.29	1.70	6.72
RANGE	.44	2.00	9.28
MAX	.55	3.00	11.76
MIN	.11	1.00	2.49

NO OUTLIERS

## HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SACCHAROMYCES C-3

DOSE LEVEL: POSITIVE CONTROL = EMS = 350 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE DATE STARTED: MAY, 8, 1972

ANIMAL NUMBER	RAW CFU X 10E5/1.0ML	B		TOTAL RECOMB/CFU SCREENED X 10E5/1.0ML
		TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS 1.0ML	
1	181.00	.18	16.00	88.40
2	238.00	.24	13.00	54.62
3	453.00	.45	43.00	94.92
4	674.00	.67	38.00	56.38
5	531.00	.53	22.00	41.43
6	204.00	.20	14.00	68.63
7	460.00	.46	21.00	45.65
8	156.00	.16	10.00	64.10
9	528.00	.52	17.00	32.28
10	481.00	.48	14.00	29.11
TOTAL		3.91	205.00	

NO. OF ANIMALS EQUALS: 10

MEAN C/MEAN B #: .53+25

	COL. B (X 10E5)	COL. C (X 10E5)	COL. D (X 10E-5)
MEAN	.39	20.80	57.54
RANGE	.52	33.00	65.82
MAX	.67	43.00	94.92
MIN	.16	10.00	29.11

NO OUTLIERS

CX CSC65F 28 NOV 72 18156130 USER CFU007 200

485 IN, 485 OUT, 0 LINES, 537 PROCESSING TIME 18.57 SECONDS

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SACCHAROMYCES C-3

DOSE LEVEL: Log - 4.0 MG/KG

TREATMENT: IN-VIVO, ORAL, ACUTE DATE STARTED: MAY 8, 1972

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0mL	TOTAL CFU SCREENED X 10E5/1.0mL	TOTAL RECOMBINANTS /1.0mL	RECOMB/CFU SCREENED X 10E-5
1	121.00	.12	1.00	8.25
2	381.00	.38	2.00	5.25
3	107.00	.11	1.00	9.35
4	124.70	.12	1.00	8.06
5	188.00	.19	1.00	5.32
6	302.00	.30	3.00	9.93
7	102.00	.10	1.00	9.80
8	650.00	.65	5.00	7.69
9	157.00	.16	1.00	6.37
10	101.00	.10	0.00	0.00 *
TOTAL		2.23	15.00	

NO. OF ANIMALS EQUALS 10

MEAN, C/MEAN, B = 7.17

	COL. B (X 10E5)	COL. C (X 10E5)	COL. D (X 10E-5)
MEAN	.22	1.60	7.00
RANGE	.55	5.00	9.93
MAX	.65	5.00	9.93
MIN	.10	.00	.00

\* SUMMARY WITH OUTLIERS REMOVED

MEAN, C/MEAN, B = 7.50

	COL. B (X 10E5)	COL. C (X 10E5)	COL. D (X 10E-5)
MEAN	.24	1.70	7.75
RANGE	.55	4.00	9.12
MAX	.65	5.00	9.93
MIN	.10	1.00	5.25

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SACCHAROMYCES C-3

DOSE LEVEL: INTERMEDIATE = 40 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE DATE STARTED: MAY 8, 1972

ANIMAL NUMBER	RAN CFU X 10E5/1.0ML	B.		RECOMB/CFU SCREENED X 10E-5
		TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	
1	403.00	.40	2.00	4.96
2	300.00	.30	1.00	3.33
3	188.00	.19	1.00	5.32
4	123.00	.12	.00	.00
5	107.00	.19	1.00	5.35
6	420.00	.42	1.00	2.38
7	503.00	.50	3.00	5.95
8	301.00	.30	2.00	6.67
9	122.00	.12	1.00	8.20
TOTAL		2.55	12.00	

NO. OF ANIMALS EQUALS 9

NO. OF DEAD ANIMALS EQUALS 1

MEAN, C/MEAN, B = 4.71

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.28	1.33	4.68
RANGE	.38	3.00	8.20
MAX	.50	3.00	8.20
MIN	.12	.00	.00

NO OUTLIERS

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: LD<sub>50</sub> = 400 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE      DATE STARTED: MAY 8, 1972

ANIMAL NUMBER	RAW CFU X 10E5/1.0ML	A		B	C	D
		TOTAL	CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOMB/CFU SCREENED X 10E-5	
1	300.00		.30	1.00	3.33	
2	800.00		.80	4.00	5.00	
3	743.00		.74	3.00	4.04	
4	402.00		.40	1.00	2.49	
5	253.00		.25	1.00	3.95	
6	303.00		.30	1.00	3.33	
7	250.00		.25	.00	*00	*
8	681.00		.68	2.00	2.94	
9	350.00		.35	1.00	2.86	
TOTAL			4.08	14.00		

NO. OF ANIMALS EQUALS 9

NO. OF CONTAMINATED EQUALS 1

MEAN C/MEAN B = 3.43

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.45	1.56	3.10
RANGE	.55	4.00	5.00
MAX	.60	4.00	5.00
MIN	.25	.00	.00

\* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 3.65

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.48	1.72	3.49
RANGE	.55	3.00	2.51
MAX	.60	4.00	5.00
MIN	.25	1.00	2.49

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: NEGATIVE CONTROL - SUBACUTE TRIALS

TREATMENT: IN VIVO, ORAL, ACUTE, DATE STARTED: MAY 12, 1972

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOMB/CFU SCREENED X 10E-5
1	241.00	.24	1.00	4.15
2	128.00	.13	.00	.00
3	277.00	.28	1.00	3.61
4	345.00	.34	2.00	5.80
5	310.00	.31	1.00	3.23
6	487.00	.49	3.00	6.16
7	123.00	.12	.00	.00
8	401.00	.40	2.00	4.99
9	169.00	.19	1.00	5.29
10	163.00	.16	1.00	6.13
TOTAL		2.66	12.00	

NO. OF ANIMALS EQUALS: 10

MEAN, C/MEAN, B = 4.50

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.27	1.20	3.94
RANGE	.36	3.00	6.16
MAX	.49	3.00	6.16
MIN	.12	.00	.00

NO OUTLIERS

**HOST-MEDIATED ASSAY REPORT SHEET**

**COMPOUND:** FOA 71-33

**ORGANISM:** SACCHAROMYCES D-3

**DOSE LEVEL:** LOW - 4 MG/KG

**TREATMENTS:** IN VIVO, ORAL, SUBACUTE      **DATE STARTED:** MAY 12, 1972

ANIMAL NUMBER	RAW CFU X 10E5/1.0ML	B		RECOMB/CFU 10E-5
		TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	
1	463.00	.46	2.00	4.34
2	202.00	.20	1.00	4.95
3	210.00	.21	.00	.00
4	171.00	.17	2.00	11.70
5	440.00	.44	2.00	4.55
6	110.00	.11	.00	.00
7	206.00	.21	1.00	4.65
8	444.00	.44	2.00	4.51
9	203.00	.20	1.00	4.93
10	182.00	.18	1.00	5.40
TOTAL		2.63	12.00	

NO. OF ANIMALS EQUALS 10.

MEAN C/MEAN B = 4.56

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.26	1.20	4.53
RANGE	.35	2.00	11.70
MAX	.46	2.00	11.70
MIN	.11	.00	.00

\* SUMMARY WITH OUTLIERS REMOVED \*

MEAN C/MEAN B = 4.07

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.27	1.11	3.73
RANGE	.35	2.00	5.49
MAX	.46	2.00	5.49
MIN	.11	.00	.00

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SACCHAROMYCES D-2

DOSE LEVEL: INTERMEDIATE = 40 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE, DATE STARTED: MAY 12, 1972

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOVS/CFU SCREENED X 10E-5
1	191.00	.19	1.00	5.24
2	251.00	.25	1.00	3.98
3	680.00	.68	3.00	4.41
4	401.00	.40	2.00	4.99
5	221.00	.22	1.00	4.52
6	104.00	.10	.00	*.00
7	472.00	.47	2.00	4.24
8	461.00	.46	1.00	2.17
9	200.00	.20	1.00	5.00
TOTAL		2.98	12.00	

NO. OF ANIMALS EQUALS 9

TOTAL SCREENED OUT OF RANGE EQUALS 1

MEAN C/MEAN B = 4.03

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.33	1.33	3.64
RANGE	.58	3.00	5.24
MAX	.68	3.00	5.24
MIN	.10	.00	.00

\* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 4.17

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.6	1.5	4.33
RANGE	.49	2.00	3.67
MAX	.68	3.00	5.24
MIN	.19	1.00	2.17

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: LD<sub>5</sub> + 400 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE      DATE STARTED: MAY 12, 1972

ANIMAL NUMBER	RAW CFU X 10E5/1.0ML	A		B		C		D	
		TOTAL	CFU SCREENED X 10E5/1.0ML	TOTAL	RECOMBINANTS /1.0ML	RECOMB/CFU SCREENED X 10E-5			
1	101.00		.10		1.00		9.90		
2	204.00		.26		3.00		14.71		
3	150.00		.15		2.00		13.33		
4	191.00		.19		1.00		5.24		
5	361.00		.36		4.00		11.08		
6	410.00		.41		4.00		9.76		
7	492.00		.49		5.00		12.20		
8	124.00		.12		.00		.00		
9	138.00		.14		3.00		21.74	*	
TOTAL			2.17		24.00				

NO. OF ANIMALS EQUALS 9

NO. OF DEAD ANIMALS EQUALS 1

MEAN C/MEAN B = 11.65

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.64	2.67	10.88
RANGE	.39	6.00	21.74
MAX	.49	6.00	21.74
MIN	.10	.00	.00

\* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 10.33

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.65	2.63	9.50
RANGE	.39	6.00	14.71
MAX	.49	6.00	14.71
MIN	.10	.00	.00

### 3. Toxicity Data - Test II

Compound FDA 71-33, Stannous Chloride, was prepared as a 17 to 28 percent (w/v) suspension and administered as a single oral dose to five groups of six male rats (average body weight 455 grams) at doses of 1500 mg/kg, 1700 mg/kg, 1930 mg/kg, 2200 mg/kg and 2500 mg/kg.

Signs of toxicity consisted of depressed activity and untriftness, the latter was characterized by excessive secretory activity resulting in crusting around the nose and eyes together with poor hair coat appearance. Deaths occurred in all groups as noted on the toxicity data sheet. At termination all surviving animals were killed and on necropsy no gross findings were observed.

The acute oral LD<sub>50</sub> for compound FDA 71-33 is 1723 mg/kg with confidence limits of 1469 mg/kg to 1905 mg/kg (95% probability). The LD<sub>5</sub> is 1316 mg/kg.



BIONETICS

**TOXICITY DATA SHEETS**

**CONTRACT FDA 71-268**

**COMPOUND FDA 71-33**

**STANNOUS CHLORIDE**

**TEST II**



**BIONETICS**

TOXICITY DATA

CONTRACT FDA 71-268

COMPOUND FDA 71-33

STANNOUS CHLORIDE

Solvent: 0.85% saline

Dosage Form: Suspension

Animals: Male rats with an average body weight of 455 grams. All animals were observed for seven (7) days.

LD<sub>50</sub>:

<u>Dose mg/kg</u>	<u># Dead/# Animals</u>	<u>Day of Death and Necropsy</u>
1500	1/6	Day 6(1): No gross pathology.
1700	4/6	Day 2(1), Day 3(2) and Day 6(1): No gross pathology.
1930	3/6	Day 2(3): No gross pathology.
2200	6/6	Day 3(2), Day 4(2), Day 5(1) and Day 6(1): No gross pathology.
2500	6/6	Day 2(1), Day 3(2), Day 4(1), Day 5(1) and Day 6(1): No gross pathology.



BIONETICS

4. Host-Mediated Assay - Test II

Compound FDA 71-33, Stannous Chloride, was not genetically active in any of the repeat assays.

  
\_\_\_\_\_  
David Brusick



BIONETICS

**a. HOST-MEDIATED ASSAY SUMMARY SHEETS**  
**CONTRACT FDA 71-268**  
**COMPOUND FDA 71-33**  
**STANNOUS CHLORIDE**  
**TEST II**

## HOST MEDIATED ASSAY

## SUMMARY SHEET

COMPOUND: FDA 71-33

	SALMONELLA		SACCHAROMYCES D-3	
	TA1530	G-46		
	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC
<b>ACUTE</b>				
NC	5.19		1.91	10.34
PC	34.04	6.56	88.28	99.56
AL	0.	0.	0.	0.
AI	0.	0.	0.	0.
ALD5	5.28	1.02	1.44	10.92
<b>SUBACUTE</b>				
NC	1.00		1.00	1.00
SL	0.	0.	0.	0.
SI	0.	0.	0.	0.
SLD5	0.	0.	0.	0.
<b>IN VITRO</b>				
	TA1530	G-46	% CONC	D-3 % SURVIVAL
			R X 10E5	

NC  
PCSTOP  
SRU'S:6

b. HOST-MEDIATED ASSAY DATA SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-33

STANNOUS CHLORIDE

TEST II



BIOMETRICS

## HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: NEGATIVE CONTROL -SALINE

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: AUGUST 8, 1974

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E7/0.6ML	TOTAL CFU X 10E8/1.0ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FRE (C/B) X 10E-8
1	32.70	5.45	25.00	4.59
2	31.90	5.32	39.00	7.34
3	32.20	5.37	39.00	7.27
4	59.80	9.97	21.00	2.11
5	29.90	4.98	27.00	5.42
6	39.80	6.63	36.00	5.43
7	45.40	7.57	31.00	4.10
8	39.90	6.65	35.00	5.26
9	36.90	6.15	32.00	5.20

NO. OF ANIMALS EQUALS 9

TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.45	31.67	5.19
RANGE	4.98	18.00	5.23
MAX	9.97	39.00	7.34
MIN	4.98	21.00	2.11

## \* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.01	33.00	5.57
RANGE	2.58	14.00	3.24
MAX	7.57	39.00	7.34
MIN	4.98	25.00	4.10

STOP  
RU'S:7

## HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: POSITIVE CONTROL - DMN - 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: AUGUST 6, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	39.30	6.55	118.00	18.01
2	34.60	5.77	117.00	20.29
3	30.20	5.03	137.00	27.22
4	34.80	5.80	344.00	59.31
5	33.80	5.63	131.00	23.25
6	30.00	5.00	184.00	36.80
7	55.20	9.20	289.00	31.41
8	39.50	6.58	314.00	47.70
9	31.70	5.28	224.00	42.40

NO. OF ANIMALS EQUALS 9

TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E6)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.09	206.44	34.04
RANGE	4.20	227.00	41.29
MAX	9.20	344.00	59.31
MIN	5.00	117.00	18.01

NO OUTLIERS

STOP

SRU'S:.6

4

## HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA-TA1535

DOSE LEVEL: LD5 - 1300 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: AUGUST 8, 1974

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E7/0.6ML	TOTAL CFU X 10E8/1.0ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FRE (C/B) X 10E-8
1	46.00	7.67	32.00	4.17
2	36.70	6.12	36.00	5.89
3	30.40	5.07	53.00	10.46
4	59.20	9.87	37.00	3.75
5	33.30	5.55	37.00	6.67
6	31.70	5.28	23.00	4.35
7	53.70	8.95	47.00	5.25
8	48.80	8.13	28.00	3.44
9	37.20	6.20	29.00	4.68
10	34.80	5.60	24.00	4.14

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E6)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.86	34.60	5.28
RANGE	4.80	30.00	7.02
MAX	9.87	53.00	10.46
MIN	5.07	23.00	3.44

## \* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E6)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	7.06	32.56	4.70
RANGE	4.58	24.00	3.22
MAX	9.87	47.00	6.67
MIN	5.26	23.00	3.44

STOP  
SI J'S:7

**HOST-MEDIATED ASSAY REPORT SHEET**

**COMPOUND: FDA 71-33**

**ORGANISM: SALMONELLA G-46**

**DOSE LEVEL: NEGATIVE CONTROL - SALINE**

**TREATMENT: IN VIVO, ORAL, SUBACUTE**

**DATE STARTED: JUNE 28, 1974**

ANIMAL NUMBER	A	B	C	D
	RAW CFU X $10E7/0.5ML$	TOTAL CFU X $10E8/1.0ML$	TOTAL NO. MUTANTS X $10E0/1.0ML$	MUTATION FRÉ C/B X $10E-8$
1	33.10	5.52	9.00	1.63
2	42.70	7.12	10.00	1.41
3	42.10	7.02	50.00	7.13
4	32.60	5.45	3.00	.55
5	39.10	6.52	2.00	.31
6	26.50	4.75	6.00	1.26
7	34.60	5.17	15.00	2.60
8	47.90	7.98	3.00	.38

**NO. OF ANIMALS EQUALS**

**TOTAL CFU OUT OF RANGE EQUALS**

	COL. A ( $\bar{x} 10E7$ )	COL. C ( $\bar{x} 10E0$ )	COL. D ( $\bar{x} 10E-8$ )
MEAN	6.26	12.25	1.31
RANGE	3.23	48.00	5.82
MAX	7.98	50.00	7.13
MIN	4.75	2.00	.31

**\* SUMMARY WITH OUTLIERS REMOVED**

	COL. A ( $\bar{x} 10E7$ )	COL. C ( $\bar{x} 10E0$ )	COL. D ( $\bar{x} 10E-8$ )
MEAN	6.13	8.86	1.16
RANGE	3.23	13.00	2.29
MAX	7.98	17.00	2.60
MIN	4.75	2.00	.31

**TOP**

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SALMONELLA G-46

DOSE LEVEL: POSITIVE CONTROL -- DMN = 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JUNE 28, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.5ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. 10E0/1.0ML	D MUTAT. ON PER C/B X 10E-9
1	53.70	8.95	1037.00	115.86
2	46.40	7.73	293.00	37.09
3	55.70	9.28	784.00	84.45
4	40.70	6.78	710.00	104.67
5	44.70	7.45	646.00	86.71
6	41.00	6.83	929.00	135.95
7	45.20	7.53	786.00	104.33
8	56.50	8.03	535.00	90.17
9	127.20	21.20	732.00	84.53

NO. OF ANIMALS EQUALS 9  
 TOTAL CFU OUT OF RANGE EQUALS 5

	COL. A (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-9)
MEAN	9.8	711.89	88.28
RANGE	15.27	744.00	101.42
MAX	21.20	1037.00	135.95
MIN	5.93	293.00	34.53

NO OUTLIERS

STOP

**HOT SENSITIZED ASSAY REPORT SHEET**

**COMPOUND: FDA 71-33**

**ORGANISM: SALMONELLA G-46**

**DOSE LEVEL: LD<sub>50</sub> - 1300 MG/KG**

**DATE STARTED: JUNE 28, 1974**

**TREATMENT: IN VIVO, ORAL, ACUTE**

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E7/0.5ML	TOTAL CFU X 10E8/1.0ML	TOTAL NO. 10E0/1.0ML	MUTATION FRE (TCB) X 10E-8
1	27.00	4.63	6.00	1.29
2	113.40	18.90	6.00	.32
3	53.00	8.83	8.00	.91
4	71.80	11.2	2.00	.17
5	28.70	4.70	10.00	2.09
6	28.70	4.70	6.00	1.25
7	19.60	3.30	2.00	.61
8	17.00	2.53	10.00	3.3
9	22.40	3.73	5.00	1.34
10	21.00	3.50	10.00	2.06

**NO. OF ANIMALS EQUALS: 1**

	COL. A (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.72	6.5	1.44
RANGE	16.07	8.00	3.36
MAX	18.90	10.00	3.53
MIN	2.63	2.00	.17

**NO OUTLIERS**

**TOP**

## HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND : FDA 71-33

ORGANISM : SACCHAROMYCES D-3

DOSE LEVEL : NEGATIVE CONTROL - SALINE

TREATMENT : IN VIVO, ORAL, SUBACUTE

DATE STARTED : 7/15/74

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOMB/CFU SCREENED X. 10E-5
1	1979.00	1.98	26.00	13.14
2	1612.00	1.61	16.00	9.93
3	1768.00	1.77	14.00	7.92
4	1558.00	1.56	17.00	10.91
5	1574.00	1.57	11.00	6.99
6	1547.00	1.55	15.00	9.70
7	1567.00	1.57	21.00	13.40
8	1726.00	1.73	17.00	9.85
9	1248.00	1.25	9.00	7.21
10	1477.00	1.48	20.00	13.54

NO. OF ANIMALS EQUALS 10

NO. OF DEAD EQUALS 0

NO. OF CONTAMINATED EQUALS 0

NO. OF CFU OUT OF RANGE EQUALS 0

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	1.61	16.60	10.26
RANGE	0.73	17.00	6.55
MAX	1.98	26.00	13.54
MIN	1.25	9.00	6.99

MEAN C/MEAN B = 10.34

NO OUTLIERS

## HOST MEDIATED ASSAY REPORT SHEET

COMPOUND #: FDA 71-33

ORGANISM : SACCHAROMYCES D-3

DOSE LEVEL : POSITIVE CONTROL - EMS-350 MG/KG

TREATMENT : IN VIVO, ORAL, ACUTE

DATE STARTED : 7/15/74

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOMB/CFU SCREENED X 10E-5
1	433.00	0.43	114.00	263.28
2	985.00	0.98	159.00	161.42
3	1172.00	1.17	103.00	87.88
4	1193.00	1.19	150.00	125.73
5	1256.00	1.26	70.00	55.73
6	1385.00	1.38	74.00	53.43
7	563.00	0.56	86.00	152.75
8	1621.00	1.62	101.00	62.31

2 ANIMALS NOT ACCOUNTED FOR. VALUES COMPUTED FOR 8 ANIMALS

NO. OF DEAD EQUALS 0

NO. OF CONTAMINATED EQUALS 2

NO. OF CFU OUT OF RANGE EQUALS 0

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	1.08	107.13	120.32
RANGE	1.19	89.00	209.85
MAX	1.62	159.00	263.28
MIN	0.43	70.00	53.43

MEAN C/MEAN B = 99.56

## \* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	1.17	106.14	99.89
RANGE	1.06	89.00	107.99
MAX	1.62	159.00	161.42
MIN	0.56	70.00	53.43

MEAN C/MEAN B = 90.89

## HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-33

ORGANISM: SACCHAROMYCES C-3

DOSE LEVEL: LD5 - 1300 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JULY 15, 1974

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	1213.00	1.21	27.00	22.26
2	1318.00	1.32	24.00	18.21
3	2658.00	2.86	11.00	3.85
4	2553.00	2.55	1.00	.39
5	702.00	.70	15.00	21.37
6	704.00	.70	17.00	24.15
7	470.00	.47	6.00	12.77
8	351.00	.35	10.00	28.49
TOTAL		10.17	111.00	

NO. OF ANIMALS EQUALS 8  
TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = 10.92

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	1.27	13.88	16.44
RANGE	2.51	26.00	28.10
MAX	2.86	27.00	28.49
MIN	.35	1.00	.39

NO OUTLIERS

STOP  
SRU'S:6

5. Cytogenetics - Test I

a. In vivo

(1) Acute study

The chromosomal abnormalities observed in the positive controls were significantly higher than either the negative controls or the compound. The maximum effect of the positive control was observed at 48 hours after administering the compound. A depression of the mitotic index was observed in the positive control animals. The percentage of breaks in the experimental groups was within normal limits. The percentage of breaks seen (1-3%) is within a normal range value.

(2) Subacute study

Although the experimental group contained breaks with a higher percentage than the negative controls, these values were within normal limits.

b. In vitro

Anaphase preparations were examined in this test. The positive control compound produced a significantly higher percentage of aberrations on the chromosomes than the negative control or the test compound. Depression of the mitotic index due to the positive control was not as pronounced as in the in vivo test. Aberrations of 4% acentric fragments and one cell with a bridge was observed in the high dosage level. Negative controls were well within normal limits.



C. CYTOGENETIC SUMMARY SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-33

STANNOUS CHLORIDE

TEST I



BIONETICS

**STANNOUS CHLORIDE**  
**FDA 73-33**  
**ACUTE STUDY**  
**METAPHASE SUMMARY SHEET**

<u>Compound</u>	<u>Dosage (mg/kg)</u>	<u>Time*</u>	<u>No. of Animals</u>	<u>No. of Cells</u>	<u>Mitotic Index %***</u>	<u>% Cells with Breaks</u>	<u>% Cells with Reunion</u>	<u>% Cells other Aber.**</u>	<u>% Cells with Aber.++</u>
Negative Control	Saline	6	3	150	15	0	0	0	0
		24	3	150	10	0	0	0	0
		48	3	150	16	0	0	0	0
Low Level	4.0	6	5	250	12	1	0	0	1
		24	5	250	8	1	0	0	1
		48	5	250	11	2	0	0	2
Intermediate Level	40.0	6	5	250	9	1	0	0	1
		24	5	250	12	1	0	0	1
		48	5	250	16	0	0	0	0
$LD_5$	400.0	6	5	250	12	0	0	0	0
		24	5	250	10	1	0	0	1
		48	5	250	19	3	0	0	3
Positive Control	0.3 TEM	48	5	250	3	30	12	1(a)	43

\* Time of kill after injection (hours).

\*\* Cells that have polyplodity (P), pulverization (pp), or greater than 10 aberrations (a).

\*\*\* Percent of cells in mitosis: 500 cells observed/animal.

++ Duplicate aberrations in a single cell will cause this to be a % less than a summation of the % aberration seen.

**STANNOUS CHLORIDE**  
 FDA 71-33  
**SUBACUTE STUDY**  
**METAPHASE SUMMARY SHEET**

<u>Compound</u>	<u>Dosage (mg/kg)*</u>	<u>No. of Animals</u>	<u>No. of Cells</u>	<u>Mitotic Index %***</u>	<u>% Cells with Breaks</u>	<u>% Cells with Reunion</u>	<u>% Cells other Abnor.**</u>	<u>% Cells with Abnor.</u>
Negative Control	Saline	3	150	11	0	0	0	0
Low Level	4.0	5	250	12	2	1	0	3
Intermediate Level	40.0	5	250	12	3	0	0	3
LD <sub>5</sub>	400.0	5	250	13	3	0	0	3

\* Dosage 1X/day X 5 days.

\*\* Cells that have polypliody (P), pulverization (pp), fragments (f) or greater than 10 aberrations (a).

\*\*\* Percent of cells in mitosis: 500 cells observed/animal.

**STANNOUS CHLORIDE**  
**FDA 71-33**  
**ANAPHASE SUMMARY SHEET**

<u>Compound</u>	<u>Dosage (mcg/ml)</u>	<u>Mitotic Index**</u>	<u>No. of Cells</u>	<u>% Cells with Acentric Frag.</u>	<u>% Cells with Bridges</u>	<u>% Multipolar Cells</u>	<u>% Cells other Aber.*</u>	<u>% Cells with Aber.++</u>
Low Level	0.1	1	100	0	0	0	0	0
Medium Level	1.0	2	100	0	0	0	0	0
High Level	10.0	2	100	4	1	0	0	5
Negative Control	Saline	3	100	0	0	0	0	0
Positive Control	0.1 TEM	1	100	12	6	6	0	24

\* Cells that have polypliody (P), pulverization (pp), fragments (f) or greater than 10 aberrations (a).

\*\* Percent of cells in mitosis: 200 cells observed/dose level.

++ Duplicate aberrations in a single cell will cause this to be a % less than a summation of the % aberration seen.

## 6. Cytogenetics - Test II

Compound FDA 71-33, Stannous Chloride, was administered to fifteen male rats, with an average body weight of 350 grams, at a single acute high dose of 1300 mg/kg. Metaphase chromosome spreads were prepared from the bone marrow cells of these animals and scored for chromosomal aberrations. Neither the variety nor the number of these aberrations differed significantly from the negative controls; hence, compound FDA 71-33, Stannous Chloride, can be considered non-mutagenic as measured by the cytogenetic test.



**BIONETICS**

**CYTOGENETIC SUMMARY SHEETS**

**CONTRACT FDA 71-268**

**COMPOUND FDA 71-33**

**STANNOUS CHLORIDE**

**TEST II**



**BIONETICS**

**STANNOUS CHLORIDE**  
**FOA 71-33**  
**ACUTE STUDY**  
**METAPHASE SUMMARY SHEET**

<u>Compound</u>	<u>Dosage (mg/kg)</u>	<u>Time*</u>	<u>No. of Animals</u>	<u>No. of Cells</u>	<u>Mitotic Index %**</u>	<u>No. of Cells w/ Breaks**</u>	<u>No. of Cells w/ Reversion**</u>	<u>No. of Cells With Other Aberrations***</u>	<u>No. of Cells w/ Aber.**</u>
High Level	1300	6	5	250	3.00	0	0	1pp(0.4)	1(0.40)
		24	5	250	4.27	0	0	0	0
		48	5	250	4.28	0	0	1f(0.4)	1(0.40)
Negative Control	Saline	6	3	150	4.47	0	29(19.3)***	0	29(19.33)
		24	3	150	3.47	0	0	0	0
		48	3	150	5.73	0	0	0	0
Positive Control	0.3	24	5	250	1.06	3(1.2)	58(23.2)	>37(14.8) 6f(2.4) 2pp(0.8)	101(40.4)

\* Time of kill after dosing (hours).

\*\* Numbers in ( ) are percent aberrations per total cells counted.

\*\*\* 58% of cells examined in one animal (2106-16) exhibited an abnormally large metacentric chromosome and had a diploid number of 41. This was considered to be normal for this animal.

+ Symbols: > = greater than 10 aberrations per cell; f = fragments; pp = polyploidy; and pu = pulverization.

++ Based on a count of at least 500 cells per animal.

## 7. Dominant Lethal Study - Test I

The interpretation of these data was made by Dr. David Brusick, Assistant Professor of Microbiology, Howard University, Washington, D.C., as a consultant to LBI.

### Fertility Index:

Acute - The intermediate doses of weeks 3 and 6 showed significant increases. The high dose of week 7 was significantly decreased compared to the negative control.

Subacute - Week 3 showed a significant increase at the low dose. The low and intermediate doses of week 7 were significantly decreased.

### Average Number of Implants/Pregnant Female:

Acute - All doses of week 7 showed significant dose-related decreases. The high dose of week 3 showed a significant, dose-related, decrease. The low dose of week 6 is significantly increased over the negative control.

Subacute - No significant decreases. The low and intermediate doses of week 6 were significantly higher than the negative control.

### Average Corpora Lutea/Pregnant Female:

Acute - A significant, dose-related decrease was seen at all three doses of week 8. The high dose of week 3 also showed a significant decrease. All doses of week 6 showed significant dose-related increases.

Subacute - All doses of week 6 showed significant increases. The only significant decrease was seen at the low dose of week 2.



Average Preimplantation Losses/Pregnant Female:

Acute - Significant, dose-related, increases were obtained at all doses of week 7 and at the high dose of week 6. Week 8 showed dose-related significant decreases at all levels.

Subacute - Significant increases were obtained at a number of weeks:

All three doses at week 6 and week 3. The low dose of week 5 and the intermediate dose of week 7 also showed significant increases. A significant decrease was observed at the low dose of week 1.

Average Resorptions/Pregnant Female:

Acute - The low and high doses of week 7 showed significant increases.

Subacute - The intermediate and high dose of week 3 and the low dose of week 6 showed significant increases.

Proportion of Females with One or More Implants:

Acute - The low dose of week 7 is significantly increased.

Subacute - No significant findings.

Proportion of Females with Two or More Implants:

Acute - No significant findings.

Subacute - No significant findings.

Dead Implants/Total Implants:

Acute - Significant increases are seen at all doses of week 7.

Subacute - The intermediate and high doses of week 3 are significantly higher than the negative control.



**DOMINANT LETHAL ASSAY SUMMARY SHEETS**

**CONTRACT FDA 71-268**

**COMPOUND FDA 71-33**

**STANNOUS CHLORIDE**

**TEST I**

(Through error the computer had been programmed so that a double rounding off of numbers occurred at print out. In no way does this alter the statistics which are calculated on the full unrounded numbers.)



**BIOMETRICS**

TABLE I  
COMPARISON OF  
STUDY ACTIVE

LOG ARITH DOSE DOSE WEEK	NEGATIVE CONTROL	FERTILITY INDEX			POSITIVE CONTROL
		DOSE LEVEL 4,000 MG/KG	DOSE LEVEL 40,000 MG/KG	DOSE LEVEL 400,000 MG/KG	
1	13/20=0.65	12/20=0.60	12/20=0.60	15/20=0.75	10/18=0.56
2	16/19=0.85	18/20=0.90	17/19=0.90	19/20=0.95	11/19=0.58
3	16/20=0.80	18/20=0.90	20/20=1.00*	18/20=0.90	11/20=0.55
4	18/20=0.90	20/20=1.00	20/20=1.00	20/20=1.00	16/20=0.80
5	19/20=0.95	17/20=0.85	18/19=0.95	18/20=0.90	18/20=0.90
6	13/19=0.69	17/20=0.85	20/20=1.00**	17/20=0.85	19/20=0.95*
7	20/20=1.00	17/20=0.85	17/20=0.85	14/20=0.70**	20/20=1.00
8	18/20=0.90	13/19=0.69	16/20=0.80	17/20=0.85	16/20=0.80

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE II  
COMPOUND 13 STUDY ACUTE

AVERAGE NUMBER OF IMPLANTATIONS PER PREGNANT FEMALE

LOG ARITH. DOSE DOSE	ARITH. WEEK	NEGATIVE CONTROL	DOSE LEVEL 4,000 MG/KG	DOSE LEVEL 40,000 MG/KG	DOSE LEVEL 400,000 MG/KG	POSITIVE CONTROL
1	1	171/13=13.2	144/12=12.0	151/12=12.6	183/15=12.2	52/10= 5.2** <sup>b</sup>
2	2	183/16=11.4	211/13=11.7	214/17=12.6	220/19=11.6	86/11= 7.6 <sup>a</sup> <sup>b</sup>
3	3	217/16=13.6	230/14=12.8	251/20=12.6	214/19=11.9 <sup>a</sup> <sup>b</sup>	93/11= 8.5** <sup>a</sup> <sup>b</sup>
4	4	222/18=12.1	244/20=12.2	254/20=12.7	247/20=12.4	171/16=10.7** <sup>a</sup> <sup>b</sup>
5	5	221/19=11.6	194/17=11.4	202/18=11.2	193/18=10.7	205/18=11.4
6	6	138/13=10.6	216/17=12.7 <sup>a</sup> <sup>b</sup>	214/20=12.2	207/17=12.2	167/19= 8.6 <sup>a</sup> <sup>b</sup>
7	7	252/20=12.6	176/17=10.4 <sup>a</sup> <sup>b</sup> <sup>c</sup>	175/17=10.3 <sup>a</sup> <sup>b</sup> <sup>c</sup> <sup>d</sup> 149/14=10.6 <sup>a</sup> <sup>b</sup> <sup>c</sup> 205/20=10.3 <sup>a</sup> <sup>b</sup> <sup>c</sup>	208/17=12.2	205/16=12.8
	8	213/18=11.8	170/13=13.1	207/16=12.9	208/17=12.2	205/16=12.8

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND \* = TWO-TAILED TEST

! AND # = ONE-TAILED TEST

ONE !,#,\*,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,#,\*,\* = SIGNIFICANT AT P LESS THAN 0.01

\*,# SIGNIFICANTLY DIFFERENT FROM CONTROL

&! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE III  
COMPOUND 30: STUDY ACUTE

AVERAGE CORPUS LUTEUM PER PREGNANT FEMALE

LOG. BRITH DOSE DOSE WEEK	NEGATIVE CONTROL	DOSE LEVEL 4,000 MG/KG	DOSE LEVEL 40,000 MG/KG	DOSE LEVEL 400,000 MG/KG	POSITIVE CONTROL
1	173/13=13.3	158/12=13.2	157/12=13.1	180/15=12.5	31/10= 9.1** <sup>a</sup>
2	202/16=12.6	214/18=11.9	218/17=12.8	230/19=12.1	129/11=11.7
3	217/16=13.6	231/18=12.8	256/20=12.9	220/18=12.2 <sup>bD</sup>	116/11=10.5 <sup>aD</sup>
4	225/18=12.5	244/20=12.2	255/20=12.9	247/20=12.4	180/16=11.3 <sup>aBD</sup>
5	230/19=12.1	209/17=12.0	209/19=11.6	205/18=11.4	209/18=11.6
6!!	180/13=13.9	279/17=16.4 <sup>aI</sup>	322/20=16.1 <sup>aI</sup>	322/17=18.9** <sup>aBI</sup>	213/19=11.2 <sup>aD</sup>
7	255/20=12.8	213/17=12.5	220/17=12.9	180/14=12.9	250/20=12.5
8!!	319/19=17.7	186/13=14.3 <sup>aD</sup>	231/16=14.4 <sup>aD</sup>	235/17=13.8** <sup>aBD</sup>	243/16=15.2

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING  
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING  
THE HISTORICAL CONTROL GROUP

! AND \* = TWO-TAILED TEST  
! AND # = ONE-TAILED TEST

ONE !, \*, #, \* = SIGNIFICANT AT P LESS THAN 0.05

TWO !, \*, #, \* = SIGNIFICANT AT P LESS THAN 0.01

\* , # SIGNIFICANTLY DIFFERENT FROM CONTROL

!, ! SIGNIFICANT RELATIONSHIP WITH ANITH OR LOG DOSE (READING OF COLUMNS)

TABLE IV  
COMPOUND 31 STUDY ACUTE

AVERAGE REIMPLANTATION LOSSES PER PREGNANT FEMALE

LOG ABIRTH DOSE WEEK	NEGATIVE CONTROL	DOSE LEVEL 4,000 MG/KG	DOSE LEVEL 40,000 MG/KG	DOSE LEVEL 400,000 MG/KG	POSITIVE CONTROL
1	2/13 = 0.2	14/12 = 1.2	6/12 = 0.5	5/15 = 0.3	39/10 = 3.9***
2	19/16 = 1.2	3/18 = 0.2	4/17 = 0.2	10/19 = 0.5	43/11 = 3.9**
3	0/16 = 0.0	1/13 = 0.1	5/20 = 0.3	6/19 = 0.3	23/11 = 2.1***
4	3/18 = 0.2	0/20 = 0.0	1/20 = 0.1	0/20 = 0.0	9/16 = 0.6
5	9/19 = 0.5	10/17 = 0.6	7/18 = 0.4	12/18 = 0.7	4/18 = 0.2
6	42/13 = 3.2	63/17 = 3.7	78/20 = 3.9	115/17 = 6.8***	46/19 = 2.4
7	3/20 = 0.2	37/17 = 2.2***	45/17 = 2.7***	31/14 = 2.2***	45/20 = 2.3***
8	106/18 = 5.9	16/13 = 1.2***	24/16 = 1.5***	27/17 = 1.6***	38/16 = 2.4***

SYMBOLS ON FIRST LINE DEVOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

AND \* = TWO-TAILED TEST  
! AND # = ONE-TAILED TEST

ONE !, #, \*, \* = SIGNIFICANT AT P LESS THAN 0.05

TWO !, #, \*, \* = SIGNIFICANT AT P LESS THAN 0.01

\*, # SIGNIFICANTLY DIFFERENT FROM CONTROL

!, # SIGNIFICANT RELATIONSHIP WITH ABIRTH OR LOG DOSE (HEADING OF COLUMN)

TABLE V  
COMPOUND 33 STUDY ACUTE

AVERAGE RESORPTIONS (DEAD INPLATES) PER PREGNANT FEMALE

LOG ARITH DOSE Dose WEEK	NEGATIVE CONTROL	DOSE LEVEL 4,000 MG/KG	DOSE LEVEL 40,000 MG/KG	DOSE LEVEL 400,000 MG/KG	POSITIVE CONTROL
1	3/13=0.24	5/12=0.42	4/12=0.34	3/15=0.20	42/10=4.20*** <del>aaI</del>
2	4/10=0.26	12/13=0.67	4/17=0.24	3/19=0.16	36/11=3.28** <del>aaI</del>
3	10/16=0.63	17/18=0.95	17/20=0.85	28/18=1.56	14/11=1.28
4	12/18=0.67	7/20=0.35	8/20=0.40	16/20=0.80	73/16=4.57** <del>aaI</del>
5	6/19=0.32	2/17=0.12	2/18=0.12	2/18=0.12	16/18=0.89
6	2/13=0.16	4/17=0.24	2/20=0.10	3/17=0.18	23/19=1.22** <del>aaI</del>
7	1/20=0.05	7/17=0.42 <del>aaI</del>	11/17=0.65	4/14=0.29 <del>aaI</del>	1/20=0.05
8	5/18=0.28	1/13=1.09	10/16=0.63	6/17=0.36	13/16=0.82

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND \* = TWO-TAILED TEST  
! AND # = ONE-TAILED TEST

ONE !,5,6,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,6,\*,\* = SIGNIFICANT AT P LESS THAN 0.01

\*,# SIGNIFICANTLY DIFFERENT FROM CONTROL

&,! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADINGS OF COLUMNS)

TABLE VI  
COMPOUND 33      STUDY ACUTE

PROPORTION OF FEMALES WITH ONE OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE WEEK	NEGATIVE CONTROL	DOSE LEVEL 4,000 MG/KG	DOSE LEVEL 40,000 MG/KG	DOSE LEVEL 400,000 MG/KG	POSITIVE CONTROL
1	3/13=0.24	5/12=0.42	4/12=0.34	3/15=0.20	8/10=0.80**
2	3/16=0.19	7/19=0.39	4/17=0.24	3/19=0.16	7/11=0.64*
3	5/16=0.32	5/18=0.28	6/20=0.30	11/18=0.62	7/11=0.64
4	6/18=0.34	6/20=0.30	7/20=0.35	10/20=0.50	14/16=0.88**
5	8/19=0.22	2/17=0.12	2/18=0.12	2/18=0.12	8/18=0.45
6	2/13=0.16	3/17=0.18	2/20=0.10	2/17=0.12	13/19=0.69**
7	1/20=0.05	5/17=0.30*	4/17=0.24	4/14=0.29	1/20=0.05
8	4/18=0.23	1/13=0.08	7/16=0.44	4/17=0.24	6/16=0.38

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE I,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO I,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

† SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (READING OR COLGAN)

TABLE VII

COMPOUND 33

STUDY ACUTE

## PROPORTION OF FEMALES WITH TWO OR MORE DEAD IMPLANTATIONS

LOG. AREA/ DOSE DOSE	WEEK	NEGATIVE CONTROL	DOSE LEVEL 4,000 MG/KG	DOSE LEVEL 40,000 MG/KG	DOSE LEVEL 400,000 MG/KG	POSITIVE CONTROL
	1	0/13=0.0	0/12=0.0	0/12=0.0	0/15=0.0	7/10=0.70**
	2	1/16=0.07	2/18=0.12	0/17=0.0	0/19=0.0	7/11=0.64**
	3	4/16=0.25	3/18=0.17	1/20=0.05	7/18=0.39	5/11=0.45
	4	3/18=0.17	1/20=0.05	1/20=0.05	3/20=0.15	13/16=0.82**
	5	2/19=0.11	0/17=0.0	0/18=0.0	0/18=0.0	4/18=0.23
	6	0/13=0.0	1/17=0.06	0/20=0.0	1/17=0.06	6/19=0.32*
	7	0/20=0.0	1/17=0.06	2/17=0.12	0/14=0.0	0/20=0.0
	8	1/18=0.06	0/13=0.0	1/16=0.19	2/17=0.12	4/16=0.25

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITHM OR LOG DOSE (HEADINGS OF COLUMNS)

TABLE VIII  
COMPOUND 33  
STUDY ACUTE

WEEK	DEAD IMPLANTS / TOTAL IMPLANTS					POSITIVE CONTROL
	NEGATIVE CONTROL	DOSE LEVEL 4,000 MG/KG	DOSE LEVEL 40,000 MG/KG	DOSE LEVEL 400,000 MG/KG		
1	3/171=0.02	5/144=0.04	4/151=0.03	3/183=0.02	42/ 52=0.81***	
2	4/183=0.03	12/211=0.06	4/214=0.02	3/220=0.02	36/ 86=0.42**	
3	10/217=0.05	17/230=0.08	17/251=0.07	28/214=0.14	14/ 93=0.16*	
4	12/222=0.06	7/244=0.03	8/254=0.04	16/247=0.07	73/171=0.43***	
5	6/221=0.03	2/194=0.02	2/202=0.01	2/193=0.02	16/205=0.08*	
6	2/138=0.02	4/216=0.02	2/244=0.01	3/207=0.02	23/167=0.14***	
7	1/252=0.01	7/176=0.04*SI	11/175=0.07*SI	4/149=0.03*SI	1/205=0.01*SI	
8	5/213=0.03	1/170=0.01	10/207=0.05	6/208=0.03	13/205=0.07	

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT DIFFERENCES USING THE HISTORICAL CONTROL GROUP

\* = TWO-TAILED TEST

# = ONE-TAILED TEST

ONE \*,# = SIGNIFICANT AT P LESS THAN 0.05

TWO \*,# = SIGNIFICANT AT P LESS THAN 0.01

\*,# SIGNIFICANTLY DIFFERENT FROM CONTROL

TABLE I

COMPOUND 33

STUDY SUBACUTE

## FERTILITY INDEX

LOG BRITH DOSE DOSE WEEK	NEGATIVE CONTROL	DOSE LEVEL		
		4,000 MG/KG	40,000 MG/KG	400,000 MG/KG
1	13/19=0.69	13/20=0.65	12/19=0.64	11/20=0.55
2	14/20=0.70	18/20=0.90	17/20=0.85	17/19=0.90
3	12/19=0.64	18/20=0.90*	17/20=0.85	14/20=0.70
4	16/19=0.85	19/20=0.95	19/20=0.95	19/20=0.95
5	18/20=0.90	17/20=0.85	17/20=0.85	18/20=0.90
6	18/19=0.95	17/20=0.85	19/20=0.95	19/20=0.95
7	19/19=1.00	15/20=0.75*	14/19=0.74*	16/18=0.89

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH BRITH OR LOG DOSE (HEADING OF COLUMN)

TABLE II  
COMPOUND 93 STUDY SUBACUTE

AVERAGE NUMBER OF IMPLANTATIONS PER PREGNANT FEMALE

LOG ARITH DOSE DOSE WEEK	NEGATIVE CONTROL	DOSE LEVEL 4,000 MG/KG	DOSE LEVEL 40,000 MG/KG	DOSE LEVEL 400,000 MG/KG
1	167/13=12.9	163/13=12.5	138/12=11.5	140/11=12.7
2	190/14=13.6	224/16=12.4	217/17=12.8	205/17=12.1
3	139/12=11.6	205/18=11.4	180/17=10.6	146/14=10.4
4	191/16=11.9	228/19=12.0	235/19=12.4	235/19=12.4
5	219/18=12.2	191/17=11.2	212/17=12.5	216/18=12.0
6	179/18=9.9	197/17=11.6 <sup>aI</sup>	219/19=11.5 <sup>aII</sup>	208/19=11.0
7	204/19=10.7	162/15=10.8	152/14=10.9	173/16=10.8

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

\* AND \* = TWO-TAILED TEST

I AND II = ONE-TAILED TEST

ONE I, II, a, \* = SIGNIFICANT AT P LESS THAN 0.05

TWO I, II, a, \* = SIGNIFICANT AT P LESS THAN 0.01

\* , a SIGNIFICANTLY DIFFERENT FROM CONTROL

a, I SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADINGS OF COLUMNS)

TABLE III  
COMPOUND 33 STUDY SUBACUTE

AVERAGE CORPORA LUTEA PER PREGNANT FEMALE

LOG ARITH DOSE DOSE WEEK	NEGATIVE CONTROL	DOSE LEVEL 4,000 MG/KG	DOSE LEVEL 40,000 MG/KG	DOSE LEVEL 400,000 MG/KG
1	171/13=13.2	163/13=12.5	147/12=12.3	188/11=13.1
2	194/14=13.9	225/18=12.5 <sup>SD</sup>	225/17=13.2	221/17=13.0
3	139/12=11.6	216/18=12.0	196/17=11.5	161/14=11.5
4	198/16=12.4	229/19=12.1	235/19=12.4	240/19=12.6
5	219/18=12.2	214/17=12.6	213/17=12.5	220/18=12.2
6	193/18=10.7	285/17=16.8** <sup>I</sup> 264/19=13.9** <sup>I</sup> 241/19=12.7** <sup>I</sup>		
7	215/19=11.3	184/15=12.3	180/14=12.9	200/16=12.5

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

S AND \* = TWO-TAILED TEST

I AND D = ONE-TAILED TEST

ONE I,S,D,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO I,S,D,\* = SIGNIFICANT AT P LESS THAN 0.01

\*,D SIGNIFICANTLY DIFFERENT FROM CONTROL

I,D SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (READING OF COLUMN)

TABLE IV

COMPOUND 33  
STUDY SUBACUTE  
AVERAGE PREIMPLANTATION LOSSES PER PREGNANT FEMALE

LOG ABUTH DOSE	DOSE WEEK	NEGATIVE CONTROL	DOSE LEVEL 4,000 MG/KG	DOSE LEVEL 40,000 MG/KG	DOSE LEVEL 400,000 MG/KG
1		4/13= 0.3	0/13= 0.0 <sup>SD</sup>	9/12= 0.9	4/11= 0.4
2		4/14= 0.3	1/18= 0.1	8/17= 0.5	16/17= 0.9
3		0/12= 0.0	11/18= 0.6 <sup>SI</sup>	16/17= 0.9 <sup>SI</sup>	15/14= 1.1 <sup>SI</sup>
4		7/16= 0.4	1/19= 0.1	0/19= 0.0	5/19= 0.3
5		0/13= 0.0	23/17= 1.4 <sup>SI</sup>	1/17= 0.1	4/16= 0.2
5		14/18= 0.8	88/17= 5.2 <sup>**30I</sup> , 95/19= 2.4 <sup>**30I</sup>	33/19= 1.7 <sup>**30I</sup>	
7		11/19= 0.6	22/15= 1.5	28/14= 2.0 <sup>SI</sup>	27/16= 3.7

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

S AND \* = TWO-TAILED TEST

! AND 3 = ONE-TAILED TEST

ONE !,6,0,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,6,0,\* = SIGNIFICANT AT P LESS THAN 0.01

\*,3 SIGNIFICANTLY DIFFERENT FROM CONTROL

!,! SIGNIFICANT RELATIONSHIP WITH ABUTH OR LOG DOSE (HEADINGS OF COLUMNS)

TABLE 7

COMPOUND 33 STUDY SUBACUTE

## AVERAGE RESORPTIONS (DEAD IMPLANTS) PER PREGNANT FEMALE

LOG ARITH DOSE DOSE WEEK	NEGATIVE CONTROL	DOSE LEVEL 4.000 MG/KG	DOSE LEVEL 40.000 MG/KG	DOSE LEVEL 400.000 MG/KG
1	8/13=0.62	5/13=0.39	8/12=0.67	4/11=0.37
2	18/14=1.29	9/18=0.50	8/17=0.48	10/17=0.59
3	3/12=0.25	23/18=1.28	14/17=0.83 <sup>I</sup>	10/14=0.72 <sup>I</sup>
4	7/16=0.44	13/19=0.58	13/19=0.69	9/19=0.48
5	7/18=0.39	2/17=0.12	4/17=0.24	5/18=0.28
6	3/18=0.06	5/17=0.30 <sup>II</sup>	5/19=0.27	9/19=0.48
7	5/19=0.27	5/15=0.34	2/14=0.15	4/16=0.25

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

- & AND \* = TWO-TAILED TEST

I AND II = ONE-TAILED TEST

ONE 1,5,3,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO 4,8,6,\* = SIGNIFICANT AT P LESS THAN 0.01

\*,<sup>I</sup> SIGNIFICANTLY DIFFERENT FROM CONTROL

<sup>I,II</sup> SIGNIFICANT RELATIONSHIP WITH ARITH. OR LOG DOSE (HEADING OF COLUMNS)

TABLE VI  
COMPOUND 33 STUDY SUBACUTE

## PROPORTION OF FEMALES WITH ONE OR MORE DEAD IMPLANTATIONS

LOG ABIRTH DOSE WEEK	NEGATIVE CONTROL	DOSE LEVEL 4,000 MG/KG	DOSE LEVEL 40,000 MG/KG	DOSE LEVEL 400,000 MG/KG
1	7/13=0.54	5/13=0.39	7/12=0.59	3/11=0.28
2	7/14=0.50	8/18=0.45	5/17=0.30	6/17=0.36
3	2/12=0.17	6/18=0.34	8/17=0.48	7/14=0.50
4	6/16=0.38	6/19=0.32	8/19=0.43	7/19=0.37
5	5/18=0.28	2/17=0.12	3/17=0.18	4/18=0.23
6	1/18=0.06	5/17=0.30	4/19=0.22	1/19=0.06
7	3/19=0.16	3/15=0.20	2/14=0.15	3/16=0.19

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ABIRTH OR LOG DOSE (READING OF COLUMNS)

TABLE VII

## COMPOUND 33 STUDY SUBACUTE

PROPORTION OF FEMALES WITH TWO OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE WEEK	NEGATIVE CONTROL	DOSE LEVEL 4,000 MG/KG	DOSE LEVEL 40,000 MG/KG	DOSE LEVEL 400,000 MG/KG
1	1/13=0.08	0/13=0.0	1/12=0.09	1/11=0.10
2	4/14=0.29	1/18=0.06	1/17=0.06	4/17=0.24
3	1/12=0.09	3/18=0.17	3/17=0.18	3/14=0.22
4	1/16=0.07	2/19=0.11	4/19=0.22	1/19=0.06
5	2/18=0.12	0/17=0.0	1/17=0.06	1/18=0.06
6	0/18=0.0	0/17=0.0	1/19=0.06	1/19=0.06
7	2/19=0.11	1/15=0.07	0/14=0.0	1/16=0.07

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VIII  
COMPOUND 33 STUDY SUBACUTE

WEEK	DEAD IMPLANTS / TOTAL IMPLANTS			DOSE LEVEL 400.000 MG/KG
	NEGATIVE CONTROL	DOSE LEVEL 4.000 MG/KG	DOSE LEVEL 40.000 MG/KG	
1	8/167=0.05	5/163=0.04	8/138=0.06	4/140=0.03
2	18/190=0.10	9/224=0.05	8/217=0.04	10/205=0.05
3	3/139=0.03	23/205=0.12	14/180=0.08*#I	10/146=0.07#I
4	7/191=0.04	11/228=0.05	13/235=0.06	9/235=0.04
5	7/219=0.04	2/191=0.02	4/212=0.02	5/216=0.03
6	1/179=0.01	5/197=0.03	5/219=0.03	9/208=0.05
7	5/204=0.03	5/162=0.04	2/152=0.02	4/173=0.03

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT DIFFERENCES USING  
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT DIFFERENCES USING  
THE HISTORICAL CONTROL GROUP

\* = TWO-TAILED TEST

# = ONE-TAILED TEST

ONE \*,# = SIGNIFICANT AT P LESS THAN 0.05  
TWO \*,# = SIGNIFICANT AT P LESS THAN 0.01

\*,# SIGNIFICANTLY DIFFERENT FROM CONTROL

### 8. Dominant Lethal Study - Test II

Compound FDA 71-33, Stannous Chloride, was administered to ten male rats (350 grams) at a dose level of 1300 mg/kg according to an acute (single dose) protocol. Each treated male rat was mated with two virgin female rats each week for eight weeks. Two weeks after mating, female rats were sacrificed and the fertility index, preimplantation loss and lethal effects on the embryos were determined and compared with those same parameters calculated from negative (saline-dosed) and positive (0.3 mg/kg TEM-dosed) control animals.

The values calculated for those parameters from animals dosed with compound FDA 71-33, Stannous Chloride, did not significantly vary from those obtained from the negative controls; whereas, TEM caused a significant preimplantation loss and embryo resorption during the first five weeks. One exception to this is the dead implants per total implants which were significantly higher than the values for the negative controls. This value is an isolated case and would not appear to represent mutagenesis. It is certainly much less than the values obtained for positive controls when they were active.

Comparing these data with the previously obtained values for dose levels of 4.0 mg/kg, 40.0 mg/kg and 400.0 mg/kg revealed no dose-response or time-trend patterns, thus indicating that compound FDA 71-33, Stannous Chloride, does not induce dominant lethal mutations.



Dominant Lethal Assay Summary Sheets

Contract FDA 71-268

Compound FDA 71-33

Stannous Chloride

Test II

(Through error the computer had been programmed so that a double rounding off of numbers occurred at print out. In no way does this alter the statistics which are calculated on the full unrounded numbers.)



BIONETICS

TABLE I  
COMPOUND 33      STUDY ACUTE

FERTILITY INDEX

LOG DOSE	ARITH DOSE	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1300.0 MG/KG	POSITIVE CONTROL
1	198/295=0.67	16/ 20=0.80		8/ 18=0.44*	11/ 20=0.55
2	214/295=0.73	13/ 20=0.65		11/ 18=0.61	8/ 20=0.40**
3	222/294=0.76	15/ 20=0.75		12/ 18=0.67	13/ 20=0.65
4	249/296=0.84	16/ 20=0.80		16/ 18=0.89	11/ 20=0.55**
5	232/295=0.79	16/ 20=0.80		15/ 18=0.83	15/ 20=0.75
6	227/295=0.77	16/ 20=0.80		12/ 18=0.67	15/ 20=0.75
7	238/293=0.81	16/ 20=0.80		16/ 18=0.89	16/ 20=0.80
8	245/296=0.83	14/ 20=0.70		14/ 18=0.78	14/ 20=0.70

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,\* = SIGNIFICANT AT P LESS THAN 0.05  
TWO !,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE II  
COMPOUND 33 STUDY ACUTE

AVERAGE NUMBER OF IMPLANTATIONS PER PREGNANT FEMALE

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1300.0 MG/KG	POSITIVE CONTROL
1	2428/198=12.3	189/ 16=11.8		93/ 8=11.6	99/ 11= 9.0*** <sup>SD</sup> ** <sup>SD</sup>
2	2579/214=12.1	169/ 13=13.0		139/ 11=12.6	42/ 8= 5.3*** <sup>SD</sup> ** <sup>SD</sup>
3	2673/222=12.0	183/ 15=12.2		156/ 12=13.0	83/ 13= 6.4*** <sup>SD</sup> ** <sup>SD</sup>
4	2958/249=11.9	203/ 16=12.7		189/ 16=11.8	70/ 11= 6.4*** <sup>SD</sup> ** <sup>SD</sup>
5	2760/232=11.9	201/ 16=12.6		179/ 15=11.9	173/ 15=11.5
6	2728/227=12.0	177/ 16=11.1		132/ 12=11.0	188/ 15=12.5 <sup>I</sup>
7	2934/238=12.3	201/ 16=12.6		200/ 16=12.5	205/ 16=12.8
8	2940/245=12.0	178/ 14=12.7		181/ 14=12.9	181/ 14=12.9
					* <sup>I</sup>

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

S AND \* = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, @, \*, \* = SIGNIFICANT AT P LESS THAN 0.05

TWO !, @, \*, \* = SIGNIFICANT AT P LESS THAN 0.01

TABLE III  
COMPOUND 33      STUDY ACUTE

AVERAGE CORPORA LUTER PER PREGNANT FEMALE

LOG ARITH DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1300.0 MG/KG	POSITIVE CONTROL
1	2816/198=14.2	221/	16=13.8	97/	8=12.1 <sup>SD</sup>	135/ 11=12.3 <sup>SD</sup> <sup>**0.00</sup>
2	2987/214=14.0	195/	13=15.0	157/	11=14.3	86/ 8=10.8 <sup>**0.00</sup> <sup>**0.00</sup>
3	3034/222=13.7	216/	15=14.4	163/	12=13.6	166/ 13=12.8
4	3365/249=13.5	225/	16=14.1	229/	16=14.3	145/ 11=13.2
5	3131/232=13.5	241/	16=15.1	200/	15=13.3 <sup>SD</sup>	238/ 15=15.9 <sup>**0.01</sup>
6	3133/227=13.8	228/	16=14.3	154/	12=12.8	201/ 15=13.4
7	3224/238=13.5	230/	16=14.4	220/	16=13.8	241/ 16=15.1 <sup>*0.01</sup>
8	3438/245=14.0	221/	14=15.8	203/	14=14.5	207/ 14=14.8 <sup>0.01</sup>

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

6 AND + = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, @, \*, \* = SIGNIFICANT AT P LESS THAN 0.05

TWO !, @, \*, \* = SIGNIFICANT AT P LESS THAN 0.01

\*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

!, @ SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (READING OF COLUMN)

TABLE IV  
COMPOUND 33 STUDY ACUTE

AVERAGE PREIMPLANTATION LOSSES PER PREGNANT FEMALE

LOG ARITH DOSE	DOSE WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1300.0 MG/KG	POSITIVE CONTROL
1	388/198= 2.0	32/ 16= 2.0		4/ 8= 0.5* <sup>SD</sup> ** <sup>SD</sup>	36/ 11= 3.3 * <sup>SD</sup>
2	408/214= 1.9	26/ 13= 2.0		18/ 11= 1.6	44/ 8= 5.5** <sup>SD</sup> ** <sup>SD</sup>
3	361/222= 1.6	33/ 15= 2.2		7/ 12= 0.6* <sup>SD</sup> * <sup>SD</sup>	83/ 13= 6.4** <sup>SD</sup> ** <sup>SD</sup>
4	407/249= 1.6	22/ 16= 1.4		40/ 16= 2.5* <sup>I</sup> * <sup>I</sup>	75/ 11= 6.8** <sup>SD</sup> ** <sup>SD</sup>
5	371/232= 1.6	40/ 16= 2.5 ** <sup>SD</sup>		21/ 15= 1.4	65/ 15= 4.3 ** <sup>SD</sup>
6	405/227= 1.8	51/ 16= 3.2 * <sup>SD</sup>		22/ 12= 1.8	13/ 15= 0.9** <sup>SD</sup> * <sup>SD</sup>
7	290/238= 1.2	29/ 16= 1.8		20/ 16= 1.3	36/ 16= 2.3 * <sup>SD</sup>
8	498/245= 2.0	43/ 14= 3.1		22/ 14= 1.6	26/ 14= 1.9

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

S AND \* = TWO-TAILED TEST

I AND D = ONE-TAILED TEST

ONE I,S,D,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO I,S,D,\* = SIGNIFICANT AT P LESS THAN 0.01

\*,D SIGNIFICANTLY DIFFERENT FROM CONTROL

I,S SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (READING OF COLUMN)

TABLE VI  
COMPOUND 33      STUDY ACUTE

PROPORTION OF FEMALES WITH ONE OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1300.0 MG/KG	POSITIVE CONTROL
1	55/198=0.28	5/ 16=0.31	2/ 8=0.25	11/ 11=1.00** **
2	75/214=0.35	5/ 13=0.38	7/ 11=0.64	8/ 8=1.00** **
3	85/222=0.38	7/ 15=0.47	6/ 12=0.50	13/ 13=1.00** **
4	100/249=0.40	5/ 16=0.31	8/ 16=0.50	11/ 11=1.00** **
5	86/232=0.37	4/ 16=0.25	7/ 15=0.47	15/ 15=1.00** **
6	90/227=0.40	4/ 16=0.25	8/ 12=0.67*	9/ 15=0.60*
7	89/238=0.37	2/ 16=0.13*	6/ 16=0.38	7/ 16=0.44*
8	96/245=0.39	4/ 14=0.29	9/ 14=0.64	8/ 14=0.57

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE V  
COMPOUND 33      STUDY ACUTE

AVERAGE RESORPTIONS (DEAD IMPLANTS) PER PREGNANT FEMALE

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1300.0 MG/KG	POSITIVE CONTROL
	1	69/198=0.35	10/ 16=0.63	3/ 8=0.38	76/ 11=6.91**@AI **@AI
	2	110/214=0.51	9/ 13=0.69	10/ 11=0.91 @I	42/ 8=5.25**@AI **@AI
	3	132/222=0.59	9/ 15=0.60	9/ 12=0.75	80/ 13=6.15**@AI **@AI
	4	129/249=0.52	6/ 16=0.38	12/ 16=0.75	63/ 11=5.73**@AI **@AI
	5	138/232=0.59	6/ 16=0.38	10/ 15=0.67	60/ 15=4.00**@AI **@AI
	6	139/227=0.61	8/ 16=0.50	12/ 12=1.00@I	12/ 15=0.80
	7	131/238=0.55	2/ 16=0.13 **@AD	8/ 16=0.50@I	8/ 16=0.50@I
	8	140/245=0.57	4/ 14=0.29	9/ 14=0.64@I	15/ 14=1.07@I

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND \* = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, @, \* = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, @, \* = SIGNIFICANT AT P LESS THAN 0.01

\*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

!, @ SIGNIFICANT RELATIONSHIP WITH ARITHM OR LOG DOSE (HEADING OF COLUMN)

TABLE VII  
COMPOUND 33      STUDY ACUTE

PROPORTION OF FEMALES WITH TWO OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1300.0 MG/KG	POSITIVE CONTROL
1	9/198=0.05	1	1/ 16=0.06	1/ 8=0.13	11/ 11=1.00**	**
2	27/214=0.13	1	1/ 13=0.08	3/ 11=0.27	8/ 8=1.00**	**
3	35/222=0.16	1	1/ 15=0.07	3/ 12=0.25	13/ 13=1.00**	**
4	23/249=0.09	1	1/ 16=0.06	3/ 16=0.19	10/ 11=0.91**	**
5	35/232=0.15	2	2/ 16=0.13	3/ 15=0.20	13/ 15=0.87**	**
6	35/227=0.15	1	1/ 16=0.06	3/ 12=0.25	3/ 15=0.20	
7	29/238=0.12	0	0/ 16=0.0	2/ 16=0.13	1/ 16=0.06	
8	30/245=0.12	0	0/ 14=0.0	0/ 14=0.0	5/ 14=0.36*	*

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE 1,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO 1,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VIII  
COMPOUND 33 STUDY ACUTE

DEAD IMPLANTS / TOTAL IMPLANTS

WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1300.0 MG/KG	POSITIVE CONTROL
1	69/2428=0.03	10/189=0.05	3/ 93=0.03	76/ 99=0.77** <del>AI</del> ** <del>AI</del>
2	110/2579=0.04	9/169=0.05	10/139=0.07	42/ 42=1.00** <del>AI</del> ** <del>AI</del>
3	132/2673=0.05	9/183=0.05	9/156=0.06	80/ 83=0.96** <del>AI</del> ** <del>AI</del>
4	129/2958=0.04	6/203=0.03	12/189=0.06	63/ 70=0.90** <del>AI</del> ** <del>AI</del>
5	138/2760=0.05	6/201=0.03 <del>AD</del>	10/179=0.06	60/173=0.35** <del>AI</del> ** <del>AI</del>
6	139/2728=0.05	8/177=0.05	12/132=0.09 <del>AI</del> <del>AI</del>	12/188=0.06
7	131/2934=0.04	2/201=0.01 ** <del>AD</del>	8/200=0.04 <del>AI</del>	8/205=0.04 <del>AI</del>
8	140/2940=0.05	4/178=0.02 <del>AD</del>	9/181=0.05 <del>AI</del>	15/181=0.08* <del>AI</del>

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT DIFFERENCES USING THE HISTORICAL CONTROL GROUP

\* = TWO-TAILED TEST

◊ = ONE-TAILED TEST

ONE \*,◊ = SIGNIFICANT AT P LESS THAN 0.05

TWO \*,◊ = SIGNIFICANT AT P LESS THAN 0.01

## APPENDICES

### II. MATERIALS AND METHODS

#### A. Animal Husbandry

##### 1. Animals (Rats and Mice)

Ten to twelve week old rats (280 to 350 g) and male mice (25 to 30 g) were fed a commercial 4% fat diet and water ad libitum until they were put on experiment. Flow Laboratories random-bred, closed colony, Sprague-Dawley CD strain rats were used in the cytogenetic studies. Flow Laboratories ICR male mice were employed in the Host-Mediated Assay.

##### 2. Preparation of Diet

A commercial 4% fat diet was fed to all animals. Periodic tests to verify the absence of coliforms, Salmonella and Pseudomonas sp. were performed.

##### 3. Husbandry

Animals were held in quarantine for 4-11 days. Mice were housed five to a cage and rats one to five to a cage. Animals were identified by ear punch. Sanitary cages and bedding were used, and changed two times per week, at which time water containers were cleaned, sanitized and filled. Once a week, cages were repositioned on racks; racks were re-positioned within rooms monthly. Personnel handling animals or working within animal facilities wore head coverings and face masks, as well as suitable garments. Individuals with respiratory or other overt infections were excluded from the animal facilities.

#### B. Dosage Determination

##### 1. Acute LD<sub>50</sub> and LD<sub>5</sub> Determination

Since the compounds proposed for testing are included in



**BIOMETRICS**

the food additive regulations as "generally recognized as safe" (GRAS), it was expected that a large number of them would be sufficiently non-toxic so that determination of a LD<sub>50</sub> or a LD<sub>5</sub> would be of no practical value. In fact, this has been our experience with previously tested compounds from this list. In the case of these relatively non-toxic compounds, attempts were made to assure that the amounts to be administered would not affect the animals by means (mechanical, physical, etc.) related to their bulk rather than to their toxicity. In the cases of certain compounds where a LD<sub>50</sub> or a LD<sub>5</sub> could not be determined, an exceedingly high concentration, 5 g/kg, was employed and accepted as the LD<sub>5</sub> level. In cases where the toxicity was high enough to allow determination of a LD<sub>5</sub>, the following protocol was used.

Thirty rats of the strain chosen for studies described below and of approximately the age and weight specified were assigned at random to six groups. Each group was then given, using the chosen route of administration, one of a series of dosages of the test compound following a logarithmic dosage scheme. The series of dosages were derived from a consideration of whatever toxicity information was available for the particular test compound. The objective in selecting dosages was to choose values which would cause mortalities between 10% and 90%.

When information was inadequate to derive a suitable series of dosages, five rats were used to identify the proper range. Each of these was given one of a widely spaced (differing by 10X) series of doses. This was confidently expected to suffice for derivation of the series of dosages to be used in the LD<sub>50</sub> determination.



**BIONETICS**

The mortalities observed when the series of dosages were given to the 30 rats were then subjected to a probit analysis and calculation of LD<sub>50</sub>, LD<sub>5</sub>, slope and confidence limits by the method of Litchfield and Wilcoxon. The highest dose level used was either a finite LD<sub>5</sub> or 5000 mg/kg. The intermediate level used was either 1/10 of the finite LD<sub>5</sub> or 2500 mg/kg. The low level used was either 1/100 of the finite LD<sub>5</sub> or 30 mg/kg.

## 2. Subacute Studies

Subacute doses were identical to those used in the acute studies. Each subacute study animal was given the acute dosage once a day for each of five consecutive days (24 hours apart).

## C. Mutagenicity Testing Protocols

### 1. Host-Mediated Assay

Flow Laboratories ICR random-bred male mice were used in this study. In the acute and subacute studies ten animals, 25-30 g each, were employed at each dose level. Solvent and positive controls were run at all times. The positive control (dimethyl nitrosamine) was run by the acute system only at a dose of 100 mg/kg for Salmonella. For yeast, ethyl methane sulfonate (EMS) intramuscularly injected at a dose of 350 mg/kg was used. The solvents used and the toxicity data are presented in the Results and Discussion Section of the report.

The indicator organisms used in this study were: (1) two histidine auxotrophs (his G-46, TA-1530) of Salmonella typhimurium, and (2) a diploid strain (D-3) of Saccharomyces cerevisiae. The induction of reverse mutation was determined with the Salmonella; mitotic recombination was determined with yeast. Chemicals were evaluated directly by in vitro bacterial and yeast studies prior to, or concurrent with, the studies in



**BIONETICS**

mice. Only animals on the subacute studies were not fed the evening prior to compound administration. The Salmonella were carried in tryptone yeast extract gel, transferred weekly. They were transferred to tryptone yeast extract broth 48 hours before use; they were transferred a second time from broth to broth 24 hours prior to use, and again 8 hours before use. The mouse inoculum was prepared by transferring 4 ml of the 8-hour broth culture to 50 ml broth bottles which had been prewarmed at 37°C. Exponential log-phase organisms were inoculated intraperitoneally into the mice approximately 2-1/2 hours later when the appropriate density indicating  $3.0 \times 10^8$  cells/ml was reached. The Saccharomyces was carried in yeast complete agar. The inoculum was prepared by harvesting the organisms from the surface of the plates with sterile saline. The cells were washed three times with sterile saline and suspended in a concentration of  $5.0 \times 10^8$  cells/ml. Two ml of the suspension was inoculated into each mouse intraperitoneally. Total plate counts on Salmonella were on tryptone yeast extract and for Saccharomyces on yeast complete medium.

a. Acute study

Three dosage levels (usage, intermediate [determined as discussed previously], and LD<sub>50</sub>) were administered orally by intubation to ten mice. Positive controls and negative vehicle controls were included in each study. All animals received 2 ml of the indicator organism intraperitoneally. Each ml contained  $3.0 \times 10^8$  cells for Salmonella and  $5.0 \times 10^8$  cells for Saccharomyces. Three hours later, each animal was killed and 2 ml of sterile saline was introduced intraperitoneally. As much fluid as possible was then aseptically removed from the peritoneal cavity. Dilution blanks for bacteria containing 4.5 ml of sterile saline were prepared in advance. Tenfold serial



BIONETICS

dilutions were made of each peritoneal exudate (0.5 ml exudate + 4.5 ml saline) yielding a concentration series from  $10^0$  (undiluted peritoneal exudate) through  $10^{-7}$ . For enumeration of total bacterial counts, the  $10^{-6}$  and  $10^{-7}$  dilutions were plated on tryptone yeast extract agar, 3 plates/sample, 0.2 ml sample/plate. Each sample was spread over the surface of the plate using a bent glass rod immersed in 95% ethanol and flamed just prior to use. In plating for the total mutant counts on minimal agar, the  $10^0$  dilution was used, 0.2 ml being plated on each of 5 plates. The plating procedure was identical to that followed for the tryptone yeast extract agar plates. All plates were incubated at  $37^\circ\text{C}$ , tryptone yeast extract agar plates for 18 hours and minimal agar plates for 40 hours. For yeast mitotic recombination, dilution blanks containing 4.5 ml of sterile saline were prepared in advance. Tenfold serial dilutions were made of each sample yielding a series from  $10^0$  to  $10^{-5}$ . Samples of 0.1 ml of the  $10^{-5}$ ,  $10^{-4}$ , and  $10^{-3}$  dilutions were removed and plated on complete medium (10 plates each). All plates were incubated at  $30^\circ\text{C}$  for 40 hours. The  $10^{-5}$  dilutions were used to determine total populations and the  $10^{-4}$  and  $10^{-3}$  plates were examined after an additional 40 hours at  $4^\circ\text{C}$  for red sectors indicating a mutation. Bacterial scoring was calculated as follows:

Total mutants on 5 plates x appropriate exponent =  
CFU/ml (CFU is Colony Forming Units) of sample plated CFU/ml x one/dilution  
factor ( $10^0 - 10^{-7}$ ) = CFU/ml in undiluted exudate. The mutation frequency (MF)  
calculated for each sample was:

$$MF = \frac{\text{total mutant cells}}{\text{total population}}$$

$$MF_t/MF_c = \frac{MF \text{ of experimental sample}}{MF \text{ of control sample}}$$

( $MF_t/MF_c = 1.00$  for  
control sample)



**BIONETICS**

Yeast mitotic recombinants (presumptive ade 2, his 8 homozygotes) were seen as red colonies or as red sectors on a normally white yeast colony. The plates (from  $10^{-4}$  and  $10^{-3}$  dilutions) were scanned under the 10X lens of a dissecting scope to enumerate the red colonies and sectors. Population determinations were made from the  $10^{-5}$  dilution plates. A recombinant frequency (RF) was calculated:

$$RF = \frac{\text{total recombinants counted}}{\text{total number colonies screened}}$$

b. Subacute study

Similar groups of animals at each dose level received five oral doses of the test compound 24 hours apart. Within 30 minutes after the last dosing, the animals were inoculated with the test organism and handled in the same fashion as those in the acute study.

c. In vitro study

Cultures of S. typhimurium histidine auxotrophs (G-46 and TA-1530) were plated on appropriate media. The test compound was then added to the plate, either in the form of a microdrop of solution (0.01 to 0.25 ml) applied to a small filter paper disc resting on the agar or a small crystal applied directly to the agar. Tenfold serial dilutions of the culture were employed and plated so as not to miss the optimum cell density for mutant growth. Mutant colonies were observed and scored. Strain D-3 Saccharomyces cells at proper dilutions were shaken with the test compound, diluted, and plated at 50% survival level or above (see HMA Supplementary Materials and Methods). Red sectors were then scored and the frequency calculated after suitable incubation. Negative and positive controls were run concurrently. The positive control was EMS for Salmonella and Saccharomyces. The In vitro Salmonella tests were reported



BIONETICS

as (+) or (-) or questionable; the in vitro Saccharomyces tests were reported as sample concentrations, percent survival, and recombinants/ $10^5$  survivors. For the Saccharomyces a 50% survival level, e.g., an arbitrary 5.0% w/v test level, was used when no LD<sub>50</sub> was determinable.

## 2. Cytogenetic Studies

### a. In vivo study

Ten to twelve week old, male, albino rats obtained from a closed colony (random-bred) were used. A total of 59 animals in the acute study and 18 animals in the subacute study was used, as illustrated in the following protocol.

#### Number of Animals Used

##### Acute Study

Treatment	Time Killed After Administration		
	6 Hours	24 Hours	48 Hours
High Level	5	5	5
Intermediate Level	5	5	5
Low Level	5	5	5
Positive Control	0	0	5
Negative Control	3	3	3

##### Subacute Study

Five doses 24 hours apart; animals killed 6 hours after last dose.

Treatment	Killed After Administration
High Level	5
Intermediate Level	5
Low Level	5
Negative Control	3

All animals were dosed by gastric intubation.

Four hours after the last compound administration, and two hours prior to killing, each animal was given 4 mg/kg of colcemid intra-



BIONETICS

peritoneally in order to arrest the bone marrow cells in G-mitosis. Animals were killed by using CO<sub>2</sub>, and the adhering muscle and epiphysis of one femur were removed. The marrow "plug" was removed with a tuberculin syringe and an 18 gauge needle, aspirated into 5 ml of Hanks' balanced salt solution (BSS) in a test tube and capped. The specimens were centrifuged at 1,500 RPM in a table-top centrifuge for 5 minutes, decanted, and 2 ml of hypotonic 0.5% KCl solution was added with gentle agitation to resuspended the cells. The specimens were then placed in a 37°C water bath for 20 minutes in order to swell the cells. Following centrifugation for 5 minutes at 1,500 RPM, the supernatant was decanted and 2 ml of fixative (3:1 absolute methanol:glacial acetic acid) was added. The cells were resuspended in the fixative with gentle agitation, capped, and placed at 4°C for 30 minutes. The specimens were again centrifuged, decanted, 2 ml of prepared fixative was added, and the cells were resuspended and placed at 4°C overnight.

The following day the specimens were again centrifuged, decanted and 0.3 - 0.6 ml of freshly prepared fixative was added to obtain a suitable density. The cells were resuspended and 2 + 3 drops of the suspension were allowed to drop onto a clean, dry slide held at 15° from the horizontal. As the suspension flowed to the edge of the slide, it was ignited by an alcohol burner and allowed to flame. Following ignition, the slides were allowed to dry at room temperature overnight. Duplicate slides were prepared. The slides were stained using a 5% Giemsa solution (Giemsa buffer pH 7.2) for 20 minutes, rinsed in acetone, 1:1 acetone:xylene, and placed in fresh xylene for 30 minutes. The slides were then mounted using Permount (Fisher Scientific) and 24 x 50 mm coverglasses. The coverglasses were selected to be 0.17 mm ± 0.005 mm in thickness by use of a coverglass micrometer. The preparations



BIONETICS

were examined using Leitz Ortholux I & II microscopes with brightfield optics and xenon light sources. These specimens were scanned with 10X and 24X objectives and suitable metaphase spreads that were countable were then examined critically using 40X, 63X or 100X oil immersion flatfield apochromatic objectives. Oculars were either 12X or 16X widefield periplanatics and the tube magnification either 1X or 1.25X. The filters used were either a didymium (BG20) or a Schott IL570  $\mu$ m interference filter.

The chromosomes of each cell were counted and only diploid cells were analyzed. They were scored for chromatid gaps and breaks, chromosome gaps and breaks, reunions, cells with greater than ten aberrations, polyploidy, pulverization, and any other chromosomal aberrations which were observed. They were recorded on the currently used forms and expressed as percentages on the summary sheets. Fifty metaphase spreads were scored per animal. Mitotic indices were obtained by counting at least 500 cells and the ratio of the number of cells in mitosis/the number of cells observed was expressed as the mitotic index.

Positive controls in the acute study consisted of animals which had been given the known mutagen Triethylene Melamine (TEM) administered intraperitoneally at a level of 0.30 mg/kg. Negative controls on the acute and subacute studies consisted of the vehicle in which the compound was administered. The dosage levels, solvents and toxicity data are included in the Results and Discussion Section of the report.

b. In vitro study

Human embryonic lung cultures (WI-38) which were negative for adventitious agents (viruses, mycoplasma) which may interfere



**BIONETICS**

were used. These cells were employed at passage level 19. The cells had been transferred using 0.025% trypsin and planted in 32 oz. prescription bottles containing 40 ml of tissue culture medium. When growth was approximately 95% confluent the cells were removed from the glass using trypsin, centrifuged, and frozen in tissue culture medium containing dimethyl sulfoxide (DMSO). Cells were frozen in vials in the vapor phase of liquid nitrogen at a concentration of  $2 \times 10^6$  cells/ml. When needed, the vials were removed from liquid nitrogen, quick-thawed in a 37°C water bath, washed free of DMSO, suspended in tissue culture medium (minimal essential medium [MEM] plus 1% glutamine, 200 units/ml of penicillin and 200 µg/ml of streptomycin and 15% fetal calf serum) and planted in milk dilution bottles at a concentration of  $5 \times 10^5$  cells/ml. The test compound was added at three dose levels using three bottles for each level, 24 hours after planting. The dose levels required a preliminary determination of a tissue culture toxicity. This was accomplished by adding logarithmic doses of the compound in saline to a series of tubes containing  $5 \times 10^5$  cells/ml which were almost confluent. The cells were examined at 24, 48, and 72 hours. Any cytopathic effect (CPE) or inhibition of mitoses was scored as toxicity. Five more closely spaced dose levels were employed within the two logarithmic dosages, the higher of which showed toxicity and the lower no effect. The solvents used and the range finding data are presented in the toxicity data report under Results and Discussion. The dose level below the lowest toxic level was employed as the high level. Logarithmic dose levels were employed for the medium and low levels.

Cells were incubated at 37°C and examined twice daily to determine when an adequate number of mitoses were present. Cells were harvested by shaking when sufficient mitoses were observed, usually 24 - 48



BIOMETRICS

hours after planting, centrifuged, and fixed in absolute methanol:glacial acetic acid (3:1) for 30 minutes.

The specimens were centrifuged, decanted, and suspended in acetic acid-orcein stain (2.0%) and a drop of suspension placed on a clean dry slide. Selected coverglasses 0.17 mm in thickness were placed on the suspension and the excess stain gently expressed from the slide. The coverglasses were sealed with clear nail polish and examined immediately.

The microscopes, objectives, oculars, filters and light sources were enumerated under the metaphase description. Positive controls used were TEM (at a concentration of 0.1 mcg/ml dissolved in saline) and negative controls which consisted of the vehicle in which the test compound was dissolved, which was 0.85% saline. Data were reported on forms currently used and expressed as percentages on the anaphase summary sheets.

### 3. Dominant Lethal Assay

In this test, male and female random bred rats from a closed colony were employed. These animals were 10-12 weeks old at the time of use. Ten male rats were assigned to each of 5 groups; 3 dose levels selected as described above, a positive control (triethylene melamine) (TEM) and a negative control (solvent only). The positive control was administered intraperitoneally. Administration of the test compound was orally by intubation in both the acute study (1 dose) and in the subacute study (1 dose per day for 5 days). Following treatment, the males were sequentially mated to 2 females per week for 8 weeks (7 weeks in the subacute study). Two virgin female rats were housed with a male for 5 days (Monday through Friday). These two females were removed and housed in a cage until killed. The male was rested on Saturday and Sunday and two new females introduced to the cage on



Monday. It has been our experience that conception has taken place in more than 90% of the females by Friday and that the two day rest is beneficial to the male as regards subsequent weekly matings. Females were killed using CO<sub>2</sub> at 14 days after separating from the male, and at necropsy the uterus was examined for deciduomata (early deaths), late fetal deaths and total implantations.

Sufficient animals were provided in our experimental design to accommodate for any reduction in the number of conceptions. Each male was mated with two females per week, and this provided for an adequate number of implantations per group per week (200 minimum) for negative controls, even if there was a fourfold reduction in fertility of implantations. Results were analyzed according to the statistical procedures described in Supplementary Materials and Methods. Corpora lutea, early fetal deaths, late fetal deaths and total implantations per uterine horn were recorded on the raw data sheets, which are submitted separately.

#### D. Supplementary Materials and Methods

##### 1. Host-Mediated Assay In Vitro and Formulae

###### a. Bacterial in vitro plate tests

This method has been published by Ames: The Detection of Chemical Mutagens with Enteric Bacteria, in Chemical Mutagens; Principles and Methods for Their Detection, Vol. 1, Chapter 9, pp. 267-282, A. Hollaender, Editor, Plenum Press, New York (1971).

###### b. In vitro for mitotic recombination

(1) Strain D-3 was grown to stationary phase on complete medium agar plates at 30°C (3-4 days). Cells were rinsed from the plates and washed twice in saline and cell concentration determined spectro-



**BIOMETRICS**

photometrically. (A standard curve previously determined for colony forming units versus % transmittance at 545  $\mu$ m was easily used.)

(2) Cells from the concentration suspension were diluted appropriately into 0.067 M Phosphate buffer pH 7.2 to provide  $5 \times 10^7$  cells/ml in a total of 25 ml.

(3) The test chemical was first tested for 4 hours at 30°C, with shaking, at concentrations which permitted determination of the 50% survival level. Then, if not included in the first experiment, the compound was tested again only at the 50% survival level. If 50% survival level could not be determined, the arbitrary test level of 5% w/v was used.

(4) Following treatment, cells were diluted and plated on complete agar medium for determination of total population and red sectors. Total surviving population was conveniently measured on plates of  $10^{-4}$  and  $10^{-5}$  dilutions using 0.2 ml per plate (5 plates), and sectors determined on plates of  $10^{-3}$  and  $10^{-4}$  dilutions using 0.2 ml per plate (5 plates). Plates were incubated for 2 days at 30°C followed by a holding period of 2 days at 4°C to promote color development with limited enlargement of the colonies. Red sectors were scored by systematically scanning the plates with a dissecting microscope at 10X magnification.

(5) The frequency of red sectors can then be calculated and may be expressed conveniently as sectors per  $10^5$  survivors for comparison with untreated controls.

(6) Ethyl Methane Sulfonate (EMS) was employed as the positive control in both in vitro systems.

c. Minimal medium (bacteria):

Spizizen's Minimal Medium:



BIOMETRICS

4X Salt Solution:

(NH <sub>4</sub> ) <sub>2</sub> SO <sub>4</sub>	8.0 gm
K <sub>2</sub> HPO <sub>4</sub>	56.0 gm
KH <sub>2</sub> PO <sub>4</sub>	24.0 gm
Na Citrate	4.0 gm
Mg SO <sub>4</sub>	0.8 gm
Biotin	0.004 gm
H <sub>2</sub> O	qs to 1 liter Sterilize by autoclaving (121°C/15 min.)

Medium:

4X Salt Solution	:250 ml
5.0% Glucose (sterile)	:100 ml (If histidine is added at concentration of 30 mg/liter, this becomes a complete bacterial medium.)
1.5% Bacto-agar (sterile)	:650 ml

d. Complete medium (bacteria):

Bacto-Tryptone	1.0 gm
Yeast-Extract	0.5 gm
Bacto-Agar	2.0 gm
Distilled H <sub>2</sub> O	100.0 ml

Sterilize by autoclaving (121°C for 15 minutes).

e. Complete medium (yeast):

KH <sub>2</sub> PO <sub>4</sub>	1.5 gm
MgSO <sub>4</sub>	0.5 gm
(NH <sub>4</sub> ) <sub>2</sub> SO <sub>4</sub>	4.5 gm



**BIOMETRICS**

Peptone	3.5 gm
Yeast-Extract	5.0 gm
Glucose	20.0 gm
Agar	20.0 gm
Distilled H <sub>2</sub> O	1000.0 ml

Sterilize by autoclaving (121°C for 15 minutes).

2. **Cytogenetics In Vitro Preparation of Anaphase Chromosomes**  
 (from Nichols, 1970)

"Anaphase preparations may be made by several methods. One convenient approach is to grow cells directly on coverslips in petri dishes. With human fibroblasts 400,000 cells added to a 22 x 44 mm coverslip in a 50 mm petri dish grown in a 5% CO<sub>2</sub> atmosphere in air has proved very satisfactory. When adequate numbers of mitoses are visualized directly utilizing an inverted microscope (usually 48 to 92 hours after planting) the coverslip is transferred to absolute ethanol for 15 minutes for fixation. They are then stained with any one of a number of suitable stains (Fuclgen, May-Grunwald-Giemsa, orcein) and attached to a slide with mounting media for evaluation. Anaphase preparations may also be prepared on cells grown in suspension or cells from a monolayer that have been put into suspension. In this instance the cells are centrifuged and fixed with the squash fixative. They are then suspended in the stain and a drop of the suspension put on the slide and covered with a coverslip. However, in this case, only the excess stain is gently expressed from under the coverslip and no squashing is carried out. In anaphase preparations no pretreatment with colchicine or hypotonic expansion is used and no technique for spreading the cells is used, so that the spindle and normal relationships of the chromosomes are not disturbed."



### 3. Statistical Analyses of Dominant Lethal Studies

The following statistical analyses were employed as a means of analyzing the results of the dominant lethal studies.

#### a. The fertility index

The number of pregnant females/number of mated females with the chi-square was used to compare each treatment to the control. Armitage's trend was used for linear proportions to test whether the fertility index was linearly related to arithmetic or log dose.

#### b. Total number of implantations

The t-test was used to determine significant differences between average number of implantations per pregnant female for each treatment compared to the control. Regression techniques were used to determine whether the average number of implantations per female was related to the arithmetic or log dose.

#### c. Total number of corpora lutea

The t-test was used to determine significant differences between average number of corpora lutea per pregnant female for each treatment compared to the control.

#### d. Preimplantation losses

Preimplantation losses were computed for each female by subtracting the number of implantations from the number of corpora lutea. Freeman-Tukey transformation was used on the preimplantation losses for each female and then the t-test was used to compare each treatment to control. Regression technique was used to determine whether the average number of preimplantation losses per female was related to the arithmetic or log dose.



a. Dead implants

Dead implants were treated the same as pre-implantation losses.

f. One or more dead implants

The proportion of females with one or more dead implants was computed, each treatment compared to control by chi-square test and Armitage's trend used for linear proportions to see if proportions were linearly related to either arithmetic or log dose. Also, probit regression analysis was used to determine whether the probit of the proportions was related to log dose.

g. Two or more dead implants

The proportion of females with two or more dead implants computed was treated same as above (f).

h. Dead implants per total implants

Dead implants per total implants were computed for each female and used Freeman-Tukey arc-sine transformation on data for each female; then used t-test to compare each treatment to control.

Historical control data was compiled on a continuous basis as studies were completed. In addition to comparing each treatment to control, as outlined above, each treatment was compared to a historical control.

In order to take variation between males into account, a nested model was used. An analysis of across weeks is also provided.

In addition to these tests, the distribution forms of the various parameters were tested in order to evaluate the appropriateness of some of the tests being used. Certain correlations between parameters may exist and were examined as one step to determine the appropriateness of models. If necessary, alternate test methods were implemented.



The results are presented in tabular form with the addition of historical control information. In addition to these tables, a written report of all findings is provided. As information became available from the on-going investigation of these data, it was reported and suggestions included for changes to the methods of analysis. The statistical reports give the level of significance using both a one-tailed and two-tailed test. Finally, a summary sheet for each study is provided.



MODEL

$$y_{ijk} = \mu + \alpha_i + \beta_{ij} + \epsilon_{ijk},$$

$i = 1, 2$  Group       $j = 1, 2, \dots, 10$  Males within each group

$k = 1, 2$  Females within Males within Groups

ASSUMPTIONS:

$$\alpha_1 + \alpha_2 = 0, \quad \epsilon_{ijk} \sim \text{nid}(0, \sigma^2),$$

$$\epsilon_{ijk} \sim \text{nid}(0, \sigma^2)$$

Males are randomly drawn from infinite population

S.U.	d.f.	S.S.	M.S.	E(M.S.)	F
TOTAL	39	$\sum \sum (y_{ijk} - \bar{y}_{...})^2$			
GROUPS	1	$20 \sum (\bar{y}_{..} - \bar{y}_{...})^2$	$S_1^2$	$6^2 + 20\alpha_1^2 + 20\alpha_2^2$	
MALES WITHIN GROUPS	18	$2 \sum (\bar{y}_{ij} - \bar{y}_{...})^2$	$S_2^2$	$\sigma^2 + 2\alpha_1^2$	
INDIVIDUAL	20	$\sum (y_{ijk} - \bar{y}_{ij})^2$	$S_3^2$	$\sigma^2$	

E. References

1. Host-Mediated Assay
  - a. Gabridge, M.G., Denunzio, A. and Legator, M.S.: *Nature*, 221:68, 1969.
  - b. Gabridge, M.G., Denunzio, A. and Legator, M.S.: *Science*, 163:689, 1969.
  - c. Gabridge, M.G. and Legator, M.S.: *Proc. Soc. Exptl. Biol. Med.*, 130:831, 1969.
  - d. Gabridge, M.G., Oswald, E.J. and Legator, M.S.: *Nut. Res.*, 7:117, 1969.
  - e. Legator, M.S. and Malling, H.V.: In, Environmental Chemical Mutagens, A. Hollaender (Ed.), Plenum Publishing Corp., New York, in press.
2. Cytogenetics
  - a. Nichols, V.W.: Personal communication.
  - b. Legator, M.S.: In, Laboratory Diagnosis of Diseases Caused by Toxic Agents, F. W. Sunderman and F. W. Sunderman (Ed.), Warren H. Green, Inc., St. Louis, pp. 17-22, 1970.
  - c. Hsu, T.C. and Patton, J.L.: Technical Addendum in, Comparative Mammalian Cytogenetics, K. Benirschke (Ed.), Springer-Verlag, New York, pp. 454-460, 1969.
  - d. Legator, M.S. et al.: Cytogenetic studies in rats of cyclohexylamine, a metabolite of cyclamate. *Science*, 165:1139, 1969.



BIONETICS

3. Dominant Lethal

- a. Bateman, A.J.: *Genet. Res. Camb.*, 1:381, 1960.
- b. Bateman, A.J.: *Nature*, 210:205, 1966.
- c. Ehling, U.H., Cumming, R.B. and Malling, H.V.:  
*Mut. Res.*, 5:417, 1968.
- d. Epstein, S.S. and Shafner, H.: *Nature*, 219:  
385, 1968.



**F. Abbreviations**

1.  $\mu$  = micron
2. mcg = ug = microgram
3. g = gram
4. kg = kilogram
5. ml = milliliter
6. rpm = revolutions per minute
7. °C = degrees centigrade
8. pH = power of the hydrogen ion concentration to the base 10
9. M = molar solution
10. conc. = concentration
11. MTD = maximum tolerated dosage = High = LD<sub>5</sub> if determined or else exceedingly high dose, such as 5 g/kg
12. INT = intermediate = medium level
13. USE = usage level if known = low level
14. BSS = balanced salt solution
15. C-metaphase = cells arrested in metaphase, using colchicine or colcemid
16. LD<sub>50</sub> = that dosage which produced 50% mortality in the group of animals treated
17. LD<sub>5</sub> = that dosage which produced 5% mortality in the group of animals treated
18. NC = negative control
19. PC = positive control
20. AU = acute usage level (low level)
21. AI = acute intermediate level (medium level)
22. AMTD = acute maximum tolerated dose level (LD<sub>5</sub> level, high level)



23. SAU = subacute usage level (low level)
24. SAI = subacute intermediate level (medium level)
25. SA LD<sub>5</sub> = subacute LD<sub>5</sub> level (MTD level, high level)
26. CO<sub>2</sub> = carbon dioxide
27. DMN = Dimethyl nitrosamine
28. EMS = Ethyl methane sulfonate
29. TEM = Triethylene melamine
30. DMSO = Dimethyl sulfoxide
31. MEM = minimal essential medium (Eagle's)
32. CPE = cytopathic effect
33. his = histidine marker
34. D-3 = mitotic recombinant strain of Saccharomyces
35. mf = mean mutant frequency
36. MFt/MFc = mean mutant frequency of the test compound group compared to mean mutant frequency of the negative control group
37. CFU = colony forming units
38. WI-38 = code name for a strain of human embryonic lung tissue culture cells
39. Rec x 10<sup>5</sup> = mitotic recombinants x 10<sup>5</sup>
40. Mean B/A = mean frequency
41. tot. scr. = total scored
42. tot. = total
43.  $\chi^2$  = a test of variation in the data from the computed regression line - tested in these studies at the 5% level
44. Aber. = aberrations
45. Frag. = fragment
46. HMA = host-mediated assay

