



Litton

BIONETICS

E30

SUMMARY OF MUTAGENICITY
SCREENING STUDIES
HOST-MEDIATED ASSAY
CYTOGENETICS
DOMINANT LETHAL ASSAY
CONTRACT FDA 71-268
COMPOUND FDA 71-55
TARTARIC ACID

Summary of mutagenicity screening studies, host-mediated assay cytogenetics dominant lethal assay-Contract FDA 71-268 & Compound FDA 71-55 Tartaric Acid 1/13/75

5516 Nicholson Lane
Kensington, Maryland
20795

LBI PROJECT #1146

~~F30~~
~~F30~~

SUMMARY OF MUTAGENICITY
SCREENING STUDIES
HOST-MEDIATED ASSAY
CYTOGENETICS
DOMINANT LETHAL ASSAY
CONTRACT FDA 71-268
COMPOUND FDA 71-55
TARTARIC ACID

SUBMITTED TO

FOOD & DRUG ADMINISTRATION
DEPARTMENT OF HEALTH, EDUCATION AND WELFARE
ROCKVILLE, MARYLAND

SUBMITTED BY

LITTON BIONETICS, INC.
5516 NICHOLSON LANE
KENSINGTON, MARYLAND

JANUARY 13, 1975



BIONETICS



BIONETICS

5516 Nicholson Lane, Kensington, Maryland 20795 301 881-5600

January 13, 1975

Mr. Leonard Appleby, Contracting Officer
Department of Health, Education and Welfare
Food and Drug Administration, CA-212
5600 Fishers Lane, Room 5C-13
Rockville, Maryland 20852

Reference: Contract FDA 71-268; LBI Project #2446

Dear Mr. Appleby:

Litton Bionetics, Inc., is pleased to submit a report for the referenced contract entitled "Mutagenicity Screening Studies" for compound FDA 71-55, Tartaric Acid.

Included in this report are the results and raw data of the three tests conducted: Host-Mediated Assay, Cytogenetic Studies and Dominant Lethal Assay. Eight (8) copies are being submitted for your review.

Upon completion of the toxicology work an evaluation was made of our results to those appearing in the literature. In cases where our values were lower, the toxicology was repeated. In some instances either the Host-Mediated Assay, Dominant Lethal Assay and/or Cytogenetic Studies were also repeated at one or more levels to fulfill the requirements of the contract. In some cases, the acute and/or subacute assays were involved.

If there are any questions concerning this report, or, if additional information is required, please do not hesitate to contact us.

Sincerely,

LITTON BIONETICS, INC.

Robert J. Weir, Ph.D.
Vice President

RJW:lls
Enclosures (8)

TABLE OF CONTENTS

	Page No.
I. REPORT	1
A. Introduction	1
B. Objective	2
C. Compound	3
1. Test Material	3
2. Dosages	3
D. Methods	4
E. Summary	4
1. Host-Mediated Assay	4
2. Cytogenetics	4
a. <u>In vivo</u>	4
b. <u>In vitro</u>	5
3. Dominant Lethal	5
F. Results and Discussion	5
1. Toxicity Data - Test I	5
a. <u>In vivo</u>	5
b. <u>In vitro</u>	6
c. Toxicity data sheets	8
2. Host-Mediated Assay - Test I	12
a. Host-mediated assay summary sheets	14
b. Host-mediated assay data sheets	17
3. Toxicity Data - Test II	48
a. Acute - Rat	48
b. Subacute - Rat	48
c. Acute - Mouse	49
d. Subacute - Mouse	49
e. Toxicity data sheets	50
4. Host-Mediated Assay - Test II	54
a. Host-mediated assay summary sheets	55
b. Host-mediated assay data sheets	59
5. Cytogenetics - Test I	83
a. <u>In vivo</u>	83
b. <u>In vitro</u>	83
c. Cytogenetic summary sheets	84
6. Cytogenetics - Test II	88
Cytogenetic summary sheets	89
7. Dominant Lethal Assay - Test I	92
a. Acute study	92
b. Subacute study	92
c. Dominant lethal assay summary sheets	93
8. Dominant Lethal Assay - Test II	110
Dominant lethal assay summary sheets	111



BIONETICS

TABLE OF CONTENTS (continued)

Page No.

II. MATERIALS AND METHODS	128
A. Animal Husbandry	128
1. Animals (Rats and Mice)	128
2. Preparation of Diet	128
3. Husbandry	128
B. Dosage Determination	128
1. Acute LD ₅₀ and LD ₅ Determination	128
2. Subacute Studies	130
C. Mutagenicity Testing Protocols	130
1. Host-Mediated Assay	130
a. Acute study	131
b. Subacute study	133
c. <u>In vitro</u>	133
2. Cytogenetic Studies	134
a. <u>In vivo</u> study	134
b. <u>In vitro</u> study	136
3. Dominant Lethal Assay	138
D. Supplementary Materials and Methods	139
1. Host-Mediated Assay <u>In Vitro</u> and Formulae	139
a. Bacterial <u>In vitro</u> plate tests	139
b. <u>In vitro</u> for mitotic recombination	139
c. Minimal medium (bacteria)	140
d. Complete medium (bacteria)	141
e. Complete medium (yeast)	141
2. Cytogenetics <u>In Vitro</u> Preparation of Anaphase Chromosomes	142
3. Statistical Analyses of Dominant Lethal Studies	143
a. The fertility index	143
b. Total number of implantations	143
c. Total number of <u>corpora lutea</u>	143
d. Preimplantation losses	143
e. Dead implants	144
f. One or more dead implants	144
g. Two or more dead implants	144
h. Dead implants per total implants ..	144
E. References	147
1. Host-Mediated Assay	147
2. Cytogenetics	147
3. Dominant Lethal	148
F. Abbreviations	149



BIONETICS


I. REPORT

A. Introduction

Litton Bionetics, Inc. (LBI) has investigated the possible mutagenicity of compounds selected and provided by the Food and Drug Administration under Contract 71-268. LBI's investigation utilized the three mammalian test systems herein described -- Host-Mediated Assay, Cytogenetic Studies and Dominant Lethal Assay. These tests provide information as to the types of genetic damage caused by environmental compounds -- pesticides, chemicals, food additives, drugs and cosmetics.

The Host-Mediated Assay is based upon the assumption that the action of a mutagen on the genetics of bacteria is similar to that in man. This is further strengthened by the use of an eukaryotic organism (Saccharomyces cerevisiae). Since the mutation frequencies are well established for the indicator organism, any deviation due to the action of the test compound is readily detectable. As some compounds are mutagenic in bacteria and not in the host animal, and vice versa, this test is able to differentiate an action which may have been due to hosts' ability to detoxify or potentiate a suspected mutagen. This action is dependent upon the ability of the compound to gain access to the peritoneal cavity. Coupled with the direct action of the compound on the indicator organism in vitro, the assay provides a clear insight into host-mediation of mutagenicity.

Cytogenetics provides a valuable tool for the direct observation of chromosomal damage in somatic cells. Alteration of the chromosome number and/or form in somatic cells may be an index of mutation. These studies utilized examination of bone marrow cells arrested in C-metaphase from rats exposed to the test compound as compared to positive and negative control animals. If mutational

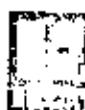

BIONETICS

changes occur, the types of damage expected due to the action of chemicals are structural rearrangements, breaks and other forms of damage to the chromosomal complement of the cells exposed.

For the in vitro cytogenetic studies, we have a more rapid and inexpensive means of determining chromosomal damage. This is accomplished by observing cells in anaphase. As the chromatids separate and move along the spindle, aberrations may occur. Chromatids which do not migrate to the daughter cells may lead to uneven distribution of parts or of entire chromatids (mitotic nondysjunction). These give rise to "side arm" bridges which have been interpreted as point stickiness or localized failures of chromosome duplication point errors. These aberrations (bridges, pseudochiasmata, multipolar cells, acentric fragments, etc.) are extremely sensitive indicators of genetic damage.

The Dominant Lethal Test is an accurate and sensitive measure of the amount and type of fetal wastage which may occur following administration of a potential mutagen. Dominant lethal mutations are indicators of lethal genetic lesions. The effects of mutagens on the chromosomal complement of the spermatozoa of treated males results in alterations of form and number of chromosomes. Structural rearrangements and aneuploidy may lead to the production of non-viable zygotes, early and late fetal deaths, abortions and congenital malformations. In addition, aberrations could lead to sterility or reduced reproductive capacity of the F₁ generation. The action of a mutagen on specific portions of spermatogenesis is also apparent in this test.

B. Objective

The purpose of these studies is to determine any mutagenic effect of the test compound by employing the Host-Mediated Assay, Cytogenetic Studies



BIONETICS

International

and the Dominant Lethal Assay, both in vivo and in vitro tests are employed with the cytogenetic and microbial test systems. These tests and their descriptions are referenced in the Appendices A through F.

C. Compound

1. Test Material

Compound FDA 71-55, Tartaric Acid, N.F.F.C.C., Fine Granular, Lot Number 71382, as supplied by the Food and Drug Administration.

2. Dosages

The animals employed, the determination of the dosage levels and the route of administration are contained in the technical discussion.

The dosage levels employed for compound FDA 71-55 are as follows for the Cytogenetic Studies in vivo in rats.

	<u>Test I</u> ⁺	<u>Test II</u> ⁺
Low Level	1.25 mg/kg	-----
Intermediate Level	12.5 mg/kg	500.0 mg/kg (acute)
LD ₅	125.0 mg/kg	4000.0 mg/kg (acute)
Negative Control	Saline	1450.0 mg/kg (subacute)
Positive Control (TEM*)	0.3 mg/kg	Saline
		0.3 mg/kg

The dosage levels employed for compound FDA 71-55 are as follows for the Host-Mediated Assay in vivo in mice.

	<u>Test I</u> ⁺	<u>Test II</u> ⁺
Low Level	1.25 mg/kg	-----
Intermediate Level	12.5 mg/kg	500.0 mg/kg (acute)
LD ₅	125.0 mg/kg	5000.0 mg/kg (acute)
Negative Control	Saline	1450.0 mg/kg (subacute)
Positive Control (EMS**) (DMN***)	350 mg/kg 100 mg/kg	Saline 350 mg/kg 100 mg/kg

* Triethylene Melamine

** Ethyl Methane Sulfonate

*** Dimethyl Nitrosamine

+ These two tests were performed at different time intervals.



BIONETICS

The dosage levels employed for compound FDA 71-55 are as follows for the Dominant Lethal Assay in vivo in rats.

	<u>Test I</u> ⁺	<u>Test II</u> ⁺
Low Level	1.25 mg/kg	-----
Intermediate Level	12.5 mg/kg	500.0 mg/kg (acute)
LD ₅	125.0 mg/kg	4000.0 mg/kg (acute)
Negative Control	Saline	1450.0 mg/kg (subacute)
Positive Control (TEM*)	0.3 mg/kg	Saline
		0.3 mg/kg

The in vitro Cytogenetic Studies were performed employing three logarithmic dose levels.

Low Level	1.0 mcg/ml
Medium Level	10.0 mcg/ml
High Level	100.0 mcg/ml
Negative Control	Saline
Positive Control (TEM*)	0.1 mcg/ml

The discussion of this test is contained in the technical discussion.

D. Methods

The protocols employed are explained in Appendices C and D.

E. Summary

1. Host-Mediated Assay

This compound was not mutagenic for Salmonella strains TA-1530 or G-46 in any of the assays. The initial results with Saccharomyces indicated increased recombinant frequencies in the subacute tests and in the in vitro assays. Additional tests (Test II) at higher dose levels were negative for all strains at both acute and subacute dose levels.

2. Cytogenetics

a. In vivo

The compound produced no detectable significant aberration of the bone marrow chromosomes of rats when administered orally.

*Triethylene Melamine

+These two tests were performed at different time intervals.



BIONETICS

at the dosage levels employed in this study.

b. In vitro

The compound produced no significant aberration in the anaphase chromosomes of human tissue culture cells when tested at the dosage levels employed in this study.

3. Dominant Lethal

This compound was considered to be non-mutagenic in rats in the Dominant Lethal Assay when using the dosages employed in this study.

F. Results and Discussion

1. Toxicity Data - Test I

a. In vivo

Compound FDA 71-55 was suspended in 0.85% saline and administered to ten male rats by intubation. The average body weight of the animals was 250 grams and each received a dose of 5000 mg/kg. All animals were found dead within 24 hours. Necropsy revealed swollen mucosal lining of the stomach and bloody patches in the intestine.

Dose levels of 100, 250, 500, 1000, 2000 and 3000 mg/kg were selected to determine an acute LD₅₀. The toxicity data is presented on the LD₅₀ reporting form using the Litchfield-Wilcoxon method.

The LD₅₀ was determined as 920 mg/kg. The LD₅ dose level was derived from the probit line. The dose levels used were LD₅ - 125 mg/kg, intermediate - 12.5 mg/kg and low - 1.25 mg/kg. The data on the dose levels, numbers of animals and necropsy findings are presented in the toxicity data sheets.



BIONETICS

b. In vitro

The compound was suspended in 0.85% saline at the concentrations listed above. It was introduced into tubes containing WI-38 cells in a logarithmic phase of growth. The cells were observed for cytopathic effect (CPE) and the presence of mitoses at 24 and 48 hours.

<u>Tube No.</u>	<u>No. of Cells</u>	<u>Conc. mcg/ml</u>	<u>CPE</u>	<u>Mitoses</u>
1	5×10^5	1,000	+	-
2	"	1,000	+	-
3	"	500	+	-
4	"	500	+	-
5	"	100	-	+
6	"	100	-	+
7	"	50	-	+
8	"	50	-	+
9	"	10	-	+
10	"	10	-	+

Since an inhibition of mitoses was observed a closer range of concentrations was employed as follows.

1	5×10^5	500	+	-
2	"	500	+	-
3	"	400	+	-
4	"	400	+	-
5	"	300	+	+
6	"	300	+	+
7	"	200	-	-
8	"	200	+	+
9	"	100	-	+
10	"	100	-	+

The 100 mcg/ml concentration was used as the high level, 10 mcg/ml as the intermediate level and 1.0 mcg/ml as the low level.



BIONETICS

C. TOXICITY DATA SHEETS
CONTRACT FDA 71-268
COMPOUND FDA 71-55
TARTARIC ACID
TEST I



BIONETICS

TOXICITY DATA
COMPOUND FDA 71-55

Solvent: 0.85% saline

Dosage Form: Suspension

Animals: Male rats with an average body weight of 250 grams. All animals were observed for ten (10) days.

Range Finding:

<u>Dose mg/kg</u>	<u># Dead # Animals</u>	<u>Day of Death and Necropsy</u>
5000	10/10	Day 1 (10): Swollen mucosal lining and bloody patches in the intestine.

LD₅₀:

100	0/5	None
250	1/5	Day 5 (1): Swollen mucosal lining and bloody patches in the intestine.
500	1/5	Day 5 (1): Swollen mucosal lining and bloody patches in the intestine.
1000	3/5	Day 2 (3): Swollen mucosal lining and bloody patches in the intestine.
2000	4/5	Day 1 (1) and Day 2 (3): Swollen mucosal lining and bloody patches in the intestine.
3000	4/5	Day 1 (1) and Day 2 (3): Swollen mucosal lining and bloody patches in the intestine.



BIONETICS

LD₅₀ REPORTING FORM USING LITCHFIELD-WILCOXON METHODSDOSE EFFECT CURVE FOR FDA Compound 71-55 Tartaric Acid

DOSE	PROPORTION	OBSERVED PERCENT	EXPECTED PERCENT	OBS-EXP'D.	CONFIDENCE CO. (χ^2) ²
100	0/5	0	2	-2	
250	1/5	20	12	+8	
500	1/5	20	29	-19	
1000	3/5	60	53	+7	
2000	4/5	80	76	+4	
3000	4/5	80	86	-6	

Total animals = 30Total = Number Doses, K = 6(χ^2)² = .865Animals/Dose = 5Degrees of Freedom, n=k-2= 4(χ^2)² for n of k-2 = 9.49since .865 is less than 9.49,
therefore data not significantly
heterogeneousLD₈₄ = 2800LD₅₀ = 920LD₁₆ = 310

$$fLD_{50} = \frac{5}{\sqrt{N!}} = \frac{3.01}{\sqrt{6!}} = \frac{3.01}{2.77} = \frac{3.01}{2.77} = \frac{2.77}{\sqrt{15}} = \frac{(3.01)^{.715}}{\sqrt{15}} = 2.20$$


$$LD_{50} \times fLD_{50} = (920)(2.20) = 2024$$

$$\frac{LD_{50}}{fLD_{50}} = \frac{(920)}{(2.20)} = 418$$

fLD₅₀

$$LD_{50} \text{ and } 19/20 \text{ Confidence Limits} = P\{418 \leq LD_{50} \leq 2024\} = .95$$

Attached should be a plot of the dose-effect curve on log-probit paper.

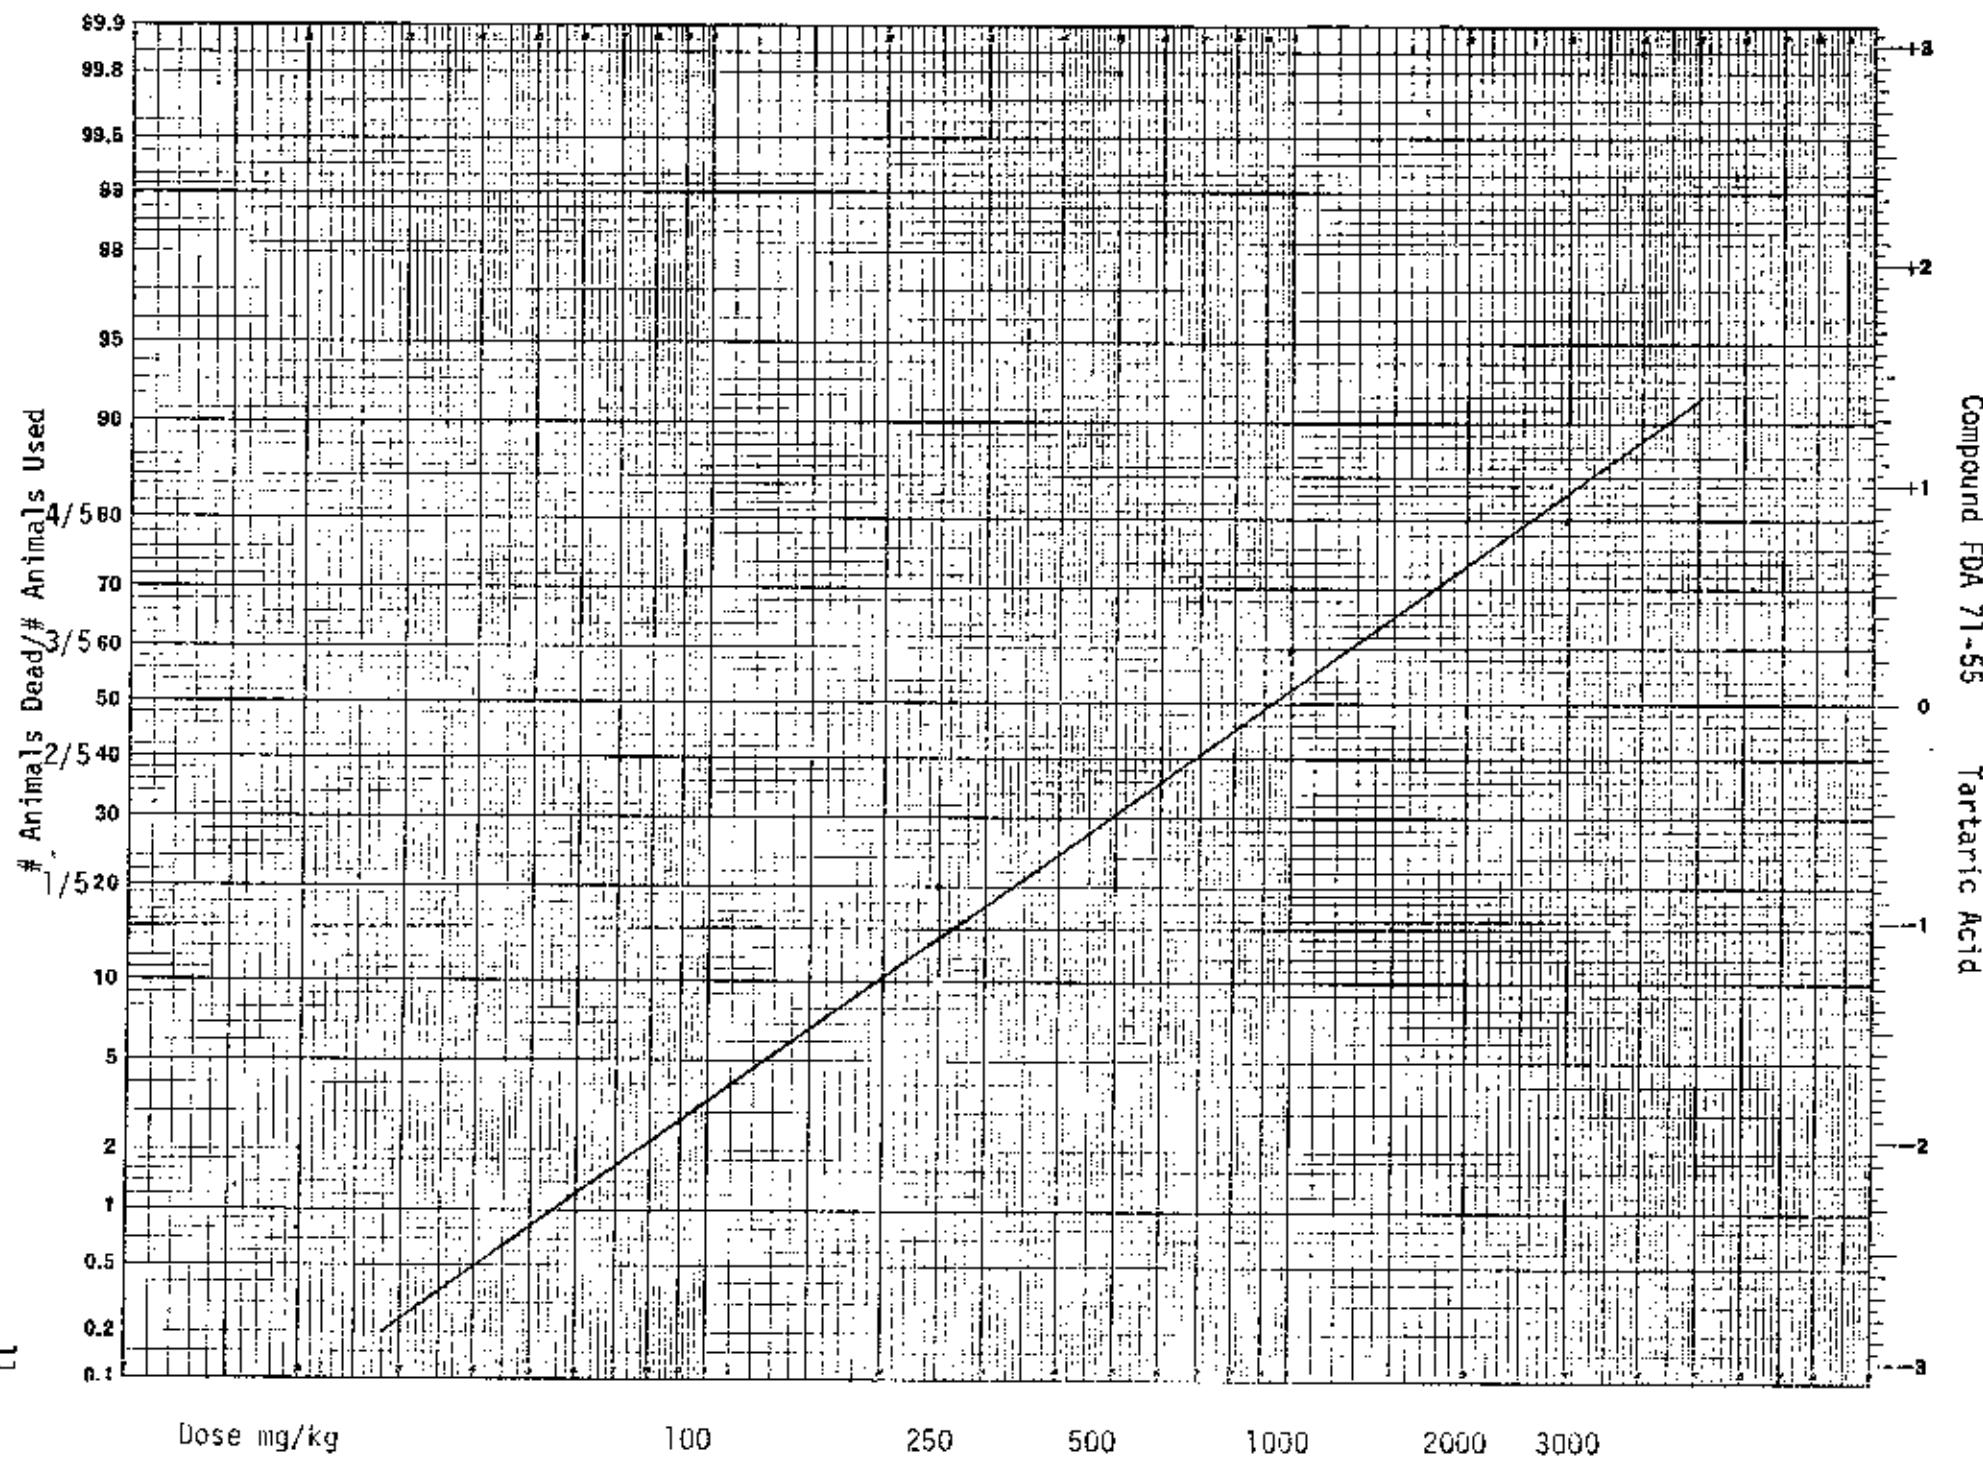

2. Host-Mediated Assay - Test I

Compound FDA 71-55 caused no significant increases in mutant frequencies when tested against Salmonella TA-1530 and G-46 at the dose levels used. Similarly, no significant increases occurred in the tests with Saccharomyces D3 at the acute levels. The intermediate level showed an increase compared to its negative control. The subacute levels show a dose-related response increase in recombinant frequencies indicating the compound or a metabolite(s) was genetically active. The additional work on G-46 and D3 were the result of contamination of some media.



BIONETICS

EVALUATION SHEET

Compound: FDA-71-55 TARTARIC ACID

<u>Indicator Strain</u>	<u>In Vitro</u>	<u>In Vivo</u>			<u>Other Comments</u>
		Possible Low Recoveries	Controls		
TA-1530	pos.	NC PC AL AI AH SANC SAL SAI SAH	NC OK PC OK SANOK SAIpc		1. All doses negative
11/6/72 Acutes					
11/9/72 S-acutes	(neg.)				

G-46					
11/27/72 Acutes					
12/1/72 S-acutes					
SAL only 4/9/73	(neg.)				
		NC PC AL AI AH SANC SAL SAI SAH	NC OK PC OK SANOK SAPC SALNC OK SALPC OK		1. All doses negative 2. See below*

*SAL dose run separately - theoretically this should be acceptable since you repeated the positive and negative controls and the results appear consistent with the original test.

D-3					
11/27/72 All	(pos.)				
AI dose only	neg.				
		NC PC AL AI AH SANC SAL SAI SAH	NC OK PC OK AINC OK AIPC OK		1. Acute doses negative 2. Subacute doses appear positive and show a dose response. 3. See below*

AI dose run separately - theoretically this should be acceptable since you have repeated the positive and negative controls and the results appear consistent with the original test.

Summary: All bacteria tests with this compound are negative. The results with D-3 indicate that the in vitro tests are positive and the subacute trials show significant increases which are dose related. The D-3 acute doses are negative. All data appear acceptable.

a. HOST-MEDIATED ASSAY SUMMARY SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-55

TARTARIC ACID

TEST I



BIONETICS

HOST MEDICAL ASSAY

Summary Sheet

COMPOUND FOL 71-55

SALMONELLA

T-153

S-46

SACCHAROMYCES D-3

	RIF (μ g/ml)	RFT/RFC	RIF (μ g/ml)	RFT/RFC	RIF (μ g/ml)	RFT/RFC
ACUTE						
SC	.08		.61		4.54	
SL	7.34	11.79	16.23	27.05	51.91	10.51
SI	1.04	2.71	.50	.93	5.32	1.13
SLG	2.38	3.47	.57	.89	1.	*
SLG	.03	1.22	.51	1.12	7.07	1.43
SUBACUTE						
SC	.41		.57		4.34	
SL	4.62	1.48	1.		5.79	1.17
SI	1.14	2.45	.55	1.44	18.45	3.13
SLG	.36	.86	1.5	1.76	23.17	4.69

I. VITRO T-153 S-46

	\approx CONC	\approx UNIV V	\approx 1.81
TCPD	-	62.5	24
PC	-	100.0	4
PC	+	50.2	387

STOP

HOST-MEDIATED ASSAY
SUMMARY SHEET

COMPOUNDS FOR T1-55

	T1530		SALMONELLA		SACCHAROMYCES D-+	
	MIC	MRT/MRC (X 10E-3)	MIC	MRT/MRC (X 10E-3)	MIC	MRT/MRC (X 10E-3)
ACUTE						
NC	1.00		0.73		7.81	
PC	0.	0.	22.04	30.19	56.17	21.84
SL	0.	0.	0.	0.	0.	0.
SI	0.	0.	0.	0.	1.31	3.34
SL/SC	0.	0.	0.	0.	0.	0.
SUBACUTE						
NC	1.00		0.3		1.00	
SL	0.	0.	0.5	0.92	0.	0.
SI	0.	0.	0.	0.	0.	0.
SL/SC	0.	0.	0.	0.	0.	0.
IN VITRO						
	T1530	S-46	% CONC	S. USE V. 1	S. X 10E-3	
NC						
PC						

STOP

b. HOST-MEDIATED ASSAY DATA SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-55

TARTARIC ACID

TEST I



BIONETICS

HOST RELATED ASSAY REPORT SHEET

COMPOUND FOR 71-63

ORGANISM: SALMONELLA TA153

DOSE LEVEL: NEGATIVE CONTROL + SULFATE

TREATMENT: IN VIVO, NSA, + ACUTE

DATE STARTED: NOVEMBER 5, 1972

ANIMAL NUMBER	MA-CFU X 10E7/1.0ML	B	C	D
		TOTAL CFU X 10E6/1.0ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION F.E. (C.B.) X 10E-8
1	12.2	2.13	2.00	.9
2	16.2	2.77	1.00	.36
3	12.6	2.16	1.00	.48
4	34.0	5.07	2.00	.35
5	13.4	2.46	2.00	.29
6	14.7	2.68	2.00	.76
7	19.3	3.31	3.00	.91

NO. OF ANIMALS (N) IS
TOTAL CFU OUT OF READING POSSIBLE

	COL. B (X 1.0E-6)	COL. C (X 10E0)	COL. D (X 10E-8)
1	2.95	1.66	.688
2	5.13	2.00	.63
3	2.67	3.00	.98
4	2.43	1.00	.35

NO OUTLERS

STOP

POST EXPIRED ASSAY REPORT SHEET

60 POUNDS FED 71-59

ORGANISM: SALMONELLA TA153

DOSE LEVEL: POSITIVE CONTROL = 5% = 10E7 CFU/G

TREATMENTS: IN VIVO, GRADE ACUTE

DATE STARTED: NOVEMBER 6, 1972

ANIMAL NUMBER	REL. CFU X 10E7/0.0ML	TOTAL CFU X 10E7/1.0ML	C		MUTATION F.E. (C/B) X 10E-6
			TOTAL NO. MUTANTS X 10E7/1.0ML	MUTANT %	
1	27.1	4.52	30.00	6.64	
2	29.7	4.48	18.00	4.04	
3	16.1	2.48	22.00	7.45	
4	26.1	3.68	28.00	7.51	
5	21.2	3.37	40.00	14.25	
6	21.3	3.3	29.00	7.95	
7	27.4	3.57	22.00	4.82	

NO. OF ANIMALS TESTED

NO. OF CONTAMINATED TISSUE

	COL. A (X 10E-6)	COL. C (X 10E0)	COL. D (X 10E-6)
1	3.34	7.00	7.54
2	1.1	3.00	1.21
3	4.57	48.00	14.26
4	2.67	18.00	4.04

A SUMMARY OF OUT TIERS REMOVED

	COL. A (X 10E-6)	COL. C (X 10E0)	COL. D (X 10E-6)
1	3.12	24.5	6.42
2	1.1	12.00	3.94
3	4.17	36.00	7.95
4	2.68	18.00	4.04

STOP

HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SALMONELLA TA153

DOSE LEVEL: LOW = 1,250 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE OF REPORT: NOVEMBER 20, 1972

ANIMAL NUMBER	RAW CFU X 10E7/0.5ML	TOTAL CFU X 10E5e/1.0ML	C		MUT. T. OD F.D.C.B. X 10E-3
			TOT. % KOs	AUT. RTS A 10CFU/1.0ML	
1	7.42	1.42	2.89	1.12	
2	51.00	9.00	7.10	6.2	
3	9.72	1.92	4.60	2.47	
4	11.72	1.92	3.42	1.59	
5	7.20	1.17	1.00	0.60	
6	6.42	1.17	3.40	2.41	
7	8.72	1.42	4.00	2.76	

NO. OF ANIMALS: 7/7/7
 TOTAL CFU OUT OF RA GE EXPECTED:

	CFU X (X 10E-3)	COL. C (X 10E-3)	COL. D (X 10E-3)
E.W.	2.42	3.42	0.4
H.G.	7.42	5.00	1.27
A.T.	3.42	7.00	2.21
P.N.	1.17	1.00	0.62

NO OUTLIERS

STOP

HOST RESISTANCE ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SALMONELLA TAIBA

DOSE LEVEL: INTERMEDIATE = 10.0 mg/kg

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: NOVEMBER 6, 1972

ANIMAL NUMBER	RAW CFU X 10E7/0.1ML	TOTAL CFU X 10E6/1.0ML	C	D
			TOT. L -O	CFU L -O 10E6/0.1ML
1	15.00	2.00	7.00	2.00
2	7.30	1.22	9.00	7.00
3	25.50	4.28	11.00	2.00
4	56.40	9.28	1.00	.11
5	27.00	4.50	3.00	.07
6	6.80	1.13	3.00	2.00
7	36.40	6.07	5.00	.02
8	19.50	3.25	6.00	1.00

NO. OF ANIMALS = 8/8

NO. OF CONTAMINATED EXAMS = 8/8

TOTAL CFU OUT OF RANGE = 40.00

	COL. A (X 10E6)	COL. C (X 10E6)	COL. D (X 10E6)
MEAN	4.44	5.00	.38
RANGE	8.27	10.00	1.00
SD	9.44	11.00	.02
MIN	1.13	1.00	.11

* SUMMARY (IT OUTLINES REMOVED)

	COL. A (X 10E6)	COL. C (X 10E6)	COL. D (X 10E6)
MEAN	4.44	5.14	1.64
RANGE	8.27	10.00	2.00
SD	9.44	11.00	.00
MIN	1.13	1.00	.11

STOP

HOST-ESTIMATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORIGIN: SALMONELLA TYPHOI

DOSE LEVEL: LD₅₀ = 125 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: NOVEMBER 19, 1976

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E7/0.1ML	TOTAL CFU X 10E8/1.0ML	TOT OUT OF RANGE 10E8/1.0ML	OUT OF RANGE F.D. 10E8/1.0ML
1	36.40	6.47	10.00	1.60
2	44.40	7.40	7.00	1.22
3	10.00	1.7	2.00	1.21
4	47.21	7.87	3.00	0.30
5	34.60	5.77	2.00	0.30
6	23.40	3.1	2.00	0.1
7	30.70	5.12	1.00	0.21
8	15.30	2.59	3.00	1.41

NO. OF ANIMALS EQUALS:

TOTAL CFU OUT OF RANGE E VALUE:

	Column A ($\leq 10^{8.0}$)	Column C ($\geq 10^{8.0}$)	Column D ($\leq 10^{8.0}$)
MEAN	5.14	4.40	0.3
RANGE	0.21	1.20	1.20
MAX	7.87	10.00	1.40
MIN	1.7	1.00	0.20

NO OUTLIERS

STOP

HOST SENSITIVITY ASSESSMENT REPORT SHEET

COMPOUND FDA 71-55

O₂-GASEOUS SALMONELLA 14150

DOSE LEVEL: NEGATIVE CONTROL = SALINE (SUBCUT)

TREATMENT: IN VIVO, ORAL, ACUTE

DATE REPORTED: NOVEMBER 9, 1972

ANIMAL NUMBER	A	B	C	D
	HAB CFU X 10E7/0.1ML	TOTL. CFU X 10E8/1.0ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FREQ. %
1	31.00	5.17	2.00	.35
2	64.70	15.70	4.00	.57
3	31.20	5.2	2.00	.38
4	41.30	7.15	4.00	.57
5	22.50	5.75	1.00	.27
6	49.50	6.25	6.00	.75
7	47.10	11.15	1.00	.09
8	31.20	5.20	3.00	.93

NO. OF ANIMALS EVALUATED

TOTAL CFU OUT OF RANGE EVALUATED

SAMPLES WITH ZERO MUTANTS EVALUATED

	CFU's (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-1)
MEAN	7.17	2.00	.42
RANGE	7.42	6.00	.64
MAX	11.15	7.00	.70
MIN	5.17	1.00	.17

NO OUTLIERS

STOP

HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SALMONELLA TA1535

DOSE LEVEL: LOW = 1.25 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE: 8/18/78 TEST NUMBER: 94-18-2

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E7/0.1ML	TOTAL CFU X 10E8/1.0ML	TOTAL ADU 10E5/1.0ML	ADU/100M
1	21.10	3.32	2.00	.6
2	33.80	3.63	1.50	4.1
3	6.60	1.11	2.00	1.82
4	54.20	6.3	2.60	4.24
5	46.30	7.12	3.05	4.31
6	51.40	8.01	3.40	4.17
7	47.50	7.95	3.00	4.00

NO. OF ANIMALS EQUALS /
SAMPLES WITH ZERO MUTANTS EQUALS

	COL. A (X 10 ⁻⁵)	COL. C (X 10 ⁻⁵)	COL. D (X 10 ⁻⁵)
MEAN	5.2	2.7	.1
RANGE	7.95	4.16	1.64
MAX	9.10	5.00	1.82
MIN	1.11	1.00	.1

SUMMARY DATA OUTLINES REMOVE

	COL. A (X 10 ⁻⁵)	COL. C (X 10 ⁻⁵)	COL. D (X 10 ⁻⁵)
MEAN	7.1	2.03	.41
RANGE	5.52	4.00	.45
MAX	9.10	5.00	.83
MIN	3.32	1.00	.11

STOP

HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

O-GALACTOSYL SALMONELLA (A158)

DOSE LEVEL: INTERMEDIATE = 12.5 mg/kg

TREATMENT: IN VIVO, ORAL, SUBACUTE

TEST STRAIN: MUMBLE 94-15/2

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10 ⁷ /0.0ML	TOTAL CFU X 10 ⁸ /0.1ML	CFU/10 ⁸ /0.1ML	CFU/10 ⁷ /0.0ML
1	12.10	2.02	1.00	0.00
2	37.01	0.42	2.00	0.32
3	21.75	3.32	3.00	1.03
4	11.50	1.2	2.00	1.00
5	9.60	1.40	4.00	2.00
6	14.20	2.37	3.00	1.27
7	39.20	0.03	0.00	0.4

NO. OF ANIMALS EQUALS 7

NO. OF CONTAMINATED EQUALS 3

SAMPLES WITH ZERO MUTANTS EQUAL

	COL. A (X 10 ⁷ /0.0)	COL. C (X 10 ⁸)	COL. D (X 10 ⁷ /0.0)
MEAN	3.44	2.01	1.4
RANGE	0.13	3.00	0.54
MAX	9.60	4.00	2.00
MIN	1.00	1.00	0.32

* SUMMARY w/ OUTLIERS REMOVED

	COL. A (X 10 ⁷ /0.0)	COL. C (X 10 ⁸)	COL. D (X 10 ⁷ /0.0)
MEAN	3.78	2.33	1.74
RANGE	4.62	2.00	0.0
MAX	6.53	3.00	1.27
MIN	1.02	1.00	0.32

STOP

HOST-MEDIATED ASSAY (KODAK SAFETY FILM)

COMPOUND: FDA 71-55

ORGANISM: SALMOELLA TAIBA

DOSE LEVEL: LD5 ~ 125 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE OF TEST: NOVEMBER 20, 1972

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E7/0.0ML	TOTAL CFU X 10E8/1.0ML	TOTAL NO. 10E6/LITER	MUT. (%) 10E-4/CFU
1	14.20	2.37	2.30	*1.0
2	30.30	5.10	4.10	*2.0
3	31.50	5.20	2.10	*3.0
4	43.00	7.17	2.10	*2.0
5	38.00	6.47	1.60	*1.0
6	56.20	9.37	4.00	*4.0
7	30.20	5.10	2.00	*4.0
8	34.00	5.57	2.00	*4.0
9	87.00	14.00	3.00	*2.0

NO. OF ANIMALS EXPOSED:

SAMPLES WITH ZERO MUTANTS:

	Cult. A ($\times 10^6/\text{ml}$)	Cult. C ($\times 10^6/\text{ml}$)	Cult. D ($\times 10^6/\text{ml}$)
MEAN	2.37	2.11	*3.0
RANGE	12.13	3.00	*1.0
MAX	14.20	4.00	*5.0
MIN	2.37	1.00	*1.0

* SUMMARY DATA: OUTLIERS REMOVED

	Cult. A ($\times 10^6/\text{ml}$)	Cult. C ($\times 10^6/\text{ml}$)	Cult. D ($\times 10^6/\text{ml}$)
MEAN	2.31	2.13	*3.0
RANGE	9.47	3.00	*2.0
MAX	14.00	4.00	*4.0
MIN	2.37	1.00	*1.0

STOP

HOST RESPIRATORY ASSAY REPORT SHEET

COMPOUND: FDA 71-55

TESTER: SALINOMELL, G-48

DOSE LEVEL: NEGATIVE CONTROL = SALINE (0.00%)

TREATMENT: IN VIVO, ORAL, ACUTE

Page Sixty-Four (64) of 271 - 22

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E7/0.0ML	TOTAL CFU X 10E3/100ML	TOT. % R.O. TOT. CFU X 10E3/100ML	NET T.D.O. % 100%
1	42.10	7.12	3.90	+43
2	50.00	8.33	7.60	+50
3	35.20	5.67	4.30	+50
4	80.70	13.45	5.70	+61
5	81.20	13.53	7.90	+62
6	31.40	5.20	3.60	+10
7	91.00	15.17	9.80	+26
8	51.20	8.00	6.40	+63

NO. OF ANIMALS EQUALS

TOTAL CFU OUT OF RANGE EQUALS

	CFU's A (X 10 ⁻³)	CFU's C (X 10 ⁻³)	CFU's D (X 10 ⁻³)
MEAN	7.654	5.110	+0
RANGE	9.13	4.60	+20
MAX	13.45	7.90	+61
MIN	5.20	3.60	+10

NO OUTLIERS

STOP

HOST-EDITORATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SALMONELLA 6-46

DOSE LEVEL: POSITIVE CONTROL = DAP = 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE: 8/14/72 **BY:** EIN-BAC 27: 1972

ANIMAL NUMBER	A RAK CFU X 10E7/0.0ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. OUTLIER(S) A 10E8/1.0ML	D MUT. RATE (% 10E8) 10E-6
1	54.20	94.03	107.00	11.00
2	46.69	7.71	72.00	9.47
3	37.70	6.26	210.00	33.42
4	61.90	10.00	150.00	12.00
5	41.20	6.67	97.00	14.13
6	57.20	9.03	121.00	12.00
7	52.20	8.70	142.00	10.32
8	62.20	10.37	117.00	11.27
9	53.40	8.93	21.00	24.49

NO. OF ANIMALS EQUALS: 9
NO. OF CONTAMINATED ANIMALS: 9

	COL. A (X 10E8)	COL. C (X 10E8)	COL. D (X 10E-6)
MEAN	6.69	134.37	14.23
RANGE	4.00	140.00	24.49
MAX	10.00	210.00	33.42
MIN	6.00	72.00	9.47

* SUMM. OF ALL OUTLIERS REMOVED.

	COL. A (X 10E8)	COL. C (X 10E8)	COL. D (X 10E-6)
MEAN	6.69	120.00	14.00
RANGE	3.00	140.00	15.22
MAX	10.00	210.00	24.49
MIN	6.00	72.00	9.47

STOP
 10021 E ILLG 1-FORMAT INPUT
 EM0777 INS
 10022 1 LIST ITEM AT 100156, 1 PUT FIELD 100156
 ALKBACK SEQUENCE
 PROGRAM ENTRY LINE ADDRESS 100156
 FIO 100156 ADDRESS 100156
 STOP

TEST AND TALK BACK REMOTE SIGHT

COPRODUCT FD-7-400

ORGANISM: SALMONELLA G+H+

DOSE LE SELI LK 2 mg/kg/day

TREATMENT: IN VITRO CULTURE


DATE: JULY 14, 1974 MOVE: 858 27, 1974

ANIMAL NUM-BR	WE GROSSES	COPRODUCT 1000/ML	C		OUT. NO. ADULTS X 1000/ML	OUT. NO. LIVE/C/S 1000
			OUT. NO. ADULTS X 1000/ML	OUT. NO. LIVE/C/S 1000		
1	7.00	1.00	3.00	0.1	3.00	0.1
2	6.80	1.00	3.00	0.1	3.00	0.1
3	8.10	1.00	2.00	0.37	2.00	0.37
4	7.20	1.00	2.00	0.00	2.00	0.00
5	7.00	1.00	2.00	0.00	2.00	0.00
6	7.00	1.00	2.00	0.00	2.00	0.00
7	7.10	1.00	2.00	0.00	2.00	0.00
8	10.50	1.00	2.00	0.00	2.00	0.00
9	7.00	1.00	2.00	0.00	2.00	0.00

NO. OF ANIMALS TESTED
TOTAL CFU OUT OF 81,000 CULTURES

	CFU/C (X 1000)	CFU/C (X 1000)	CFU/C (X 1000)
A	9.4	9.10	0.6
B	12.0	0.0	0.78
C	17.0	2.00	1.13
D	20.42	2.00	0.25

NO OUT. PER

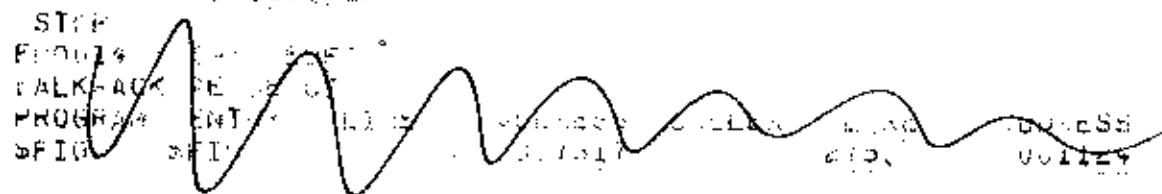

HOST RELATED ASSAY REPORT SHEET

COMPOUND: FDA 71-59

ORGANISM: SALMONELLA 6-46

DOSE LEVEL: INTERMEDIATE = 12.5 mg/kg

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: NOVEMBER 27, 1972

ANIMAL NUMBER	4	8	C	D
	RAW CFU X 10E7/0.1ML	TOTAL CFU X 10E6/1.0ML	TOT CFC X 10E6/1.0ML	MUT T/C % 10E3
1	50.10	5.30	4.00	+4%
2	75.20	12.7	9.00	+7%
3	36.70	6.12	5.00	+4%
4	60.40	10.07	8.00	+7%
5	50.40	8.03	6.00	+3%
6	50.50	8.42	6.00	+4%
7	54.40	9.37	4.00	+7%
8	75.10	12.52	4.00	+44%
9	30.80	5.12	3.00	+32%
10	58.70	9.72	5.00	+97%

NO. OF ANIMALS EQUALS 10.

	CFU ₄ ($\times 10^7$)	CFU ₈ C ($\times 10^6$)	CFU _C D ($\times 10^6$)
MEAN	54.2	8.1	+27
RANGE	7.7	6.00	+37
SD	12.70	3.00	+97
MIN	30.10	3.00	+31

NO OUTLIERS

STOP

HOST ELIMINATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

MECHANISM: SALMONELLA C-40

DOSE LEVEL: LD5 = 125 mg/kg

TREATMENT: IN VIVO, ORAL, ACUTE

DATE OF REPORT: NOVEMBER 27, 1972

ANIMAL NUMBER	RAW CFU X 10E7/0.1ML	S	C	D
		TOTAL CFU X 10E8/1.0ML	OUTLERS X 10E6/1.0ML	OUTLERS (C, D) X 10E-3
1	52.20	6.70	6.00	0.0
2	40.70	5.70	2.00	0.20
3	31.90	5.32	1.00	0.1
4	37.90	5.17	7.00	1.00
5	36.10	5.15	5.00	0.0
6	55.10	5.17	4.00	0.40
7	46.90	7.00	7.00	0.0

NO. OF ANIMALS EQUALS

TOTAL CFU OUT OF RANGE EQUALS

	CFU's S (\pm 10%)	CFU's C (\pm 10%)	CFU's D (\pm 10%)
MIN	5.11	4.2	0.0
RANGE	5.00	5.00	0.00
MAX	9.17	7.00	1.00
MIN	5.32	1.00	0.10

NO OUTLIERS

STOP

DUST EXPIRED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

V. GARDENIA SACHAROELLA 3-46

DOSE LEVEL: NEGATIVE CONT DL = SALT-LINE (SOIL, DUST)

TREATMENT: IN VIVO, Oral, ACUTE

DATE: FEB 1970: PGCD, SEC 1, 1970

ANIMAL NUMBER	A	B	C	D
	RAD CFU A 10E7/0.1ML	TOTAL CFU A 10E6/1.0ML	TOTAL CFU A 10E6/1.0ML	MUT. RATE PER 10 ⁶
1	31.80	0.00	7.00	1.32
2	57.00	0.00	4.00	7.02
3	68.7	11.00	7.00	6.01
4	91.4	15.00	3.00	6.04
5	81.40	13.00	3.00	6.22
6	83.30	15.00	3.00	5.00
7	137.00	22.00	3.00	6.21
8	60.50	10.00	7.00	5.72

NO. OF ANIMALS ANIMALS

TOTAL CFU OUT OF RAD CFU

	COL. A ($\times 10^6$)	COL. C ($\times 10^6$)	COL. D ($\times 10^6$)
MEAN	12.75	0.30	5.18
ST.D.	17.13	0.00	1.11
SD	22.1	0.00	1.12
MIN	0.00	0.00	0.22

B SUMMARY WITH OUTLINES REMOVED

	COL. A ($\times 10^6$)	COL. C ($\times 10^6$)	COL. D ($\times 10^6$)
MEAN	13.0	0.22	5.0
ST.D.	13.35	0.00	1.47
SD	22.0	0.00	1.9
MIN	0.0	0.00	0.22

- STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SALMONELLA G-46

DOSE LEVEL: INTERMEDIATE - 12.5 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: DECEMBER 1, 1972

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E7/0.6ML	TOTAL CFU X 10E8/1.0ML	TOTAL NO. 10E0/1.0ML	MUTATION FRE (C/B) X 10E-6
1	64.60	10.77	7.00	.65
2	80.80	13.47	10.00	.74
3	55.00	9.17	12.00	1.31
4	57.20	9.53	11.00	1.15
5	58.00	9.67	9.00	.93
6	95.60	15.93	5.00	.31
7	54.40	9.07	10.00	1.10
8	36.10	6.02	5.00	.83
9	30.70	5.12	3.00	.59

NO. OF ANIMALS EQUALS 9

NO. OF CONTAMINATED EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-6)
MEAN	9.86	8.00	.85
RANGE	10.82	9.00	1.00
MAX	15.93	12.00	1.31
MIN	5.12	3.00	.31

NO OUTLIERS

STOP
SRU'S:7
!

HOST E01-169 ASSAY REPORT 8-29-72

COMPOUND: FDA 71-55

DOSAGE: SULFONYLUREA 6-46

DOSE LEVEL: LD5 = 125 mg/kg

TREATMENT: IN VIVO, ORAL, SUBCUT

DATE STARTED: NOV 30, 1972

ANIMAL NUMBER	S	A	C	D
	RAW CFU X 10E7/0.1ML	TOTAL CFU A 10E6/1.0ML	TOTAL CFU C 10E6/1.0ML	MUL. D/R X 10^-3
1	35.40	5.00	6.00	1.14
2	70.00	11.00	10.00	1.0
3	87.40	14.00	8.00	1.02
4	41.20	5.00	10.00	1.0
5	94.50	15.00	10.00	1.0
6	82.80	5.40	11.00	2.1
7	63.70	10.00	8.00	1.0

NO. OF ANIMALS EQUALS

NO. OF CONTAMINATED EQUALS

	COL. A (X 10^-3)	COL. C (X 10E6)	COL. D (X 10^-3)
MEAN	1.113	1.19	1.0
RANGE	1.0-1.3	0.60	1.0
MAX	1.373	11.00	2.1
MIN	0.67	0.00	0.2

* SUMMARY : ITM OUTLINES REMOVED

	COL. A (X 10^-3)	COL. C (X 10E6)	COL. D (X 10^-3)
MEAN	1.191	1.00	0.9
RANGE	0.9-1.3	0.00	0.4
MAX	1.373	10.00	1.0
MIN	0.67	0.00	0.2

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SALMONELLA G-46

DOSE LEVEL: NEGATIVE CONTROL - SALINE (LOW SA ONLY)

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: APRIL 9, 1973

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E7/0.8ML	TOTAL CFU X 10E8/1.0ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FRE (C/S) X 10E-8
1	60.60	10.10	7.00	.69
2	32.40	5.40	6.00	1.11 *
3	51.40	8.57	3.00	.35 *
4	86.20	14.37	10.00	.70
5	70.40	11.73	8.00	.68
6	52.30	8.72	6.00	.59
7	70.80	11.80	9.00	.71
8	62.50	10.42	9.00	.86

NO. OF ANIMALS EQUALS

TOTAL CFU OUT OF RANGE EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	10.14	7.25	.73
RANGE	8.97	7.00	.76
MAX	14.37	10.00	1.11
MIN	5.40	3.00	.35

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	11.19	8.17	.73
RANGE	5.65	4.00	.18
MAX	14.37	10.00	.86
MIN	8.72	6.00	.68

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SALMONELLA G-46

DOSE LEVEL: POSITIVE CONTROL - DMN - 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: APRIL 9, 1973

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E7/0.6ML	TOTAL CFU X 10E8/1.0ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FRE (C/B) X 10E-8
1	71.40	11.90	203.00	17.06
2	55.40	9.23	172.00	18.63
3	82.20	13.70	640.00	46.71
4	57.20	9.53	206.00	21.61
5	91.70	15.28	141.00	9.23
6	32.80	5.47	172.00	31.46
7	71.40	11.90	206.00	17.31
8	90.80	15.13	217.00	14.34

NO. OF ANIMALS EQUALS 8

TOTAL CFU OUT OF RANGE EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	11.52	244.63	22.4
RANGE	9.82	499.00	31.49
MAX	15.28	640.00	46.71
MIN	5.47	141.00	9.23

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	11.21	188.14	18.52
RANGE	9.82	76.00	22.24
MAX	15.28	217.00	31.46
MIN	5.47	141.00	9.23

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SALMONELLA G-46

DOSE LEVEL: LOW = 1.25 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: APRIL 9, 1973

ANIMAL NUMBER	A RAW CFU X 10E7/0.1ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	78.90	13.15	4.00	.30
2	93.80	15.63	9.00	.58
3	59.10	9.88	6.00	.61
4	58.10	9.68	8.00	.83
5	65.50	10.92	1.00	.09
6	78.70	13.12	8.00	.61
7	74.60	12.43	2.00	.16

NO. OF ANIMALS EQUALS 7

NO. OF CONTAMINATED EQUALS 3

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	12.11	5.43	.45
RANGE	5.95	8.00	.73
MAX	15.63	9.00	.83
MIN	9.68	1.00	.09

NO OUTLIERS

STOP

HOST RESISTED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISMS: SACCHAROMYCES CEREV

DOSE LEVEL: NEGATIVE CONTROL - S-LIN

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: NOVEMBER 24, 1972

ANIMAL NUMBER	RAW CFU X 10E5/1.0ML	B	C	D
		TOT L CFU 10E5/1.0ML	REMOVED	SCREENED CFU 10E5/1.0ML
1	486.00	4.5	3.00	6.17
2	557.00	4.5	4.00	7.16
3	806.00	4.1	0	0
4	333.00	3.5	2.00	13.72
5	427.00	4.5	2.00	5.63
6	307.00	3.1	1.00	3.21
7	722.00	7.2	3.00	6.16
8	814.00	4.1	4.00	6.91
TOTAL		4.55	22.00	

NO. OF ANIMALS EQUALS

TOTAL SCREENED OUT OF RANGE CFU = 22.00

MEAN C/MEAN B = 4.14

	COL. A (X 10E5)	COL. C (X 10E5)	COL. D (X 10E5)
MEAN	4.06	4.75	5.67
RANGE	4.11	5.00	12.42
MAX	4.1	5.00	16.12
MIN	4.01	4.0	0

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 4.13

	COL. A (X 10E5)	COL. C (X 10E5)	COL. D (X 10E5)
MEAN	4.07	4.43	4.34
RANGE	4.1	5.00	7.15
MAX	4.1	5.00	16.12
MIN	4.01	4.0	0

STOP

HOST MEDiated ASSAY REPORT SHEET

COMPOUND: FDA 71-55

UNSUBSTANTIATED SUGAR SUBSTANCES TEST

DOSE LEVEL: POSITIVE CONTROL = 600 - 600 MG/KG I.P.

TREATMENT: IN VIVO, ORAL, ACUTE

DATE TREATED: NOVEMBER 24, 1972

ANIMAL NUMBER	RAW CFU X 10E5/1.0ML	A	B	C	D
		TOTAL CFU SCREENED X 10E5/1.0ML	10E-2 REMOVED AT 10E5	10E-3 REMOVED AT 10E4	10E-4 REMOVED AT 10E3
1	914.00	.41	32.00	40.01	
2	595.00	.59	24.00	7.6	
3	411.00	.61	40.00	57.32	
4	910.00	.30	39.00	42.38	
5	364.00	.30	27.00	74.16	
6	542.00	.54	20.00	20.	
7	521.00	.52	30.00	67.16	
TOTAL		4.30	241.00		

NO. OF ANIMALS EQUALS 7

TOTAL SCREENED OUT OF RANKED EQUAL

MEAN C/MEAN B = 0.71

	COL. A (X 10E5)	COL. C (X 10E4)	COL. D (X 10E3)
MEAN	*.31	31.17	57.82
RANGE	*.30	24.00	62.31
MAX	*.51	40.00	74.16
MIN	*.30	20.00	30.01

* SUMMARY WITH OUT LINES REMOVED

MEAN C/MEAN B = 0.71

	COL. A (X 10E5)	COL. C (X 10E4)	COL. D (X 10E3)
MEAN	*.34	31.17	57.83
RANGE	*.30	12.00	39.16
MAX	*.51	39.00	74.16
MIN	*.30	21.00	30.01

STOP

FM0014 INS EOF
"ALKBACK" SEQUENCE
PROGRAM ENTRY WINE ADDRESS CALLER LINE ADDRESS

HOST REGULATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SACCHAROMYCES D-S

DOSE LEVEL: LOW = 1,25 mg/kg

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: NOVEMBER 24, 1972

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOT L CFU SCREENED X 10E5/1.0ML	TOTAL REPLICANTS X 1.0ML	ADJUSTED CFU SCREENED X 1.0ML
1	397.00	•.41	5.00	20.15
2	654.00	•.35	6.00	21.17
3	711.00	•.71	5.00	7.13
4	914.00	•.1	2.00	4.11
5	732.00	•.73	3.00	4.11
6	867.00	•.06	2.00	4.31
7	480.00	•.51	0.0	1.0
8	510.00	•.1	2.00	3.2
TOTAL		•.26	20.00	

NO. OF ANIMALS FRAGILE

TOTAL SCREENED OUT OF RANGE 2.00%

MEAN C/MEAN B = 5.34

	COL. A (X 10E5)	COL. C (X 10E5)	COL. D (X 10E-3)
MEAN	•.30	5.3	5.11
RANGE	•.2	6.00	2.11
MAX	•.71	5.00	2.11
MIN	•.06	0.0	0.0

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 4.11

	COL. A (X 10E5)	COL. C (X 10E5)	COL. D (X 10E-3)
MEAN	•.71	2.63	2.11
RANGE	•.2	4.00	2.17
MAX	•.71	5.00	2.17
MIN	•.06	0.0	0.0

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: POSITIVE CONTROL - EMS - 350 MG/KG I.M.

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: OCTOBER 30, 1972

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOMB/CFU SCREENED X 10E-5
1	156.00	.16	24.00	153.85
2	784.00	.78	28.00	35.71
3	235.00	.24	17.00	72.34
4	204.00	.20	18.00	88.24
5	270.00	.27	14.00	51.85
6	395.00	.39	22.00	55.70
7	482.00	.48	29.00	60.17
TOTAL		2.53	152.00	

NO. OF ANIMALS EQUALS 7

NO. OF CONTAMINATED EQUALS 1

TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = .64.17

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.36	21.71	73.98
RANGE	.63	15.00	118.13
MAX	.78	29.00	153.85
MIN	.16	14.00	35.71

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = .54.01

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.39	21.33	68.67
RANGE	.58	15.00	52.52
MAX	.78	29.00	88.24
MIN	.20	14.00	35.71

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: OCTOBER 30, 1972

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOMB/CFU SCREENED X 10E-5
1	1123.00	1.12	14.00	12.47
2	1300.00	1.30	2.00	1.54
3	1700.00	1.70	0.	0.
4	1400.00	1.40	2.00	1.43
5	1100.00	1.10	3.00	2.73
6	460.00	.46	0.	0.
7	1800.00	1.80	6.00	3.33
8	544.00	.54	0.	0.
TOTAL		9.43	27.00	

NO. OF ANIMALS EQUALS 8
TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = 2.86

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	1.18	3.38	2.69
RANGE	1.34	14.00	12.47
MAX	1.80	14.00	12.47
MIN	.46	0.	0.

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 1.57

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	1.19	1.86	1.29
RANGE	1.34	6.00	3.33
MAX	1.80	6.00	3.33
MIN	.46	0.	0.

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: INTERMEDIATE - 12.5 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: OCTOBER 30, 1972

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOMB./CFU SCREENED X 10E-5
1	900.00	.90	18.00	20.00
2	1370.00	1.37	17.00	12.41
3	1110.00	1.11	10.00	9.01
4	1260.00	1.26	8.00	6.35
5	1340.00	1.34	8.00	5.97
6	500.00	.50	5.00	10.00
7	1370.00	1.37	11.00	8.03
8	597.00	.60	8.00	13.40
9	1430.00	1.43	7.00	4.90
TOTAL		9.88	92.00	

NO. OF ANIMALS EQUALS 9

TOTAL SCREENED OUT OF RANGE EQUALS 1

MEAN C/MEAN B = 9.31

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	1.10	10.22	10.01
RANGE	.93	13.00	15.10
MAX	1.43	18.00	20.00
MIN	.50	5.00	4.90

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 9.24

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	1.12	9.25	8.76
RANGE	.93	12.00	9.51
MAX	1.43	17.00	13.40
MIN	.50	5.00	4.90

STOP

HOST ESTIMATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SACCHAROMYCES CEREVISIAE

DOSE LEVEL: LOS = 125 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE COLLECTED: NOVEMBER 24, 1974

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	SCREENED CFU 1.0ML
1	342.00	.34	3.00	6.77
2	513.00	.28	6.00	11.5
3	555.00	.26	6.00	11.1
4	1080.00	1.17	8.00	11.1
5	610.00	.61	6.00	6.56
6	876.00	.82	4.00	8.60
7	548.00	.56	5.00	11.2
8	914.00	.92	6.00	11.8
TOTAL		5.44	34.00	

NO. OF ANIMALS SCREENED

TOTAL SCREENED OUT OF RANGE EQUALS

MEAN C/MEAN B = 6.13

	COL. A (X 10E5)	COL. C (X 10E5)	COL. D (X 10E5)
MEAN	.66	4.25	7.7
RANGE	.17	8.00	11.50
MAX	1.17	8.00	11.5
MIN	.26	0.9	7.8

NO OUTLIERS

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: LOW - 1.25 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: NOVEMBER 24, 1972

ANIMAL NUMBER	A		B		C		D	
	RAT CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML			TOTAL RECOMBINANTS /1.0ML		RECOMB./CFU SCREENED X 10E-5	
1	185.00		.19		2.00		10.81	
2	996.00		1.00		5.00		5.02	
3	400.00		.40		3.00		7.50	
4	701.00		.70		2.00		2.85	
5	378.00		.38		0.		0.	
6	984.00		.98		4.00		4.07	
7	586.00		.59		10.00		17.06	
8	900.00		.98		6.00		6.12	
9	492.00		.49		1.00		2.03	
TOTAL			5.70		33.00			

NO. OF ANIMALS EQUALS 9

TOTAL SCREENED OUT OF RANGE EQUALS 1

MEAN C/MEAN B = 5.79

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.63	3.67	6.16
RANGE	.81	10.00	17.06
MAX	1.00	10.00	17.06
MIN	.19	0.	0.

* SUMMARY WITH OUTLINES REMOVED

MEAN C/MEAN B = 4.50

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.64	2.88	.480
RANGE	.81	6.00	10.31
MAX	1.00	6.00	10.31
MIN	.19	0.	0.

HOST RELATED ASSAY REPORT SHEET

COMPOUND: FDA 71-56

ORGANISM: SACCHAROMYCES D-5

DOSE LEVEL: INTERMEDIATE = 2.0E 06 / G

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: NOV 20, 1972

ANIMAL NUMBER	RAW CFU X 10E6/1.0ML	B		C	
		TOTAL CFU SOLUBILIZED X 10E6/1.0ML	RECOVERED (%)	TOTAL X 1.0ML	RECOVERED CFU SOLUBILIZED X 1.0ML
1	812.00	*.01	24.00		1.620
2	394.00	*.09	0.00		2.030
3	642.00	*.04	0.00		12.40
4	625.00	*.03	16.00		1.160
5	600.00	*.02	0.00		1.010
6	414.00	*.02	0.00		1.460
7	411.00	*.01	7.00		1.110
8	314.00	*.01	14.00		0.440
9	596.00	*.01	11.00		1.110
10	987.00	*.09	17.00		1.722
TOTAL		*.51	107.00		

NO. OF ANIMALS EQUALS 1

MEAN C/MEAN B = .0845

	COL. A (X 10E6)	COL. B (X 10E6)	COL. C (X 10E6)
MEAN	*.0	16.70	19.70
Range	*.7	11.00	32.12
SD	*.29	2.00	9.59
MIN	*.01	0.00	1.20

* SUM OF Y SET OUT TERMS REMOVE

MEAN C/MEAN B = .0610

	COL. A (X 10E6)	COL. B (X 10E6)	COL. C (X 10E6)
MEAN	*.1	10.33	17.00
Range	*.5	11.00	7.00
SD	*.22	1.00	2.00
MIN	*.0	0.00	1.20

STOP

POST-EDITED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SACCHAROMYCES CEREVISIAE

DOSE LEVEL: LD5 = 125 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: NOVEMBER 24, 1972

ANIMAL NUMBER	RAW CFU X 10 ⁵ /1.0ML	B		C		D ACCFU CFU 10 ⁵ /1.0ML
		TOTAL % SCREENED X 10 ⁵ /1.0ML	RECOVERABLES /1.0ML	TOTAL RECOVERABLES /1.0ML	SCREENED X 10 ⁵ /1.0ML	
1	640.00	1.60	12.00	12.00	1.60	18.75
2	211.00	1.21	10.00	10.00	1.21	4.44
3	413.00	1.41	5.00	5.00	1.41	12.11
4	1427.00	1.42	30.00	30.00	1.42	21.13
5	344.00	1.34	14.00	14.00	1.34	10.71
6	912.00	1.31	21.00	21.00	1.31	13.43
7	607.00	1.31	16.00	16.00	1.31	9.63
8	478.00	1.43	19.00	19.00	1.43	12.75
9	241.00	1.21	7.00	7.00	1.21	5.00
TOTAL		5.27	122.00			

NO. OF ANIMALS SCREENED

NO. OF CONTAMINATED EXAMS

MEAN C/MEAN B = 23

	CFL. A (X 10 ⁵)	CFL. C (X 10 ⁵)	CFL. D (X 10 ⁵)
MEAN	1.50	15.00	26.00
MEAN GE	1.21	25.00	40.00
MAX	1.42	30.00	47.00
MIN	1.21	4.00	6.00

NO OUTLIERS

STOP

3. Toxicity Data - Test II

a. Acute - Rat

Compound FDA 71-55, Tartaric Acid, was prepared as a 29% (w/v) solution in 0.85% saline and administered orally to a group of ten male rats (average body weight 349 grams) at a single dose of 5000 mg/kg.

No signs of toxicity or abnormal behavior was observed in the seven-day observation period. One death occurred on day 2. Necropsy revealed no gross effects. All other animals survived and demonstrated no adverse effects. The survivors were killed and on necropsy no gross findings were observed.

The acute oral LD₅₀ for compound FDA 71-55 is considered to be greater than 5000 mg/kg.

b. Subacute - Rat

Compound FDA 71-55 was prepared as a 16.7 to 25.9% (w/v) solution in 0.85% saline. The test solutions were administered to five groups of six male rats (average body weight 413 grams), daily for five days at dosages of 1600, 2000, 2500, 3100 and 3500 mg/kg. Signs of toxicity consisted of depressed activity and respiration starting on day two and disappearing in the two lower dosage groups by day eight. The total period of observation was 14 days when the surviving animals were killed and gross necropsies performed. No abnormal gross findings were observed in the animals that died or those killed at termination. The 14-day subacute oral LD₅₀ for compound 71-55 was estimated to be 1946 mg/kg with confidence limits of 1783 to 2124. The slope was 47.4. The method used for this evaluation was that of Weil, C.S.: Biometrics, Vol. 8, No. 3, pp. 249-263. The LD₅ could not be calculated.



BIONETICS

c. Acute - Mouse

Compound FDA 71-55 was prepared as a 37.5% (w/v) solution in 0.85% saline. The test solutions were administered to seven groups of six male mice (average body weight 30 grams), at a single dose of dosages of 3900, 4200, 4500, 4700, 5000, 5300 and 5600 mg/kg. No signs of toxicity or abnormal behavior was observed in the seven-day observation period except slight reduced activity. All deaths occurred in the first two days of the study. No abnormal gross findings were observed. The acute oral LD₅₀ for compound FDA 71-55 is 4109 mg/kg with 95% confidence limits of 3721 to 4310 mg/kg. The LD₅ is 3606 mg/kg. The statistical method used was the Finney Probit Analysis.

d. Subacute - Mouse

Compound FDA 71-55 was prepared as a 37.5% (w/v) solution in 0.85% saline. The test solutions were administered to five groups of six male mice (average body weight 30 grams), daily for five days at dosages of 2000, 2400, 3000, 3700 and 4500 mg/kg. Signs of toxicity consisting of depression and labored respiration were observed in the five-day period of compound administration or in the observation period which followed. The total period of observation was 14 days when the animals were terminated and gross necropsies performed. No abnormal gross findings were observed. The 14-day subacute oral LD₅₀ for compound FDA 71-55 is 2660 mg/kg with 95% confidence limits of 2314 to 3065. The LD₅ is 2027.



BIONETICS

e. TOXICITY DATA SHEETS
CONTRACT FDA 71-268
COMPOUND FDA 71-55
TARTARIC ACID
TEST II



BIONETICS

ACUTE AND SUBACUTE
TOXICITY DATA
COMPOUND FDA 71-55
RATS

Solvent: 0.85% saline

Dosage Form: Solution

Animals: Acute - Male rats with an average body weight of 349 grams.
All animals were observed for seven days.

Subacute - Male rats with an average body weight of 413 grams.
All animals were observed for 14 days.

Acute Toxicity Data:

<u>Dose mg/kg</u>	<u># Dead/# Animals</u>	<u>Day of Death and Necropsy</u>
5000	1/10	Day 5 (1): No gross findings.

Subacute Toxicity Data:

1600	0/6	None
2000	3/6	Day 3 (1), Day 4 (1) and Day 5 (1): No gross signs.
2500	6/6	Day 3 (2), Day 4 (3) and Day 5 (1): No gross signs.
3100	6/6	Day 3 (6): No gross signs.
3500	6/6	Day 3 (6): No gross signs.



BIONETICS

ACUTE
TOXICITY DATA
COMPOUND FDA 71-55
MICE

Solvent: 0.85% saline

Dosage Form: Solution

Animals: Male mice with an average body weight of 30 grams.
All animals were observed for seven days.

Toxicity Data:

<u>Dose mg/kg</u>	<u># Dead/# Animals</u>	<u>Day of Death and Necropsy</u>
3900	2/6	Day 2 (2): No gross abnormalities.
4200	3/6	Day 2 (3): No gross abnormalities.
4500	5/6	Day 1 (4) and Day 2 (1): No gross abnormalities.
4700	6/6	Day 1 (5) and Day 2 (1): No gross abnormalities.
5000	6/6	Day 1 (4) and Day 2 (2): No gross abnormalities.
5300	6/6	Day 1 (4) and Day 2 (2): No gross abnormalities.
5600	6/6	Day 1 (6): No gross abnormalities.



BIONETICS

SUBACUTE
TOXICITY DATA
COMPOUND FDA 71-55
MICE

Solvent: 0.85% saline

Dosage Form: Solution

Animals: Male mice with an average body weight of 30 grams.
All animals were observed for fourteen days.

Toxicity Data:

<u>Dose mg/kg</u>	<u># Dead/# Animals</u>	<u>Day of Death and Necropsy</u>
2000	1/6	Day 5 (1): No gross abnormalities.
2400	0/6	None
3000	5/6	Day 1 (1), Day 2 (1), Day 3 (1), Day 4 (1) and Day 5 (1): No gross abnormalities.
3700	6/6	Day 2 (6): No gross abnormalities.
4500	6/6	Day 2 (3) and Day 3 (3): No gross abnormalities.



BIONETICS

4. Host-Mediated Assay - Test II

Compound FDA 71-55, Tartaric Acid, was tested at acute dose levels of 500 mg/kg and 5000 mg/kg and at a subacute dose level of 1450 mg/kg. The results with Salmonella TA-1530 and Saccharomyces D3 were negative. The high acute dose and subacute dose appear positive with G-46. However, when the raw data is analyzed, it can be seen that both apparent increases result from single unusually high test animals. If these animals are removed from consideration, the results no longer appear significant.



David Brusick



BIONETICS

a. HOST-MEDIATED ASSAY SUMMARY SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-55

TARTARIC ACID

TEST II



BIONETICS

HOST MEDIATED ASSAY

SUMMARY SHEET

COMPOUND: FDA 71-55

	SALMONELLA		SACCHAROMYCES D-3	
	TA1530	G-46		
	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC
ACUTE				
NC	9.43		1.55	11.03
PC	100.70	10.68	239.43	56.76
AL	0.	0.	0.	0.
AI	4.60	.49	2.25	1.45
AH	5.55	.59	0.	8.61
				.78
SUBACUTE				
NC	1.00		1.55	1.00
SL	0.	0.	0.	0.
SI	0.	0.	0.	0.
SH	0.	0.	7.28	4.70
				0.
IN VITRO				
	TA1530	G-46	D-3	
			% CONC	% SURVIVAL
NC				R X 10E5
PC				

STOP

SRU'S:4

!

!

!

96

HOST MEDIATED ASSAY

SUMMARY SHEET

COMPOUND: FDA 71-55

	SALMONELLA		SACCHAROMYCES D-3	
	TA1530	G-46	MRF (X 10E-5)	MRT/MRC
	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC
ACUTE				
NC	4.40		1.91	
PC	119.12	27.07	88.26	46.22
AL	0.	0.	0.	0.
AI	0.	0.	0.	14.22
ALD5	0.	0.	24.31	12.73
SUBACUTE				
NC	4.40		1.00	
SL	0.	0.	0.	0.
SI	0.	0.	0.	0.
SLD5	6.73	1.53	0.	0.
IN VITRO				
	TA1530	G-46	D-3	
		% CONC	% SURVIVAL	R X 10E5

NC

PC

STOP

SRU'S:5

HOST MEDIATED ASSAY

SUMMARY SHEET

COMPOUND: FDA 71-55

	SALMONELLA		SACCHAROMYCES D-3	
	TA1530	G-46		
	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC
ACUTE				
NC	1.00		1.00	16.05
PC	0.	0.	0.	83.24
AL	0.	0.	0.	0.
AI	0.	0.	0.	0.
ALD5	0.	0.	0.	0.
SUBACUTE				
NC	1.00		1.00	16.05
SL	0.	0.	0.	0.
SI	0.	0.	0.	0.
SLD5	0.	0.	0.	25.32
IN VITRO	TA1530	G-46	D-3	R X 10E5
			% CONC	% SURVIVAL
NC				
PC				

STOP
SRU'S:5

b. HOST-MEDIATED ASSAY DATA SHEETS
CONTRACT FDA 71-268
COMPOUND FDA 71-55
TARTARIC ACID
TEST II



BIONETICS

90 T - SVI-EDE ASSAY REPORT SHEET

CO-PRODUCT: F.D. 71000

ORGANISM: SALMONELLA TAIS3

DOSE LEVEL: NEGATIVE CONTROL + S-LC+

TEST TIME: IN VIVO, 0-14, SUBACUTE

DATE STARTED: MAY 24, 1974

ANIMAL NUM. &	R.F. CFU X 10 ^{5.0} /1.0ML	TOT. CFU X 10 ^{5.0} /1.0ML	B	C	D
				TOTAL NO. MUTANTS X 10 ^{5.0} /1.0ML	RATIO OF F.R. (C.) X 10 ⁻⁶
1	45.40	7.82	78.00	9.96	
2	53.70	8.90	51.00	5.71	
3	57.80	9.63	75.00	7.79	
4	37.40	6.20	47.00	7.56	
5	32.10	7.62	70.00	9.93	
6	1.1.	5.85	61.00	5.61	
7	25.70	6.45	71.00	11.1	
8	36.00	6.80	67.00	14.50	

NO. OF ANIMALS TESTED

TOTAL CFU OUT OF R.F. 50.0ML

	CFU. (X 10 ^{5.0})	CFU. C (X 10 ^{5.0})	CFU. D (X 10 ^{5.0})
1	7.00	57.0	9.43
2	3.43	40.00	4.66
3	5.85	87.00	14.50
4	6.10	67.00	5.70

TESTS BY WITH OUT TIERS REMOVED

	CFU. (X 10 ^{5.0})	CFU. C (X 10 ^{5.0})	CFU. D (X 10 ^{5.0})
1	7.56	64.71	8.71
2	3.43	31.00	5.31
3	5.85	78.00	11.11
4	6.20	47.00	5.70

STOP

POST-CHLORATE ASSAY REPORT SHEET

CO. Pounds: FOB 72-58

ORGANISM: SALMONELLA TA153

DOSE LEVEL: POSITIVE CONTROL - Dose = 100 mg/L G

TREATMENT: IN VIVO, Oral + ACUTE

DATE STARTED: MAY 9, 1974

ANIMAL NUMBER	FAT CFU X 10E7/0.1ML	B	C	D
		TOTAL CFU X 10E6/1.0ML	TOTAL NO. SUSCEPTS X 10E0/1.0ML	MUTATION FRE. (C/B) X 10E-8
1	31.2	5.29	502.00	6.54
2	37.1	6.16	263.00	84.51
3	32.2	5.37	479.00	9.25
4	33.1	5.52	724.00	131.24
5	35.2	5.15	293.00	115.52
6	33.2	5.03	617.00	111.51
7	32.0	5.50	531.00	23.46
8	40.1	6.65	665.00	1.2.49

NO. OF ANIMALS: 8/8

TOTAL CFU OUT OF 8 X 62.5 X 0.1 =

	COL. A (X 10E-8)	COL. C (X 10E0)	COL. D (X 10E-8)
F	5.29	262.00	161.70
G	1.55	365.00	71.72
H	5.68	724.00	131.24
I	5.13	367.00	59.51

* SUMMARY WITH GUT TIERS REMOVED

	COL. A (X 10E-8)	COL. C (X 10E0)	COL. D (X 10E-8)
F	5.29	264.14	165.59
G	1.55	245.00	41.93
H	6.68	724.00	131.24
I	5.13	477.00	59.25

STEP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: INTERMEDIATE - 500 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: MAY 9, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E6/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	43.90	7.32	53.00	7.24
2	41.70	6.95	15.00	2.16
3	50.50	6.42	34.00	4.04
4	38.60	6.43	27.00	4.20
5	43.60	6.10	37.00	4.57
6	47.30	7.88	41.00	5.20
7	44.60	7.43	48.00	6.40
8	56.30	9.38	35.00	3.73
9	49.30	8.22	43.00	5.23
10	45.00	8.13	26.00	3.20

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E6)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	7.83	35.90	4.60
RANGE	2.95	38.00	5.09
MAX	9.38	53.00	7.24
MIN	6.43	15.00	2.16

NO OUTLIERS

STOP
SRU'S: 6

SALT-ENRICHED AGGREGATE REPORT SHEET

CO. PORT 34 FD. 71-955

ORGANISM: SALMONELLA TA153

COSF LEVEL: HIGH - 10^{6.0} CFU/G

TREATMENT: IN VIVO, 0%, ACUTE

DATE STARTED: JUL 9, 1974

ANIMAL NUMBER	60% CFU/g	TOTAL CFU/g	B	C	D
			TOTAL NO. BUTANTS/g	10 ^{6.0} /1.0ML	MUTAT. ON F.E. (C/B) X 10 ^{6.0}
1	47.7	7.95	30.00	~.77	
2	21.70	5.12	54.00	11.4	
3	39.9	6.55	54.00	7.52	
4	57.5	5.00	46.00	4.77	
5	54.6	10.70	30.00	2.83	
6	40.80	6.77	29.00	6.51	
7	34.30	5.00	34.00	6.39	
8	34.20	13.57	26.00	1.87	
9	33.6	5.03	22.00	5.94	
10	31.00	10.63	34.00	5.96	

NO. OF ANIMALS (DOSAGE) 1

	COL. A (X 10 ^{6.0})	COL. C (X 10 ^{6.0})	COL. D (X 10 ^{6.0})
6.0	~.42	40.00	5.55
6.0	3.05	37.00	5.46
6.0	13.03	56.00	11.34
6.0	~.5	26.00	1.87

NO. BUTANTS

STRP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: MAY 24, 1974

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E7/0.6ML	TOTAL CFU X 10E8/1.0ML	TOTAL NO. 10E0/1.0ML	MUTATION FRE (C/B) X 10E-8
1	36.40	6.07	22.00	3.63
2	63.60	10.60	32.00	3.02
3	38.90	6.48	41.00	6.32
4	60.10	10.02	35.00	3.49
5	59.70	9.95	29.00	2.91
6	37.80	6.30	36.00	5.71
7	31.50	5.25	25.00	4.76
8	45.70	7.62	44.00	5.78
9	34.80	5.80	25.00	4.31
10	43.90	7.32	30.00	4.10

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E6)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	7.54	31.90	4.40
RANGE	5.35	22.00	3.41
MAX	10.60	44.00	6.32
MIN	5.25	22.00	2.91

NO OUTLIERS

STOP
SRU'S: 5

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: POSITIVE CONTROL - DMN - 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: MAY 24, 1974

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E7/0.6ML	TOTAL CFU X 10E5/1.0ML	TOTAL NO. 10E0/1.0ML	MUTATION FRE (C/B) X 10E-8
1	41.60	6.93	733.00	105.72
2	35.20	5.87	886.00	151.36
3	39.10	6.52	830.00	127.36
4	40.60	6.80	861.00	126.62
5	32.40	5.40	657.00	121.66
6	37.40	6.23	818.00	131.23
7	40.50	6.75	946.00	80.89
8	39.50	6.58	861.00	133.82
9	39.30	6.55	581.00	88.70
10	33.10	5.52	683.00	123.80

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E6)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.32	747.80	119.12
RANGE	1.53	342.00	70.47
MAX	6.93	886.00	151.36
MIN	5.40	546.00	80.89

NO OUTLIERS

STOP

SRU'S: 5

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: LD₅ - 1450 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: MAY 24, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E6/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	50.90	8.48	32.00	3.77
2	32.40	5.40	41.00	7.59
3	35.40	5.90	36.00	6.10
4	27.60	4.60	44.00	9.57
5	29.30	4.88	33.00	6.76
6	37.20	6.20	41.00	6.61

NO. OF ANIMALS EQUALS 6

NO. OF DEAD ANIMALS EQUALS 2

TOTAL CFU OUT OF RANGE EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	5.91	37.63	6.73
RANGE	3.88	12.00	5.79
MAX	8.48	44.00	9.57
MIN	4.60	32.00	3.77

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	5.60	37.75	6.77
RANGE	1.32	8.00	1.49
MAX	6.20	41.00	7.59
MIN	4.88	33.00	6.10

STOP
SRU's: 6

MUTANT-ASSAY REPORT SHEET

CO. PONET FDO 7-18-68

ORGANISM: SALMONELLA 6446

DOSE LEVEL: NEGATIVE CONTROL = S.1.1.

TREATMENT: IN VIVO, C.1.1 + SUBACUTE

DATE STARTED: APR 31, 1974

ANIMAL NUM.	A		B		TOTAL NO. MUTANTS X	MUTAT. ON PER 10 ⁶ (C/B)
	SEX	CFU X	SEX	CFU X		
1	M	62.00	M	16.12	10.00	1.92
2	M	43.00	M	8.11	14.00	1.73
3	M	63.00	M	16.59	12.00	1.14
4	M	15.91	M	3.9	8.00	1.34
5	M	52.3	M	3.73	13.00	2.46
6	M	35.1	M	5.18	15.00	2.56
7	M	53.3	M	4.68	14.00	1.53
8	M	55.2	M	14.86	18.00	1.61
9	M	3.46	M	0.46	6.00	1.00
10	M	49.71	M	6.79	11.00	1.62

NO. OF ANIMALS TESTED: 1

SEX	C		D	
	CFU X ($\times 10^6$)	CFU. C ($\times 10^6$)	CFU. D ($\times 10^6$)	CFU. D ($\times 10^6$)
M	5.3	12.61	12.65	1.64
M	5.3	12.00	12.00	2.26
M	16.58	15.00	15.00	1.92
M	5.29	5.00	5.00	1.00

NO. OUTLIER: 0

STR:

ROUTINE ASSAY REPORT SHEET

CO. P-IND: FCB 71-56

ORGANISM: SALMONELLA G-46

DOSE LEVEL: POSITIVE CONTROL + DMN = 100 MG/KG

TREATMENT: IN VIVO, OXA, ACUTE

DATE STARTED: MAY 31, 1974

ANIMAL NUM-BR	A	B	C	D
	AVG. CFU X 10 ² /0.1ML	TOTAL CFU X 10 ² /1.0ML	TOTAL NO. COLONIES X 10 ² /1.0ML	MUTANTS X 10 ² /1.0ML
1	57.0	9.50	2499.00	261.67
2	59.4	9.47	3140.00	317.17
3	38.9	6.43	2500.00	306.59
4	46.7	7.57	372.00	110.17
5	42.7	7.12	1720.00	241.60
6	40.6	6.13	2574.00	323.70
7	52.5	10.30	2740.00	243.88
8	54.3	10.12	2349.00	219.19
9	54.3	10.72	1431.00	143.63
10	145.7	24.28	3013.00	123.60

NO. OF ANIMALS TREATED: 10

	CFU. (X 10 ²)	CFU. C (X 10 ²)	CFU. D (X 10 ²)
CON	11.4	2293.5	239.43
OXA	17.8	2261.0	272.43
DMN	24.2	3144.00	384.59
DM	6.43	679.00	110.17

NO OUTLIERS

STOP

DST ASSOCIATED ASSAYS REPORT SHEET

COMPONENT: FDS 7-55

ORGANISM: SALMONELLA 8446

DOSE LEVEL: INTRACEREBRAL + 500 MG/KG

TREATMENT: IN VIVO, DAILY, ACUTE

DATE STARTED: MAY 31, 1974

ANIMAL NUMBER	SAL CFU X 10E7/0.1ML	TOTAL CFU X 10E6/1.0ML	B	C	D
			TOTAL NO. MUTANTS X 10E6/1.0ML	MUT/T(ON FRE (C/S) X 10E-6	
1	56.06	5.33	13.00	1.56	
2	74.3	12.38	17.00	1.37	
3	56.9	9.38	17.00	1.73	
4	54.14	7.72	6.00	.87	
5	54.1	7.2	36.00	3.99	
6	55.8	9.72	10.00	1.03	
7	55.3	15.58	10.00	.58	
8	56.9	10.32	30.00	2.77	
9	141.49	16.32	110.00	6.31	

NO. OF ANIMALS TESTED

TOTAL CFU OUT OF RANGE EQUALS

	COL. A (X 10E-6)	COL. C (X 10E6)	COL. D (X 10E-6)
6.9	11.82	27.67	2.23
7.4	8.57	10.00	5.87
7.4	16.15	110.00	6.31
14	6.33	6.00	.64

* SUMMARY WITH OUTLIERS REMOVED

	COL. A (X 10E-6)	COL. C (X 10E6)	COL. D (X 10E-6)
6.9	11.54	17.38	1.72
7.4	7.15	9.00	3.35
7.4	15.58	36.00	3.99
14	6.33	6.00	.64

STEP

HOST ASSOCIATED ASSAY REPORT SHEET

COMPOUNDS: FUD 71-55

ORGANISM: SALMONELLA G-46

DOSE LEVEL: NEGATIVE CONTROL + SALINE

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: JUNE 2d, 1971

ANIMAL NUMBER	HAB. CFU X 10E7/0.1 ml	TOTAL CFU X 10E3/1.0ML	F	C	D
			TOTAL NO. ROUTENTS X 10E0/1.0ML	MUTATION F.D. (C.E.) X 10E-3	MUTATION X 10E-3
1	33.1	5.52	4.00	1.63	
2	42.7	7.12	10.00	1.41	
3	42.1	7.02	50.00	7.13	
4	32.5	5.43	3.00	.55	
5	31.1	6.52	2.00	.31	
6	28.5	4.75	6.00	1.26	
7	34.6	5.77	15.00	2.6	
8	47.9	7.96	3.00	.38	

NO. OF ANIMALS STUDIED

TOTAL CFU OUT OF RANGE ENCL.

	COL. A (X 10E-3)	COL. C (X 10E-3)	COL. D (X 10E-3)
12. N	5.25	12.25	1.61
13. G	3.3	45.0	.82
14. S	7.98	50.00	7.13
15. N	5.75	2.00	.31

* SUMMARY WITH OUTLIERS REMOVED

	COL. A (X 10E-3)	COL. C (X 10E-3)	COL. D (X 10E-3)
12. N	5.25	5.5	1.16
13. G	3.23	13.00	2.22
14. S	7.98	15.00	2.60
15. N	5.75	2.00	.31

STOP

DRAFT - MUTAGENIC ASSAY REPORT SHEET

COMPOUND: FOA 70-66

ORGANISM: SALMONELLA S-46

DOSE LEVEL: POSITIVE CONTROL - DMN - 160 MG/L

TREATMENTS: IN VIVO, USAL, ACUTE

DATE OF TEST: JUNE 26, 1974

ANIMAL NUMBER	RAW CFU X 10 ² /0.1ML	TOTAL CFU X 10 ² /0.1ML	B	C	D
			TOTAL NO. MUTANTS X 10 ² /1.0ML	MUT. % (C/B)	MUT. % X 10 ²
1	53.70	9.96	1037.00	115.86	
2	46.40	7.73	293.00	37.89	
3	55.71	9.23	764.00	84.45	
4	40.70	6.72	710.00	104.57	
5	44.71	7.45	546.00	39.71	
6	41.50	5.3	329.00	135.93	
7	45.20	7.53	786.00	104.53	
8	36.61	5.93	535.00	99.17	
9	127.20	21.2	732.00	54.95	

NO. OF ANIMALS TESTED

TOTAL CFU OUT OF RAW/0.1ML

	COL. A (X 10 ²)	COL. B (X 10 ²)	COL. C (X 10 ²)	COL. D (X 10 ²)
F-N	9.6	71.09	68.28	
G	15.47	744.00	111.42	
H	21.20	1037.00	135.93	
I-N	5.25	293.00	34.53	

NO OUTLINES

STOP

MUTANT ISOLATED ASSAY REPORT SHEET

COMPOUND: FD. 7inba

S. GANISHT SALMONELLA 5-46

DOSE LEVEL: HIGH - 1000 mg/kg

TREATMENT: IN VIVO, ORA, ACUTE

DATE PLATED: June 28, 1974

ANIMAL NUMBER	CFS CFU X 1027/0.0ML	TOTAL CFS CFU X 1026/1.0ML	C	D
			TOT. NO. MUTANTS X 1020/1.0ML	MUTANT UN PER (C,D) X 10 ⁻⁵
1	24.4	4.07	13.00	3.29
2	17.1	2.85	452.00	158.59
3	21.8	3.51	3.00	.14
4	14.9	2.4	5.00	2.11
5	16.8	2.7	5.00	1.17
6	26.4	4.13	1.00	.24
7	17.4	3.93	10.00	3.45

NO. OF ANIMALS USED

NO. OF DEAD ANIMALS USED

TOTAL CFS OUT OF ANIMAL USED

	CFS (X 10 ⁻⁵)	CFU, C (X 10 ⁻⁵)	CFU, D (X 10 ⁻⁵)
1-N	3.29	68.00	24.81
1-G	1.00	451.00	159.00
1-N	4.13	452.00	151.00
2-N	2.4	1.00	.24

* SUMMARY WITH OUT TEARS REMOVED

	CFU, C (X 10 ⁻⁵)	CFU, C (X 10 ⁻⁵)	CFU, D (X 10 ⁻⁵)
1-N	3.31	6.17	1.93
1-G	1.00	12.67	3.21
1-N	4.13	13.00	3.45
2-N	2.4	1.00	.24

STUP

HOST ASSISTED ASSAY REPORT SHEET

COMPOUND: FOB 70-55

ORGANISM: SALMONELLA G-46

DOSE LEVEL: 10⁵ + 10⁵ MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: MAY 31, 1974

ANIMAL NUMBER	Dose Col X 10 ² /10 ⁵ MG	TOTAL CFU X 10 ⁵ /1.0ML	C		MUT/T ON F+S + C B) X 10 ⁵ -6
			TOTAL NO. MUTANTS X	10 ⁵ /1.0ML	
1	55.1	9.30	12.00		1.2
2	53.3	6.50	6.00		.13
3	55.4	10.97	11.00		1.00
4	77.7	12.97	7.00		.5
5	65.6	16.42	18.00		1.43
6	59.7	9.72	15.00		1.81
7	72.4	12.47	9.00		.7
8	40.5	6.72	382.00		56.59
9	59.2	9.47	15.00		1.32

NO. OF ANIMALS USED:

NO. OF DEAD ANIMALS DIEDS: 3

	COL. A (X 10 ⁵)	COL. C (X 10 ⁵)	COL. D (X 10 ⁵ -6)
C. M.	1.19	52.75	7.28
C. G.	6.12	37.60	56.35
C. A.	12.97	352.00	56.59
C. D.	6.72	6.00	.54

* SUMMARY AT THE OUT TIERS REMOVE

	COL. A (X 10 ⁵)	COL. C (X 10 ⁵)	COL. D (X 10 ⁵ -6)
C. M.	1.51	11.63	1.12
C. G.	4.12	12.00	1.16
C. A.	12.97	15.00	1.64
C. D.	6.68	6.00	.54

STEP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: NEGATIVE CONTROL + SALINE

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: AUGUST 9, 1974

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOMB/CFU SCREENED X 10E-5
1	302.00	.30	5.00	16.56
2	729.00	.73	6.00	8.23
3	566.00	.57	8.00	14.13
4	774.00	.77	4.00	5.17
5	1326.00	1.33	21.00	15.84
6	663.00	.66	4.00	6.03
7	894.00	.89	9.00	10.07
8	632.00	.63	15.00	23.73
9	886.00	.89	4.00	4.50
TOTAL		6.77	76.00	

NO. OF ANIMALS EQUALS 9

TOTAL SCREENED OUT OF RANGE EQUALS 1

MEAN C/MEAN B = 11.22

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.75	8.44	11.59
RANGE	1.02	17.00	19.23
MAX	1.33	21.00	23.73
MIN	.30	4.00	4.50

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 9.93

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.77	7.63	10.07
RANGE	1.02	17.00	12.09
MAX	1.33	21.00	16.56
MIN	.30	4.00	4.50

STOP
SRU'S:6

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: POSITIVE CONTROL - EMS - 350 MG/KG I.M.

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: AUGUST 9, 1974

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOMB./CFU SCREENED X 10E-5
1	463.00	.48	66.00	136.65
2	1414.00	1.41	80.00	56.56
3	1813.00	1.81	92.00	50.74
4	2532.00	2.53	80.00	31.60
5	1096.00	1.10	59.00	53.83
6	1960.00	1.96	67.00	34.18
7	915.00	.91	85.00	92.90
8	2204.00	2.20	56.00	25.41
9	939.00	.91	95.00	104.51
10	1802.00	1.80	78.00	43.29
TOTAL		15.13	756.00	

NO. OF ANIMALS EQUALS 10

MEAN C/MEAN B = 50.11

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	1.51	75.60	62.97
RANGE	2.05	39.00	111.24
MAX	2.53	95.00	136.65
MIN	.48	56.00	25.41

NO OUTLIERS

STOP
SRU'S:5
!

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: INTERMEDIATE - 500 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: AUGUST 9, 1974

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOM/CFU SCREENED X 10E-5
1	505.00	.50	17.00	33.66
2	443.00	.44	10.00	22.57
3	566.00	.57	9.00	15.90
4	1049.00	1.05	8.00	7.63
5	1233.00	1.23	8.00	6.49
6	613.00	.61	12.00	19.58
7	849.00	.85	9.00	10.60
8	1240.00	1.24	16.00	12.90
9	534.00	.53	11.00	20.60
TOTAL		7.03	100.00	

NO. OF ANIMALS EQUALS 9

TOTAL SCREENED OUT OF RANGE EQUALS 1

MEAN C/MEAN B = 14.22

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.78	11.11	16.66
RANGE	.60	9.00	27.18
MAX	1.24	17.00	33.66
MIN	.44	8.00	6.49

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 12.72

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.82	10.38	14.53
RANGE	.80	8.00	16.09
MAX	1.24	16.00	22.57
MIN	.44	8.00	6.49

STOP
SRU'S:6

CHART OF THE FISHES OF THE GULF OF MEXICO

CO. 10 MILE FISH TRAP

CHART OF THE GULF OF MEXICO

TEST LEVELS AND TIME DAY 1000-1200 HRS.

TESTS FOR THE VARIOUS SPECIES TESTED

TEST NO. TEST DATE	TEST CEFALO 1000-1200 HRS.	TEST		TEST CEFALO 1000-1200 HRS.
		L.T.	G.C.	
1	1000-1200	1.7	7.00	6.64
2	11.40-12	1.1	11.04	5.61
3	1100-1200	1.11	12.00	1.11
4	2600-1200	1.1	11.00	1.00
5	572, 12	1.1	11.00	1.00
6	9000-12	1.1	11.00	1.00
7	59, 1200	1.1	11.00	1.00
8	217, 12	1.1	11.00	1.00
9	157, 1200	1.1	11.00	1.00

TEST NO. 1000-1200 HRS.

NO. OF ANEMOLES TESTED
NO. OF NEGATIVE ANEMOLES TESTED

TEST CEFALO TEST 1000-1200

TEST NO. TEST DATE	TEST		TEST CEFALO (1000-1200)	TEST CEFALO (1000-1200)
	L.T.	G.C.		
1	1.1	1.00	1.00	1.00
2	1.1	1.00	1.00	1.00
3	1.1	1.00	1.00	1.00
4	1.1	1.00	1.00	1.00

NO. OUT TEST

ST P

15) CO-FOUNDRY FDI 71-60 ANIMALS TESTED BY AGT

CO-FOUNDRY FDI 71-60

ANIMALS TESTED BY AGT

DOSE LEVEL: POSITIVE TESTING AND TEST AND TEST

TREATMENTS IN VENUS DATA TEST

JULY 1971 - AUGUST 1974

ANIMAL NUMBER	TEST CFSU X 10281,000	TEST CFSU		TEST CFSU 10281,000	TEST CFSU 10281,000
		C	G		
1	911,000	1.1	0.7±0.0	92±0	92±0
2	99,000	1.3	4.6±0.0	24±0	24±0
3	141,000	1.4±0	1.6±0.0	2.4±0	2.4±0
4	122,000	1.5±0	1.1±0.0	1.4±0.0	1.4±0.0
5	1271,000	1.4±0	1.5±0.0	1.5±0.0	1.5±0.0
6	50,000	1.0	1.0±0.0	1.0±0.0	1.0±0.0
7	500,000	1.0	0.1±0.0	0.1±0.0	0.1±0.0
8	241,000	1.0±0	0.1±0.0	0.1±0.0	0.1±0.0
9	1655,000	1.6±0	0.1±0.0	0.1±0.0	0.1±0.0

TOTAL:

NO. OF ANIMALS TESTED
TOTAL SUBMITTED BUT NOT TESTED

MEAN CFSU TEST % TEST %

	C	G	C	G
	(1.4±0)	(0.7±0)	(2.1±0)	(0.1±0)
	1.4	1.0	2.1	0.1
	1.6	1.5	1.9	0.2
	1.7	1.6	1.7	0.2
	1.8	1.7	1.7	0.2
	1.9	1.8	1.8	0.2

NO. OUT TESTED

STEP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FLA 71-55

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: HIGH = 5000 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: MAY 30, 1974

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOND/CFU SCREENED X 10E-5
1	1499.00	1.50	15.00	10.01
2	229.00	.23	3.00	13.10
3	1060.00	1.08	10.00	9.26
4	1311.00	1.31	8.00	6.10
5	654.00	.65	7.00	10.70
6	766.00	.77	9.00	11.72
7	1312.00	1.31	7.00	5.34
TOTAL		6.85	59.00	

NO. OF ANIMALS EQUALS 7

NO. OF DEAD ANIMALS EQUALS 1

TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = 8.61

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.98	6.43	9.46
RANGE	1.27	12.00	7.77
MAX	1.50	15.00	13.10
MIN	.23	3.00	5.34

NO OUTLIERS

STOP
SRU'S:.6

MORT-SCINTILLO ASSAY REPORT SHEET

CO. POUND: FOB 71-58

ORGANISM: SACCHAROMYCES CEREVISIAE

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VITRO, DRY, SUBACUTE

DATE STARTED: MAY 3, 1974

ANIMAL NUMBER	Dose µg CFU X 10 ³ /1.0ML	B		C		D RECOMB/CFU SC REARED X 10 ⁻³
		T.T. X CFU SC REARED X 10 ³ /1.0ML	RECOMBANTS /1.0ML	TOTAL RECOMBANTS /1.0ML	RECOMBANTS /1.0ML	
1	4.41	•.9		15.00	33.99	
2	424.19	•.9		8.00	18.8	
3	759.11	•.76		11.00	14.49	
4	895.21	•.9		8.00	19.53	
5	631.16	•.5		5.00	12.0	
6	1.1.13	•.46		15.00	31.13	
7	4.7.3	•.44		11.00	25.17	
8	17.5.7	1.75		15.00	3.61	
9	652.13	•.63		13.00	19.34	
10	635.63	•.67		11.00	16.7	
TOTAL		7.16		114.00		

NO. OF ANIMALS COUNTED = 1

RECOMB/CFU X 10⁻³ = 16.7

	COL. A (X 10 ⁻³)	COL. B (X 10 ⁻³)	COL. C (X 10 ⁻³)	COL. D (X 10 ⁻³)
15-N	.72	11.51	18.76	
14-G	1.32	7.00	22.89	
14-C	1.70	15.00	31.17	
11	•.42	8.00	8.00	

NO OUTLIER(S)

STDP

HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: POSITIVE CONTROL -EMS - 350 MG/KG 1.M.

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: MAY 3, 1974

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOMB/CFU SCREENED X 10E-5
1	1056.00	1.06	73.00	69.13
2	279.00	.58	52.00	89.81
3	646.00	.65	74.00	114.55
4	431.00	.43	44.00	102.09
5	993.00	.99	54.00	54.38
6	655.00	.65	67.00	102.29
7	1050.00	1.05	66.00	62.86
8	945.00	.94	73.00	77.25
9	805.00	.80	93.00	115.53
TOTAL		7.16	596.00	

NO. OF ANIMALS EQUALS 9

NO. OF CONTAMINATED EQUALS 1

MEAN C/MEAN B = 03.24

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.80	66.22	87.54
RANGE	.62	49.00	61.15
MAX	1.06	93.00	115.53
MIN	.43	44.00	54.38

NO OUTLIERS

STOP

SKUS:6

!SWITCH IN\$!KS18

!SAL

HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-55

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: LD5 = 1450 MG/KG

TREATMENT: IN VIVO, OHAL, SUBACUTE

DATE STARTED: MAY 3, 1974

ANIMAL NUMBER	A	B	C	D
	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOMB/CFU SCREENED X 10E-5
1	507.00	.51	14.00	27.61
2	639.00	.64	19.00	29.73
3	669.00	.67	24.00	35.87
4	715.00	.71	22.00	30.77
5	544.00	.54	12.00	22.06
6	657.00	.66	22.00	33.49
7	564.00	.56	12.00	21.28
8	1551.00	1.55	23.00	14.63
TOTAL		5.65	148.00	

NO. OF ANIMALS EQUALS 8

TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = 25.32

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.73	18.50	26.96
RANGE	1.04	12.00	21.05
MAX	1.95	24.00	35.87
MIN	.51	12.00	14.63

NO OUTLIERS

STOP
 SKIPS: 6
 !SWITCH INSTR20
 SAL

5. Cytogenetics - Test I

a. In vivo

(1) Acute study

The negative control group and all three dosage level groups of the test compound contained no aberrations. The positive control group exhibited the expected severe chromosomal damage due to the positive control compound. The mitotic indices were within normal limits.

(2) Subacute study

The negative control group contained no aberrations. The low level dosage group of the test compound contained one cell with a break. The mitotic indices were somewhat depressed in the intermediate and LD₅ dosage level groups of the test compound.

b. In vitro

The negative control group contained two cells with bridges. The medium and high level dosage groups of the test compound each contained one cell with a bridge. The positive control group aberrations were within normal limits.



BIONETICS

c. CYTOGENETIC SUMMARY SHEETS
CONTRACT FDA 71-268
COMPOUND FDA 71-55
TARTARIC ACID
TEST I



BIONETICS

TARTARIC ACID
FDA 71-55
ACUTE STUDY
METAPHASE SUMMARY SHEET

<u>Compound</u>	<u>Dosage (mg/kg)</u>	<u>Time*</u>	<u>No. of Animals</u>	<u>No. of Cells</u>	<u>Mitotic Index %***</u>	<u>% Cells with Breaks</u>	<u>% Cells with Reunion</u>	<u>% Cells Other Aber.**</u>	<u>% Cells with aber.++</u>
Negative Control	saline	6	3	150	4	0	0	0	0
		24	3	150	7	0	0	0	0
		48	3	150	10	0	0	0	0
Low Level	1.25	6	5	250	6	0	0	0	0
		24	5	250	6	0	0	0	0
		48	5	250	5	0	0	0	0
Intermediate Level	12.5	6	5	250	6	0	0	0	0
		24	5	250	5	0	0	0	0
		48	5	250	6	0	0	0	0
LD ₅	125.0	6	5	208	5	0	0	0	0
		24	5	250	4	0	0	0	0
		48	5	250	8	0.4	0	0	0.4
Positive Control TEM	0.3	48	5	250	4	5	20	4.8(f)	33

* Time of kill after injection (hours).

** Cells that have polypliody (P), pulverization (pp), fragments (f) or greater than 10 aberrations (a).

*** Percent of cells in mitosis: 500 cells observed/animal.

++ Duplicate aberrations in a single cell will cause this to be a % less than a summation of the % aberration seen.

TARTARIC ACID
FDA 71-55
SUBACUTE STUDY
METAPHASE SUMMARY SHEET

<u>Compound</u>	<u>Dosage*</u> <u>(mg/kg)</u>	<u>No. of</u> <u>Animals</u>	<u>No. of</u> <u>Cells</u>	<u>Mitotic</u> <u>Index %***</u>	<u>% Cells</u> <u>with</u> <u>Breaks</u>	<u>% Cells</u> <u>with</u> <u>Reunion</u>	<u>% Cells</u> <u>Other</u> <u>Aber.**</u>	<u>% Cells</u> <u>with</u> <u>aber.</u>
Negative Control	saline	3	150	8	0	0	0	0
Low Level	1.25	5	200	5	0.5	0	0	0.5
Intermediate Level	12.5	5	185	3	0	0	0	0
LD5	125.0	5	145	3	0	0	0	0

* Dosage 1X/day X 5 days.

** Cells that have polyploidy (P), pulverization (pp), fragments (f) or greater than 10 aberrations (a).

*** Percent of cells in mitosis: 500 cells observed/animal.

TARTARIC ACID
FDA 71-55
ANAPHASE SUMMARY SHEET

<u>Compound</u>	<u>Dosage</u> (mcg/ml)	<u>Mitotic</u> <u>Index</u> **	<u>No. of</u> <u>Cells</u>	<u>% Cells</u> <u>with</u> <u>Acentric</u> <u>Frag.</u>	<u>% Cells</u> <u>with</u> <u>Bridges</u>	<u>% Multipolar</u> <u>Cells</u>	<u>% Cells</u> <u>Other</u> <u>Aber.*</u>	<u>% Cells</u> <u>with</u> <u>aber.++</u>
Low Level	1.0	1	100	0	0	0	0	0
Medium Level	10.0	1	100	0	1	0	0	1
High Level	100.0	1	100	0	1	0	0	1
Negative Control	saline	1	100	0	2	0	0	2
Positive Control (TEM)	0.1	1	100	6	23	3	0	32

* Cells that have polyploidy (P), pulverization (pp), fragments (f) or greater than 10 aberrations (a).

** Percent of cells in mitosis: 200 cells observed/dose level.

++ Duplicate aberrations in a single cell will cause this to be a % less than a summation of the % aberration seen.

6. Cytogenetics - Test II

Compound FDA 71-55, Tartaric Acid, was administered to male rats with an average body weight of 300-325 grams. In the acute study (single dose) dosage levels employed were 4000 mg/kg (high) and 500 mg/kg (intermediate) and in the subacute study (five doses) the rats received a dose of 1450 mg/kg (high). Metaphase chromosome spreads were prepared from the bone marrow cells of these animals and scored for chromosomal aberrations. Neither the variety nor the number of these aberrations differed significantly from the negative controls; hence, compound FDA 71-55, Tartaric Acid, can be considered non-mutagenic as measured by the cytogenetic test.

Worthy of additional note is the observation that the mitotic index is lower in both acute high and intermediate samples than in the negative controls.



BIONETICS

CYTOGENETIC SUMMARY SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-55

TARTARIC ACID

TEST II



BIONETICS

TARTARIC ACID
FDA 71-55
ACUTE STUDY
METAPHASE SUMMARY SHEET

<u>Compound</u>	<u>Dosage (mg/kg)</u>	<u>Time*</u>	<u>No. of Animals</u>	<u>No. of Cells</u>	<u>Mitotic Index %++</u>	<u>No. of Cells w/ Breaks**</u>	<u>No. of Cells w/ Reunion**</u>	<u>No. of Cells With Other Aberrations***</u>	<u>No. of Cells w/ Aber.**</u>
Intermediate	500	6	5	211	2.67	1(0.47)	0	0	1(0.47)
		24	5	221	1.73	0	0	0	0
		48	5	250	3.00	0	1(0.4)	0	1(0.4)
High	4000	6	4	139	1.86	0	0	0	0
		24	5	250	2.85	0	1(0.4)	0	1(0.4)
		48	5	250	2.50	0	0	2pp(0.8)	2(0.8)
Negative Control	Saline	6	3	150	4.15	0	0	0	0
		24	3	150	3.45	0	0	1pp(0.66)	1(0.66)
		48	3	150	4.73	0	0	0	0
Positive Control (TEM)	0.3	24	5	250	1.53	3(1.2)	37(14.8)	>13(5.2) 11f(4.4)	57(22.8)

* Time of kill after dosing (hours).

** Numbers in () are percent aberrations per total cells counted.

+ Symbols: > = greater than 10 aberrations per cell; f = fragments; pp = polyploidy; and pu = pulverization.

++ Based on a count of at least 500 cells per animal.

TARTARIC ACID
FDA 71-55
SUBACUTE STUDY
METAPHASE SUMMARY SHEET

<u>Compound</u>	<u>Dosage (mg/kg)</u>	<u>No. of Animals</u>	<u>No. of Cells</u>	<u>Mitotic Index %++</u>	<u>No. of Cells w/ Breaks**</u>	<u>No. of Cells w/ Reunion**</u>	<u>No. of Cells w/ Other Aber.**</u>	<u>No. of Cells w/ Aber.**</u>
High	1450	5	250	3.00	0	0	0	0
Negative Control	Saline	3	150	4.60	0	0	0	0

** Numbers in () are percent aberrations per total cells counted.

++ Based on a count of at least 500 cells per animal.

7. Dominant Lethal Assay - Test I

a. Acute study

In general, significant differences between the negative control and experimental groups were shown in a few instances at various weeks throughout the parameter. Of note is the significant increase in average resorptions shown for the low dose group at week 8.

b. Subacute study

Significant differences between the negative control and experimental groups were shown in a few instances. However, no strong indications of change were seen.



BIONETICS

C. DOMINANT LETHAL ASSAY SUMMARY SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-55

TARTARIC ACID

TEST I

(Through error the computer had been programmed so
that a double rounding off of numbers occurred at
print out. In no way does this alter the statistics
which are calculated on the full unrounded numbers.)



BIONETICS

TABLE I
COMPOUND 55 STUDY ACUTE

LOG DOSE	ARITH DOSE	FERTILITY INDEX					
		WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.250 MG/KG	DOSE LEVEL 12.500 MG/KG	DOSE LEVEL 125.000 MG/KG
1	95/139=0.69	14/20=0.70		12/20=0.60	11/20=0.55	14/20=0.70	14/20=0.70
2	103/139=0.75	16/20=0.80		16/20=0.80	11/20=0.55	18/20=0.90	15/20=0.75
3	104/138=0.76	15/20=0.75		18/19=0.95	10/20=0.50*	18/20=0.90	15/20=0.75
4	118/140=0.85	18/20=0.90		13/20=0.65*	12/20=0.60**	16/20=0.80	14/20=0.70
5	110/139=0.80	17/20=0.85		15/20=0.75	13/20=0.65	17/20=0.85	15/18=0.84
6	109/139=0.79	19/20=0.95		16/20=0.80	14/20=0.70*	15/20=0.75	17/20=0.85
7	117/138=0.85	16/19=0.85		17/20=0.85	15/20=0.75	18/19=0.95	17/19=0.90
8	116/140=0.83	17/20=0.85		17/20=0.85	16/19=0.85	17/20=0.85	15/20=0.75

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (READING OF COLUMN)

TABLE II
COMPOUND 55 STUDY ACUTE

AVERAGE NUMBER OF IMPLANTATIONS PER PREGNANT FEMALE

LOG * ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.250 MG/KG	DOSE LEVEL 12.500 MG/KG	DOSE LEVEL 125.000 MG/KG	POSITIVE CONTROL
	1	1180/ 95=12.4	171/14=12.2	143/12=11.9	135/11=12.3	169/14=12.1	166/14=11.9
	2	1223/103=11.9	204/16=12.8	185/16=11.6	133/11=12.1	223/18=12.4	184/15=12.3
† † & †	3	1276/104=12.3	159/15=10.6 *@D	208/18=11.6	122/10=12.2@I	231/18=12.8@I	173/15=11.5
† & †	4	1408/118=11.9	218/18=12.1	159/13=12.2	155/12=12.9 @I	170/16=10.6	172/14=12.3
†	5	1290/110=11.7	176/17=10.4	193/15=12.9*@@I @I	158/13=12.2@I	219/17=12.9*@@I *@I	172/15=11.5
5	6	1292/109=11.9	220/19=11.6	195/16=12.2	175/14=12.5	180/15=12.0	204/17=12.0
	7	1436/117=12.3	190/16=11.9	207/17=12.2	170/15=11.3 @D	216/18=12.0	209/17=12.3
	8	1353/116=11.7	198/17=11.7	204/17=12.0	189/16=11.8	187/17=11.0	186/15=12.4

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

S AND * = TWO-TAILED TEST

I AND D = ONE-TAILED TEST

ONE I, S, @, * = SIGNIFICANT AT P LESS THAN 0.05

TWO I, S, @, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

I, S SIGNIFICANT RELATIONSHIP WITH ARITHM OR LOG DOSE (HEADINGS OF COLUMN)

TABLE III
COMPOUND 55 STUDY ACUTE

AVERAGE CORPORA LUTEA PER PREGNANT FEMALE

LOG ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.250 MG/KG	DOSE LEVEL 12.500 MG/KG	DOSE LEVEL 125.000 MG/KG	POSITIVE CONTROL
	1	1322/ 95=13.9	132/14=13.0	154/12=12.8	155/11=14.1	186/14=13.3	190/14=13.6
	2	1359/103=13.2	229/16=14.3	218/16=13.6	154/11=14.0	261/18=14.5	202/15=13.5
	3	1364/104=13.1	201/15=13.4	244/18=13.6	135/10=13.5	257/18=14.3	222/15=14.8
	4	1532/118=13.0	252/18=14.0	176/13=13.5	165/12=13.8	205/16=12.8	189/14=13.5
	5	1428/110=13.0	220/17=12.9	213/15=14.2	172/13=13.2	234/17=13.8	192/15=12.9
	6	1446/109=13.3	243/19=12.8	218/16=13.6	184/14=13.1	202/15=13.5	233/17=13.7
	7	1543/117=13.2	224/16=14.0	223/17=13.1	200/15=13.3	248/18=13.8	233/17=13.7
	8	1599/116=13.8	224/17=13.2	226/17=13.3	202/16=12.6	215/17=12.7	197/15=13.1

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, @, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, @, * = SIGNIFICANT AT P LESS THAN 0.01

*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL

!,@ SIGNIFICANT RELATIONSHIP WITH ARITHM OR LOG DOSE (HEADING OF COLUMN)

TABLE IV
COMPOUND 55 STUDY ACUTE

AVERAGE PREIMPLANTATION LOSSES PER PREGNANT FEMALE

LOG ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.250 MG/KG	DOSE LEVEL 12.500 MG/KG	DOSE LEVEL 125.000 MG/KG	POSITIVE CONTROL
1	1	142/ 95= 1.5	11/14= 0.8	11/12= 0.9	29/11= 1.8	17/14= 1.2	24/14= 1.7
2	2	136/103= 1.3	25/16= 1.6	33/16= 2.1	21/11= 1.9	38/18= 2.1	18/15= 1.2
3	3	86/104= 0.9	42/15= 2.8 **@@I	36/18= 2.0	13/10= 1.3	26/18= 1.4	49/15= 3.3 **@I
4	4	124/119= 1.1	34/18= 1.9 *@I	17/13= 1.3	10/12= 0.8@D	35/16= 2.2 @I	17/14= 1.2
5	5	138/110= 1.3	44/17= 2.6	20/15= 1.3	14/13= 1.1	15/17= 0.9	20/15= 1.3
6	6	154/109= 1.4	23/19= 1.2	23/16= 1.4	9/14= 0.6	22/15= 1.5	29/17= 1.7
7	7	107/117= 0.9	34/16= 2.1 **@@I	16/17= 0.9@D	30/15= 2.0	32/18= 1.8	24/17= 1.4 @I
8	8	246/116= 2.1	26/17= 1.5	22/17= 1.3	13/16= 0.8 *@D	28/17= 1.7	11/15= 0.7 *@@D

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, *, @ = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, @, *, @ = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

!, ! SIGNIFICANT RELATIONSHIP WITH ARITHM OR LOG DOSE (HEADINGS OF COLUMN)

TABLE V
COMPOUND 55 STUDY ACUTE

AVERAGE RESORPTIONS (DEAD IMPLANTS) PER PREGNANT FEMALE

LOG DOSE	MEAN	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.250 MG/KG	DOSE LEVEL 12.500 MG/KG	DOSE LEVEL 125.000 MG/KG	POSITIVE CONTROL
1	20/ 95=0.22	8/14=0.58		7/12=0.59	0/11=0.0	*@#D 11/14=0.79	18/14=1.29
2	43/103=0.42	10/16=0.63		4/16=0.25	3/11=0.28	15/18=0.84	32/15=2.14@I
3	53/104=0.51	8/15=0.54		9/18=0.50	5/10=0.50	16/18=0.89	22/15=1.47 @I
4	53/118=0.45	9/18=0.50		6/13=0.47	8/12=0.67	7/16=0.44	11/14=0.79
5	60/110=0.55	14/17=0.83		14/15=0.94	10/13=0.77	12/17=0.71	18/15=1.20 @I
6	45/109=0.42	13/19=0.69		7/16=0.44	8/14=0.58	13/15=0.87	16/17=0.95
7	53/117=0.46	12/16=0.75		12/17=0.71	7/15=0.47	13/18=0.73	8/17=0.48
8	65/116=0.57	6/17=0.36		22/17=1.30@I	11/16=0.69	6/17=0.36	11/15=0.74

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

S AND * = TWO-TAILED TEST

@ AND # = ONE-TAILED TEST

ONE @, #, *, * = SIGNIFICANT AT P LESS THAN 0.05

TWO @, #, *, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

@, # SIGNIFICANT RELATIONSHIP WITH LOG Dose (HEADINGS OF COLUMNS)

TABLE VI
COMPOUND 55 STUDY ACUTE

PROPORTION OF FEMALES WITH ONE OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.250 MG/KG	DOSE LEVEL 12.500 MG/KG	DOSE LEVEL 125.000 MG/KG	POSITIVE CONTROL
1	1	19/ 95=0.20	5/14=0.36	5/12=0.42	0/11=0.0 *	8/14=0.58 **	9/14=0.65 **
11	2	32/103=0.32	6/16=0.38	2/16=0.13	3/11=0.28	11/18=0.62 *	11/15=0.74 * **
11	3	32/104=0.31	7/15=0.47	5/19=0.28	4/10=0.40	9/18=0.50	9/15=0.60 *
1	4	39/118=0.34	7/18=0.39	5/13=0.39	2/12=0.17	7/16=0.44	4/14=0.29
1	5	36/110=0.33	9/17=0.53	7/15=0.47	7/13=0.54	8/17=0.48	9/15=0.60 *
1	6	36/109=0.34	8/19=0.43	5/16=0.32	5/14=0.36	8/15=0.54	8/17=0.48
1	7	38/117=0.33	8/16=0.50	8/17=0.48	4/15=0.27	9/18=0.50	8/17=0.48
1	8	44/116=0.38	6/17=0.36	11/17=0.65 *	5/16=0.32	6/17=0.36	7/15=0.47

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (READING OF COLUMN)

TABLE VII
COMPOUND 55 STUDY ACUTE

PROPORTION OF FEMALES WITH TWO OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.250 MG/KG	DOSE LEVEL 12.500 MG/KG	DOSE LEVEL 125.000 MG/KG	POSITIVE CONTROL
1	1/	95=0.02	2/14=0.15 **	2/12=0.17 **	0/11=0.0	3/14=0.22 **	5/14=0.36 **
2		11/103=0.11	3/16=0.19	1/16=0.07	0/11=0.0	3/18=0.17	4/15=0.27
3		16/104=0.16	1/15=0.07	2/18=0.12	1/10=0.10	5/18=0.28	3/15=0.20
4		11/118=0.10	1/18=0.06	1/13=0.08	1/12=0.09	0/16=0.0	2/14=0.15
5		16/110=0.15	2/17=0.12	6/15=0.40 *	3/13=0.24	3/17=0.18	3/15=0.20
6		9/109=0.09	4/19=0.22	1/16=0.07	3/14=0.22	3/15=0.20	3/17=0.18
7		11/117=0.10	3/16=0.19	4/17=0.24	2/15=0.14	3/18=0.17	0/17=0.0
8		18/116=0.16	0/17=0.0	3/17=0.18	3/16=0.19	0/17=0.0	3/15=0.20

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITHM OR LOG DOSE (HEADING OF COLUMN)

TABLE VIII
COMPOUND 55 STUDY ACUTE

DEAD IMPLANTS / TOTAL IMPLANTS

WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.250 MG/KG	DOSE LEVEL 12.500 MG/KG	DOSE LEVEL 125.000 MG/KG	POSITIVE CONTROL
1	20/1180=0.02	8/171=0.05	7/143=0.05	0/135=0.0	* ^a D ** ^a D 11/169=0.07	18/166=0.11 *** ^a I
2	43/1223=0.04	10/204=0.05	4/185=0.03	3/133=0.03	15/223=0.07	32/184=0.18 ^a I ^a I
3	53/1276=0.05	8/159=0.06	9/208=0.05	5/122=0.05	16/231=0.07	22/173=0.13
4	53/1408=0.04	9/218=0.05	6/159=0.04	8/155=0.06	7/170=0.05	11/172=0.07
5	60/1290=0.05	14/176=0.08	14/193=0.08	10/158=0.07	12/219=0.06	18/172=0.11
6	45/1292=0.04	13/220=0.06	7/195=0.04	8/175=0.05	13/180=0.08	16/204=0.08
7	53/1436=0.04	12/190=0.07	12/207=0.06	7/170=0.05	13/216=0.07	8/209=0.04
8	65/1353=0.05	6/198=0.04	22/204=0.11	11/189=0.06	6/187=0.04	11/186=0.06

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT DIFFERENCES USING THE HISTORICAL CONTROL GROUP

* = TWO-TAILED TEST

^a = ONE-TAILED TEST

ONE *,^a = SIGNIFICANT AT P LESS THAN 0.05

TWO *,^a = SIGNIFICANT AT P LESS THAN 0.01

^a,^b SIGNIFICANTLY DIFFERENT FROM CONTROL

TABLE I
COMPOUND 55 STUDY SUBACUTE
FERTILITY INDEX

LOG ¹ ARITH DOSE DOSE	HISTORICAL WEEK	NEGATIVE CONTROL	DOSE LEVEL		
			1.250 MG/KG	12.500 MG/KG	125.000 MG/KG
1	92/139=0.67	12/20=0.60	10/20=0.50	12/20=0.60	12/20=0.60
2	104/140=0.75	14/20=0.70	16/20=0.80	13/20=0.65	17/20=0.85
3	101/139=0.73	18/20=0.90	16/20=0.80	15/19=0.79	13/20=0.65
4	104/134=0.78	16/20=0.80	17/20=0.85	14/20=0.70	15/19=0.79
5	108/139=0.78	14/18=0.78	17/20=0.85	16/20=0.80	17/20=0.85
6	120/139=0.87	16/20=0.80	18/20=0.90	20/20=1.00*	15/20=0.75
7	117/135=0.87	18/20=0.90	17/20=0.85	17/20=0.85	15/20=0.75

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING
THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE II
COMPOUND 55 STUDY SUBACUTE

AVERAGE NUMBER OF IMPLANTATIONS PER PREGNANT FEMALE

LOG ARITH DOSE WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL		
			1.250 MG/KG	12.500 MG/KG	125.000 MG/KG
1	1084 / 92=11.8	147/12=12.3	110/10=11.0	157/12=13.1	152/12=12.7 @I
2	1301/104=12.5	173/14=12.4	201/16=12.6	171/13=13.2	207/17=12.2
3	1196/101=11.8	209/18=11.6	180/16=11.3	172/15=11.5	160/13=12.3
4	1221/104=11.7	193/16=12.1	203/17=11.9	178/14=12.7	167/15=11.1 @I
5	1299/108=12.0	163/14=11.6	212/17=12.5	195/16=12.2	195/17=11.5
6	1437/120=12.0	189/16=11.8	194/18=10.8 *@D	238/20=11.9	184/15=12.3
7	1352/117=11.6	214/18=11.9	218/17=12.8 @I	191/17=11.2	166/15=11.1

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING
THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, *, *' = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, *, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

&, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE III
COMPOUND 55 STUDY SUBACUTE

AVERAGE CORPORA LUTEA PER PREGNANT FEMALE

LOG ARITH DOSE DOSE	HISTORICAL WEEK	NEGATIVE CONTROL	DOSE LEVEL		
			1.250 MG/KG	12.500 MG/KG	125.000 MG/KG
1	1218/ 92=13.2	167/12=13.9	127/10=12.7	162/12=13.5	174/12=14.5
2	1395/104=13.4	204/14=14.6	244/16=15.3 *@I	192/13=14.8 @I	243/17=14.3
3	1290/101=12.8	245/18=13.6	232/16=14.5 *@I	201/15=13.4	176/13=13.5
4	1285/104=12.4	214/16=13.4	240/17=14.1 @I	187/14=13.4 @I	198/15=13.2
5	1366/108=12.7	188/14=13.4	234/17=13.8 @I	215/16=13.5 *@I	216/17=12.7
6	1580/120=13.2	229/16=14.3	233/18=12.9	265/20=13.3	211/15=14.1
7	1474/117=12.6	237/18=13.2	232/17=13.7 @I	222/17=13.1	199/15=13.3

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, *, *' = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, @, *, *' = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

!, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE IV
COMPOUND 55 STUDY SUBACUTE

AVERAGE PREIMPLANTATION LOSSES PER PREGNANT FEMALE

LOG ARITH DOSE	WEEK			DOSE LEVEL 1,250 MG/KG	DOSE LEVEL 12,500 MG/KG	DOSE LEVEL 125,000 MG/KG
		HISTORICAL CONTROL	NEGATIVE CONTROL			
1	1	134/ 92= 1.5	20/12= 1.7	17/10= 1.7	5/12= 0.4 ^{SD} ** ^{SD}	22/12= 1.8
1	2	94/104= 0.9	31/14= 2.2	43/16= 2.7 * ^{SD}	21/13= 1.6	36/17= 2.1 * ^{SD}
1	3	94/101= 0.9	36/18= 2.0 * ^{SD}	52/16= 3.3 * ^{SD}	29/15= 1.9	16/13= 1.2
6	4	64/104= 0.6	21/16= 1.3	37/17= 2.2 ** ^{SD}	9/14= 0.6	31/15= 2.1 * ^{SD}
6	5	67/108= 0.6	25/14= 1.8	22/17= 1.3 * ^{SD}	21/16= 1.3	21/17= 1.2
6	6	143/120= 1.2	40/16= 2.5	39/13= 2.2 ** ^{SD}	27/20= 1.4	27/15= 1.8
6	7	122/117= 1.0	23/18= 1.3	14/17= 0.8	31/17= 1.8 * ^{SD}	33/15= 2.2

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND D = ONE-TAILED TEST

ONE !, &, *, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, *, * = SIGNIFICANT AT P LESS THAN 0.01

*, & SIGNIFICANTLY DIFFERENT FROM CONTROL

&, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (READING OF COLUMN)

TABLE V
COMPOUND 55 STUDY SUBACUTE

AVERAGE RESORPTIONS (DEAD IMPLANTS) PER PREGNANT FEMALE

LOG ARITH DOSE WEEK	HISTORICAL CONTROL		NEGATIVE CONTROL		DOSE LEVEL		
					1,250 MG/KG	12,500 MG/KG	125,000 MG/KG
1	35/ 92=0.39		5/12=0.42		2/10=0.20	4/12=0.34	6/12=0.50
2	49/104=0.48		10/14=0.72		4/16=0.25	7/13=0.54	5/17=0.30
3	55/101=0.55		14/18=0.78		12/16=0.75	8/15=0.54	11/13=0.85
4	61/104=0.59		5/16=0.32		10/17=0.59	7/14=0.50	4/15=0.27
5	71/106=0.66		7/14=0.50		8/17=0.48	14/16=0.88	5/17=0.30
							*@D
6	47/120=0.40		15/16=0.94	*	13/18=0.73	8/20=0.40@D	18/15=1.20
				*	@I		*@I
7	59/117=0.51		11/18=0.62		12/17=0.71	16/17=1.06	13/15=0.87
						@I	

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING
THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, *, *' = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, *, *' = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

!, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VI
COMPOUND 55 STUDY SUBACUTE

PROPORTION OF FEMALES WITH ONE OR MORE DEAD IMPLANTATIONS

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL	NEGATIVE	DOSE LEVEL	DOSE LEVEL	DOSE LEVEL
			CONTROL	CONTROL	1.250 MG/KG	12.500 MG/KG	125.000 MG/KG
1	28/ 92=0.31		3/12=0.25		2/10=0.20	4/12=0.34	4/12=0.34
2	32/104=0.31		6/14=0.43		3/16=0.19	4/13=0.31	4/17=0.24
3	34/101=0.34		8/18=0.45		7/16=0.44	5/15=0.34	8/13=0.62*
4	38/104=0.37		4/16=0.25		8/17=0.48	3/14=0.22	4/15=0.27
5	49/108=0.46		5/14=0.36		6/17=0.36	10/16=0.63	5/17=0.30
6	33/120=0.28		10/16=0.63**		9/16=0.50	8/20=0.40	10/15=0.67**
7	34/117=0.30		8/18=0.45		9/17=0.53*	9/17=0.53*	5/15=0.34

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VII
COMPOUND 55 STUDY SUBACUTE

PROPORTION OF FEMALES WITH TWO OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.250 MG/KG	DOSE LEVEL 12.500 MG/KG	DOSE LEVEL 125.000 MG/KG
1	5/ 92=0.07		2/12=0.17		0/10=0.0	0/12=0.0	2/12=0.17
2	8/104=0.08		2/14=0.15		1/16=0.07	2/13=0.16	1/17=0.06
3	14/101=0.14		3/18=0.17		4/16=0.25	2/15=0.14	3/13=0.24
4	14/104=0.14		1/16=0.07		2/17=0.12	3/14=0.22	0/15=0.0
5	18/108=0.17		1/14=0.08		2/17=0.12	4/16=0.25	0/17=0.0
6	9/120=0.08		4/16=0.25 *		4/18=0.23 *	0/20=0.0 *	3/15=0.20
7	14/117=0.12		2/18=0.12		2/17=0.12	3/17=0.18	3/15=0.20

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VIII
COMPOUND 55 STUDY SUBACUTE

DEAD IMPLANTS / TOTAL IMPLANTS

WEEK			DOSE LEVEL 1,250 MG/KG	DOSE LEVEL 12,500 MG/KG	DOSE LEVEL 125,000 MG/KG
	HISTORICAL CONTROL	NEGATIVE CONTROL			
1	35/1084=0.04	5/147=0.04	2/110=0.02	4/157=0.03	6/152=0.04
2	49/1301=0.04	10/173=0.06	4/201=0.02	7/171=0.05	5/207=0.03
3	55/1196=0.05	14/209=0.07	12/130=0.07	8/172=0.05	11/160=0.07
4	61/1221=0.05	5/193=0.03	10/203=0.05	7/178=0.04	4/167=0.03 @D
5	71/1299=0.06	7/163=0.05	8/212=0.04	14/195=0.08	5/195=0.03 *@D
6	47/1437=0.04	15/189=0.08 @I	13/194=0.07	8/238=0.04*@D	18/184=0.10
7	59/1352=0.05	11/214=0.06	12/218=0.06	18/191=0.10	13/166=0.09

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE HISTORICAL CONTROL GROUP

* = TWO-TAILED TEST

@ = ONE-TAILED TEST

ONE *,@ = SIGNIFICANT AT P LESS THAN 0.05

TWO *,@ = SIGNIFICANT AT P LESS THAN 0.01

*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL

8. Dominant Lethal Assay - Test II

Compound FDA 71-55, Tartaric Acid, was administered to ten male rats at dosage levels of 4000 mg/kg acute high (single dose), 500 mg/kg acute intermediate (single dose) and 1450 mg/kg subacute high (five doses). Each treated male rat was mated with two virgin female rats each week for seven (subacute) or eight (acute) weeks. Two weeks after mating, female rats were sacrificed and the fertility index, preimplantation loss and lethal effects on the embryos were determined and compared with those same parameters calculated from negative (saline-dosed) and positive (0.3 mg/kg TEM-dosed) control animals.

The values calculated for those parameters from animals dosed with compound FDA 71-55, Tartaric Acid, did not significantly vary from those obtained from the negative controls; whereas, TEM caused a significant preimplantation loss and embryo resorption during the first five weeks.

Comparing the above data with the previously obtained values for dose levels of 125.0 mg/kg (LD₅), 12.5 mg/kg (intermediate) and 1.25 mg/kg (low) revealed no dose-response or time-trend patterns, thus indicating that compound FDA 71-55, Tartaric Acid, does not induce dominant lethal mutations.



BIONETICS

DOMINANT LETHAL ASSAY SUMMARY SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-55

TARTARIC ACID

TEST II

(Through error the computer had been programmed so
that a double rounding off of numbers occurred at
print out. In no way does this alter the statistics
which are calculated on the full unrounded numbers.)



BIONETICS

Uton

TABLE I
COMPOUND 55 STUDY ACUTE

FERTILITY INDEX

LOG ARITH DOSE	DOSE WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500.0 MG/KG	DOSE LEVEL 4000.0 MG/KG	POSITIVE CONTROL
1	183/275=0.67	15/ 20=0.75	13/ 20=0.65	12/ 20=0.60	10/ 20=0.50	
2	201/275=0.73	13/ 20=0.65	15/ 20=0.75	13/ 20=0.65	7/ 20=0.35	**
3	205/274=0.75	17/ 20=0.85	13/ 20=0.65	16/ 20=0.80	16/ 20=0.80	
4	233/276=0.84	16/ 20=0.80	18/ 20=0.90	19/ 20=0.95	13/ 20=0.65	*
5	213/275=0.77	19/ 20=0.95	18/ 20=0.90	14/ 20=0.70*	18/ 20=0.90	
6	212/275=0.77	15/ 20=0.75	16/ 20=0.80	17/ 20=0.85	14/ 20=0.70	
7	221/273=0.81	17/ 20=0.85	14/ 20=0.70	18/ 20=0.90	17/ 20=0.85	
8	228/276=0.83	17/ 20=0.85	16/ 20=0.80	18/ 20=0.90	16/ 20=0.80	

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE II
COMPOUND 55 STUDY ACUTE

AVERAGE NUMBER OF IMPLANTATIONS PER PREGNANT FEMALE

LOG ARITH DOSE	DOSE WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500.0 MG/KG	DOSE LEVEL 4000.0 MG/KG	POSITIVE CONTROL
!	1	2264/183=12.4	164/ 15=10.9	163/ 13=12.5	157/ 12=13.1	95/ 10= 9.5 ***@D
	2	2433/201=12.1	146/ 13=11.2	172/ 15=11.5	149/ 13=11.5	35/ 7= 5.0***@D **@D
	3	2479/205=12.1	194/ 17=11.4	162/ 13=12.5	181/ 16=11.3	82/ 16= 5.1***@D **@D
& !	4	2773/233=11.9	185/ 16=11.6	204/ 18=11.3	239/ 19=12.6	81/ 13= 6.2**@D **@D
	5	2547/213=12.0	213/ 19=11.2	208/ 18=11.6	167/ 14=11.9	194/ 18=10.8
!	6	2552/212=12.0	176/ 15=11.7	181/ 16=11.3	221/ 17=13.0 @I	179/ 14=12.8
	7	2726/221=12.3	208/ 17=12.2	174/ 14=12.4	219/ 18=12.2	223/ 17=13.1 *@I
'	8	2718/228=11.9	222/ 17=13.1 *@I	189/ 16=11.8	222/ 18=12.3	193/ 16=12.1

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, @, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, @, * = SIGNIFICANT AT P LESS THAN 0.01

3 * , @ SIGNIFICANTLY DIFFERENT FROM CONTROL

5, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE III
COMPOUND 55 STUDY ACUTE

AVERAGE CORPORA LUTEA PER PREGNANT FEMALE

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500.0 MG/KG	DOSE LEVEL 4000.0 MG/KG	POSITIVE CONTROL
1	2596/163=14.2	220/ 15=14.7		194/ 13=14.9	187/ 12=15.6	127/ 10=12.7* ^{@@D}
						* ^{@@D}
2	2811/201=14.0	176/ 13=13.5		206/ 15=13.7	172/ 13=13.2	109/ 7=15.6
3	2813/205=13.7	221/ 17=13.0		184/ 13=14.2	221/ 16=13.8	183/ 16=11.4 ^{@@D}
						** ^{@@D}
4	3138/233=13.5	227/ 16=14.2		259/ 18=14.4	256/ 19=13.5	147/ 13=11.3** ^{@@D}
				* ^{@@I}		** ^{@@D}
5	2872/213=13.5	259/ 19=13.6		248/ 18=13.8	203/ 14=14.5	257/ 18=14.3
					* ^{@@I}	
6	2935/212=13.8	198/ 15=13.2		207/ 16=12.9	250/ 17=14.7	209/ 14=14.9
7	2988/221=13.5	236/ 17=13.9		196/ 14=14.0	263/ 18=14.6	259/ 17=15.2
						* ^{@@I}
8	3181/228=14.0	257/ 17=15.1	^{@@I}	217/ 16=13.6 ^{@@D}	246/ 18=13.7 ^{@@D}	210/ 16=13.1* ^{@@D}

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, @, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, @, * = SIGNIFICANT AT P LESS THAN 0.01

* , @ SIGNIFICANTLY DIFFERENT FROM CONTROL

& , ! SIGNIFICANT RELATIONSHIP WITH ARITHM OR LOG DOSE (HEADING OF COLUMN)

TABLE IV
COMPOUND 55
STUDY ACUTE

AVERAGE PREIMPLANTATION LOSSES PER PREGNANT FEMALE

LOG ARITH DOSE	DOSE WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500.0 MG/KG	DOSE LEVEL 4000.0 MG/KG	POSITIVE CONTROL
1	332/183= 1.8	56/ 15= 3.7	31/ 13= 2.4	30/ 12= 2.5	32/ 10= 3.2	**@#I
2	378/201= 1.9	30/ 13= 2.3	34/ 15= 2.3	23/ 13= 1.8	74/ 7= 10.6**@#I	**@#I
3	334/205= 1.6	27/ 17= 1.6	22/ 13= 1.7	40/ 16= 2.5	*@I	101/ 16= 6.3**@#I
4	365/233= 1.6	42/ 16= 2.6	55/ 18= 3.1	17/ 19= 0.9@D	66/ 13= 5.1*@I	**@#I
5	325/213= 1.5	46/ 19= 2.4	40/ 18= 2.2	@I	36/ 14= 2.6	63/ 18= 3.5
6	383/212= 1.8	22/ 15= 1.5	26/ 16= 1.6	29/ 17= 1.7	30/ 14= 2.1	
7	262/221= 1.2	28/ 17= 1.6	22/ 14= 1.6	44/ 18= 2.4	*@#I	36/ 17= 2.1
8	463/228= 2.0	35/ 17= 2.1	28/ 16= 1.8	24/ 18= 1.3	17/ 16= 1.1	

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, *, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, @, *, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

!, & SIGNIFICANT PELATIONSHIP WITH ARITH OR LOG DOSE (READING OF COLUMN)

TABLE V
COMPOUND 55
STUDY ACUTE

AVERAGE RESORPTIONS (DEAD IMPLANTS) PER PREGNANT FEMALE

LOG ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500.0 MG/KG	DOSE LEVEL 4000.0 MG/KG	POSITIVE CONTROL
	1	62/183=0.34	7/ 15=0.47	6/ 13=0.46	6/ 12=0.50	68/ 10=6.80**@I **@I
	2	103/201=0.51	7/ 13=0.54	11/ 15=0.73	7/ 13=0.54	35/ 7=5.00**@I **@I
	3	117/205=0.57	15/ 17=0.88	13/ 13=1.00	5/ 16=0.31@D	82/ 16=5.13**@I **@I
	4	118/233=0.51	11/ 16=0.69	19/ 18=1.06	13/ 19=0.68	69/ 13=5.31**@I **@I
	5	122/213=0.57	16/ 19=0.84	5/ 18=0.28@D	17/ 14=1.21@I	38/ 18=2.11@I **@I
	6	127/212=0.60	12/ 15=0.80	9/ 16=0.56	6/ 17=0.35	15/ 14=1.07@I
	7	110/221=0.50	21/ 17=1.24 *@I	14/ 14=1.00	14/ 18=0.78	7/ 17=0.41@D
	8	127/228=0.56	13/ 17=0.76	9/ 16=0.56	11/ 18=0.61	15/ 16=0.94@I

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, @, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, @, * = SIGNIFICANT AT P LESS THAN 0.01

* , @ SIGNIFICANTLY DIFFERENT FROM CONTROL

& , ! SIGNIFICANT RELATIONSHIP WITH ARITHM OR LOG DOSE (HEADING OF COLUMN)

TABLE VI
COMPOUND 55
STUDY ACUTE

PROPORTION OF FEMALES WITH ONE OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE	DOSE WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500.0 MG/KG	DOSE LEVEL 4000.0 MG/KG	POSITIVE CONTROL
1	49/183=0.27	6/ 15=0.40		5/ 13=0.38	4/ 12=0.33	10/ 10=1.00** **
2	70/201=0.35	5/ 13=0.38		9/ 15=0.60	5/ 13=0.38	7/ 7=1.00** **
3	76/205=0.37	9/ 17=0.53		6/ 13=0.46	4/ 16=0.25	16/ 16=1.00** **
4	91/233=0.39	9/ 16=0.56		10/ 18=0.56	8/ 19=0.42	13/ 13=1.00** **
5	77/213=0.36	9/ 19=0.47		5/ 18=0.28	8/ 14=0.57	13/ 18=0.72 **
6	83/212=0.39	7/ 15=0.47		7/ 16=0.44	6/ 17=0.35	9/ 14=0.64
7	78/221=0.35	11/ 17=0.65 *		7/ 14=0.50	8/ 18=0.44	6/ 17=0.35
8	89/228=0.39	7/ 17=0.41		6/ 16=0.38	10/ 18=0.56	10/ 16=0.63

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (READING OF COLUMN)

TABLE VII
COMPOUND 55
STUDY ACUTE

PORPORTION OF FEMALES WITH TWO OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE	DOSE WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500.0 MG/KG	DOSE LEVEL 4000.0 MG/KG	POSITIVE CONTROL
	1	8/183=0.04	1/ 15=0.07	1/ 13=0.08	1/ 12=0.08	10/ 10=1.00** **
	2	26/201=0.13	1/ 13=0.08	2/ 15=0.13	1/ 13=0.08	7/ 7=1.00** **
	3	31/205=0.15	4/ 17=0.24	2/ 13=0.15	1/ 16=0.06	12/ 16=0.75** **
	4	23/233=0.09	2/ 16=0.13	3/ 18=0.17	4/ 19=0.21	12/ 13=0.92** **
!!	5	30/213=0.14	5/ 19=0.26	0/ 18=0.0 *	7/ 14=0.50 **	8/ 18=0.44 **
!!	6	31/212=0.15	4/ 15=0.27	2/ 16=0.13	0/ 17=0.0 *	4/ 14=0.29
	7	24/221=0.11	5/ 17=0.29 *	4/ 14=0.29 *	3/ 18=0.17	1/ 17=0.06
	8	27/228=0.12	3/ 17=0.18	3/ 16=0.19	1/ 18=0.06	3/ 16=0.19

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VIII
COMPOUND 55 STUDY ACUTE

DEAD IMPLANTS / TOTAL IMPLANTS

WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500.0 MG/KG	DOSE LEVEL 4000.0 MG/KG	POSITIVE CONTROL
1	62/2264=0.03	7/164=0.04	6/163=0.04	6/157=0.04	68/ 95=0.72**@I **@I
2	103/2433=0.04	7/146=0.05	11/172=0.06	7/149=0.05	35/ 35=1.00**@I **@I
3	117/2479=0.05	15/194=0.08	13/162=0.08	5/181=0.03@D	82/ 82=1.00**@I **@I
4	118/2773=0.04	11/185=0.06	19/204=0.09	13/239=0.05	69/ 81=0.85**@I **@I
5	122/2547=0.05	16/213=0.08	5/208=0.02@D @D	17/167=0.10	38/194=0.20@I **@I
6	127/2552=0.05	12/176=0.07	9/191=0.05	6/221=0.03 @D	15/179=0.08
7	110/2726=0.04	21/208=0.10 *@I	14/174=0.08	14/219=0.06	7/223=0.03@D
8	127/2718=0.05	13/222=0.06	9/189=0.05	11/222=0.05	15/193=0.08

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE HISTORICAL CONTROL GROUP

* = TWO-TAILED TEST

@ = ONE-TAILED TEST

ONE *,@ = SIGNIFICANT AT P LESS THAN 0.05

TWO *,@ = SIGNIFICANT AT P LESS THAN 0.01

611 *,@ SIGNIFICANTLY DIFFERENT FROM CONTROL

TABLE I
COMPOUND 55 STUDY SUBACUTE

FERTILITY INDEX

LOG ARITH DOSE WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1450.0 MG/KG
1 177/259=0.68	11/ 20=0.55	10/ 20=0.50	
2 194/260=0.75	13/ 20=0.65	15/ 20=0.75	
3 205/259=0.79	14/ 20=0.70	17/ 20=0.85	
4 203/253=0.80	17/ 20=0.85	14/ 20=0.70	
5 207/257=0.81	15/ 20=0.75	17/ 20=0.85	
6 217/259=0.84	15/ 20=0.75	15/ 20=0.75	
7 216/255=0.85	12/ 20=0.60	15/ 20=0.75	**

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE II
COMPOUND 55 STUDY SUBACUTE

AVERAGE NUMBER OF IMPLANTATIONS PER PREGNANT FEMALE

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1450.0 MG/KG
1		2156/177=12.2 144/ 11=13.1	125/ 10=12.5 <i>oI</i>	
2		2406/194=12.4 141/ 13=10.8	137/ 15= 9.1 <i>*@D</i>	<i>**@DD</i>
3		2471/205=12.1 169/ 14=12.1	189/ 17=11.1	
4		2366/203=11.7 192/ 17=11.3	139/ 14= 9.9 <i>@D</i>	
5		2512/207=12.1 194/ 15=12.9	197/ 17=11.6	
6		2609/217=12.0 176/ 15=11.7	181/ 15=12.1	
7		2523/216=11.7 141/ 12=11.8	190/ 15=12.7 <i>oI</i>	

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !,&,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,&,@,* = SIGNIFICANT AT P LESS THAN 0.01

*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL

&,! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (READING OF COLUMN)

TABLE III
COMPOUND 55 STUDY SUBACUTE

AVERAGE CORPORA LUTEA PER PREGNANT FEMALE

LOG ARITH DOS ^E	HISTORICAL WEEK	NEGATIVE CONTROL	DOSE LEVEL 1450.0 MG/KG
1	2455/177=13.9	158/ 11=14.4	143/ 10=14.3
2	2734/194=14.1	164/ 13=12.6	181/ 15=12.1 **@@D **@@D
3	2807/205=13.7	196/ 14=14.0	230/ 17=13.8
4	2638/203=13.0	220/ 17=12.9	167/ 14=11.9
5	2836/207=13.7	219/ 15=14.6	226/ 17=13.3*@D *@I
6	2986/217=13.8	204/ 15=13.6	201/ 15=13.4
7	2921/216=13.5	156/ 12=13.0	205/ 15=13.7

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

I AND @ = ONE-TAILED TEST

ONE I, @, *, * = SIGNIFICANT AT P LESS THAN 0.05

TWO I, @, *, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

I, @ SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

LOG ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1450.0 MG/KG
	1	299/177 = 1.7	14 / 11 = 1.3	18 / 10 = 1.8
	2	328/194 = 1.7	23 / 13 = 1.8	44 / 15 = 2.9 *#DI
	3	336/205 = 1.6	27 / 14 = 1.9	45 / 17 = 2.6 *#I
	4	272/203 = 1.3	28 / 17 = 1.6 #I	28 / 14 = 2.0
	5	324/207 = 1.6	25 / 15 = 1.7	29 / 17 = 1.7
	6	377/217 = 1.7	28 / 15 = 1.9	20 / 15 = 1.3
	7	398/216 = 1.8	15 / 12 = 1.3	15 / 15 = 1.0

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

δ AND * = TWO-TAILED TEST
 \dagger AND @ = ONE-TAILED TEST

ONE !,*,@,* = SIGNIFICANT AT P LESS THAN 0.05
TWO !,*,@,* = SIGNIFICANT AT P LESS THAN 0.01

, SIGNIFICANTLY DIFFERENT FROM CONTROL
&,& SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE V
COMPOUND 55 STUDY SUBACUTE
GE RESORPTIONS (DEAD IMPLANTS) PER PREGNANT FEMALE

OG	ARITH	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1450.0 MG/KG
DOSE	DOSE WEEK			
1		$84/177=0.47$	$6/11=0.55$	$7/10=0.70$ @I
2		$117/194=0.60$	$22/13=1.69$ @I	$11/15=0.73$
3		$124/205=0.60$	$9/14=0.64$	$14/17=0.82$
4		$112/203=0.55$	$4/17=0.24$ @D	$13/14=0.93$ *@I @I
5		$131/207=0.63$	$12/15=0.80$	$7/17=0.41$
6		$117/217=0.54$	$10/15=0.67$	$12/15=0.80$
7		$146/216=0.68$	$8/12=0.67$	$12/15=0.80$

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

**6 AND * = TWO-TAILED TEST
7 AND @ = ONE-TAILED TEST**

ONE 1,*,@,* = SIGNIFICANT AT P LESS THAN 0.05
TWO 2,*,@,* = SIGNIFICANT AT P LESS THAN 0.01

*^a, ^b SIGNIFICANTLY DIFFERENT FROM CONTROL

SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VI
COMPOUND 55 STUDY SUBACUTE

PROPORTION OF FEMALES WITH ONE OR MORE DEAD IMPLANTATIONS

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1450.0 MG/KG
1	62/177=0.35		5/ 11=0.45	7/ 10=0.70*	
2	74/194=0.38		9/ 13=0.69*	7/ 15=0.47	
3	78/205=0.38		5/ 14=0.36	10/ 17=0.59	
4	77/203=0.38		4/ 17=0.24	9/ 14=0.64*	
5	87/207=0.42		9/ 15=0.60	4/ 17=0.24*	
6	84/217=0.39		8/ 15=0.53	9/ 15=0.60	
7	80/216=0.37		4/ 12=0.33	8/ 15=0.53	

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VII
COMPOUND 55 STUDY SUBACUTE
PORPORTION OF FEMALES WITH TWO OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1450.0 MG/KG
WEEK			
1	17/177=0.10	1/ 11=0.09	0/ 10=0.0
2	24/194=0.12	3/ 13=0.23	2/ 15=0.13
3	29/205=0.14	2/ 14=0.14	3/ 17=0.18
4	25/203=0.12	0/ 17=0.0	3/ 14=0.21*
5	32/207=0.15	2/ 15=0.13	2/ 17=0.12
6	25/217=0.12	1/ 15=0.07	2/ 15=0.13
7	36/216=0.17	2/ 12=0.17	4/ 15=0.27

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE *, = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

I SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VIII
COMPOUND 55 STUDY SUBACUTE

DEAD IMPLANTS / TOTAL IMPLANTS

WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1450.0 MG/KG
1	94/2156=0.04	6/144=0.04	7/125=0.06
2	117/2406=0.05	22/141=0.16 @I	11/137=0.08
3	124/2471=0.05	9/169=0.05 @I	14/189=0.07
4	112/2366=0.05	4/192=0.02 *@D	13/139=0.09*@I @I
5	131/2512=0.05	12/194=0.06	7/197=0.04
6	117/2609=0.04	10/176=0.06	12/181=0.07
7	146/2523=0.06	8/141=0.06	12/190=0.06

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE HISTORICAL CONTROL GROUP

* = TWO-TAILED TEST

@ = ONE-TAILED TEST

ONE *,@ = SIGNIFICANT AT P LESS THAN 0.05
TWO *,@ = SIGNIFICANT AT P LESS THAN 0.01

*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL

APPENDICES

II. MATERIALS AND METHODS

A. Animal Husbandry

1. Animals (Rats and Mice)

Ten to twelve week old rats (280 to 350 g) and male mice (25 to 30 g) were fed a commerical 4% fat diet and water ad libitum until they were put on experiment. Flow Laboratories random-bred, closed colony, Sprague-Dawley CD strain rats were used in the cytogenetic studies. Flow Laboratories ICR male mice were employed in the Host-Mediated Assay.

2. Preparation of Diet

A commercial 4% fat diet was fed to all animals. Periodic tests to verify the absence of coliforms, Salmonella and Pseudomonas sp. were performed.

3. Husbandry

Animals were held in quarantine for 4-11 days. Mice were housed five to a cage and rats one to five to a cage. Animals were identified by ear punch. Sanitary cages and bedding were used, and changed two times per week, at which time water containers were cleaned, sanitized and filled. Once a week, cages were repositioned on racks; racks were re-positioned within rooms monthly. Personnel handling animals or working within animal facilities wore head coverings and face masks, as well as suitable garments. Individuals with respiratory or other overt infections were excluded from the animal facilities.

B. Dosage Determination

1. Acute LD₅₀ and LD₅ Determination

Since the compounds proposed for testing are included in



BIONETICS

the food additive regulations as "generally recognized as safe" (GRAS), it was expected that a large number of them would be sufficiently non-toxic so that determination of a LD₅₀ or a LD₅ would be of no practical value. In fact, this has been our experience with previously tested compounds from this list. In the case of these relatively non-toxic compounds, attempts were made to assure that the amounts to be administered would not affect the animals by means (mechanical, physical, etc.) related to their bulk rather than to their toxicity. In the cases of certain compounds where a LD₅₀ or a LD₅ could not be determined, an exceedingly high concentration, 5 g/kg, was employed and accepted as the LD₅ level. In cases where the toxicity was high enough to allow determination of a LD₅, the following protocol was used.

Thirty rats of the strain chosen for studies described below and of approximately the age and weight specified were assigned at random to six groups. Each group was then given, using the chosen route of administration, one of a series of dosages of the test compound following a logarithmic dosage scheme. The series of dosages were derived from a consideration of whatever toxicity information was available for the particular test compound. The objective in selecting dosages was to choose values which would cause mortalities between 10% and 90%.

When information was inadequate to derive a suitable series of dosages, five rats were used to identify the proper range. Each of these was given one of a widely spaced (differing by 10X) series of doses. This was confidently expected to suffice for derivation of the series of dosages to be used in the LD₅₀ determination.



BIOSTATISTICS
INC.

The mortalities observed when the series of dosages were given to the 30 rats were then subjected to a probit analysis and calculation of LD₅₀, LD₅, slope and confidence limits by the method of Litchfield and Wilcoxon. The highest dose level used was either a finite LD₅ or 5000 mg/kg. The intermediate level used was either 1/10 of the finite LD₅ or 2500 mg/kg. The low level used was either 1/100 of the finite LD₅ or 30 mg/kg.

2. Subacute Studies

Subacute doses were identical to those used in the acute studies. Each subacute study animal was given the acute dosage once a day for each of five consecutive days (24 hours apart).

C. Mutagenicity Testing Protocols

1. Host-Mediated Assay

Flow Laboratories ICR random-bred male mice were used in this study. In the acute and subacute studies ten animals, 25-30 g each, were employed at each dose level. Solvent and positive controls were run at all times. The positive control (dimethyl nitrosamine) was run by the acute system only at a dose of 100 mg/kg for Salmonella. For yeast, ethyl methane sulfonate (EMS) intramuscularly injected at a dose of 350 mg/kg was used. The solvents used and the toxicity data are presented in the Results and Discussion Section of the report.

The indicator organisms used in this study were: (1) two histidine auxotrophs (his G-46, TA-1530) of Salmonella typhimurium, and (2) a diploid strain (D-3) of Saccharomyces cerevisiae. The induction of reverse mutation was determined with the Salmonella; mitotic recombination was determined with yeast. Chemicals were evaluated directly by in vitro bacterial and yeast studies prior to, or concurrent with, the studies in



BIONETICS

Litchfield

mice. Only animals on the subacute studies were not fed the evening prior to compound administration. The Salmonella were carried in tryptone yeast extract gel, transferred weekly. They were transferred to tryptone yeast extract broth 48 hours before use; they were transferred a second time from broth to broth 24 hours prior to use, and again 8 hours before use. The mouse inoculum was prepared by transferring 4 ml of the 8-hour broth culture to 50 ml broth bottles which had been prewarmed at 37°C. Exponential log-phase organisms were inoculated intraperitoneally into the mice approximately 2-1/2 hours later when the appropriate density indicating 3.0×10^8 cells/ml was reached. The Saccharomyces was carried in yeast complete agar. The inoculum was prepared by harvesting the organisms from the surface of the plates with sterile saline. The cells were washed three times with sterile saline and suspended in a concentration of 5.0×10^8 cells/ml. Two ml of the suspension was inoculated into each mouse intraperitoneally. Total plate counts on Salmonella were on tryptone yeast extract and for Saccharomyces on yeast complete medium.

a. Acute study

Three dosage levels (usage, intermediate [determined as discussed previously], and LD₅₀) were administered orally by intubation to ten mice. Positive controls and negative vehicle controls were included in each study. All animals received 2 ml of the indicator organism intraperitoneally. Each ml contained 3.0×10^8 cells for Salmonella and 5.0×10^8 cells for Saccharomyces. Three hours later, each animal was killed and 2 ml of sterile saline was introduced intraperitoneally. As much fluid as possible was then aseptically removed from the peritoneal cavity. Dilution blanks for bacteria containing 4.5 ml of sterile saline were prepared in advance. Tenfold serial



BIO-RAD
LABORATORIES


dilutions were made of each peritoneal exudate (0.5 ml exudate + 4.5 ml saline) yielding a concentration series from 10^0 (undiluted peritoneal exudate) through 10^{-7} . For enumeration of total bacterial counts, the 10^{-6} and 10^{-7} dilutions were plated on tryptone yeast extract agar, 3 plates/sample, 0.2 ml sample/plate. Each sample was spread over the surface of the plate using a bent glass rod immersed in 95% ethanol and flamed just prior to use. In plating for the total mutant counts on minimal agar, the 10^0 dilution was used, 0.2 ml being plated on each of 5 plates. The plating procedure was identical to that followed for the tryptone yeast extract agar plates. All plates were incubated at 37°C , tryptone yeast extract agar plates for 18 hours and minimal agar plates for 40 hours. For yeast mitotic recombination, dilution blanks containing 4.5 ml of sterile saline were prepared in advance. Tenfold serial dilutions were made of each sample yielding a series from 10^0 to 10^{-5} . Samples of 0.1 ml of the 10^{-5} , 10^{-4} , and 10^{-3} dilutions were removed and plated on complete medium (10 plates each). All plates were incubated at 30°C for 40 hours. The 10^{-5} dilutions were used to determine total populations and the 10^{-4} and 10^{-3} plates were examined after an additional 40 hours at 4°C for red sectors indicating a mutation. Bacterial scoring was calculated as follows:

Total mutants on 5 plates x appropriate exponent =
CFU/ml (CFU is Colony Forming Units) of sample plated CFU/ml x one/dilution factor ($10^0 - 10^{-7}$) = CFU/ml in undiluted exudate. The mutation frequency (MF) calculated for each sample was:

$$MF = \frac{\text{total mutant cells}}{\text{total population}}$$

$$MF_t/MF_c = \frac{MF \text{ of experimental sample}}{MF \text{ of control sample}}$$

(MF_t/MF_c = 1.00 for control sample)

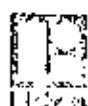

BIOMETRICS

LICEN

Yeast mitotic recombinants (presumptive ade 2, his 8 homozygotes) were seen as red colonies or as red sectors on a normally white yeast colony. The plates (from 10^{-4} and 10^{-3} dilutions) were scanned under the 10X lens of a dissecting scope to enumerate the red colonies and sectors. Population determinations were made from the 10^{-5} dilution plates. A recombinant frequency (RF) was calculated:

$$RF = \frac{\text{total recombinants counted}}{\text{total number colonies screened}}$$

b. Subacute study

Similar groups of animals at each dose level received five oral doses of the test compound 24 hours apart. Within 30 minutes after the last dosing, the animals were inoculated with the test organism and handled in the same fashion as those in the acute study.

c. In vitro study

Cultures of S. typhimurium histidine auxotrophs (G-46 and TA-1530) were plated on appropriate media. The test compound was then added to the plate, either in the form of a microdrop of solution (0.01 to 0.25 ml) applied to a small filter paper disc resting on the agar or a small crystal applied directly to the agar. Tenfold serial dilutions of the culture were employed and plated so as not to miss the optimum cell density for mutant growth. Mutant colonies were observed and scored. Strain D-3 Saccharomyces cells at proper dilutions were shaken with the test compound, diluted, and plated at 50% survival level or above (see NNA Supplementary Materials and Methods). Red sectors were then scored and the frequency calculated after suitable incubation. Negative and positive controls were run concurrently. The positive control was EMS for Salmonella and Saccharomyces. The in vitro Salmonella tests were reported



BIONETICS

Litton

as (+) or (-) or questionable; the in vitro Saccharomyces tests were reported as sample concentrations, percent survival, and recombinants/ 10^5 survivors.

For the Saccharomyces a 50% survival level, e.g., an arbitrary 5.0% w/v test level, was used when no LD₅₀ was determinable.

2. Cytogenetic Studies

a. In vivo study

Ten to twelve week old, male, albino rats obtained from a closed colony (random-bred) were used. A total of 59 animals in the acute study and 18 animals in the subacute study was used, as illustrated in the following protocol.

Number of Animals Used

Acute Study

Treatment	Time Killed After Administration		
	6 Hours	24 Hours	48 Hours
High Level	5	5	5
Intermediate Level	5	5	5
Low Level	5	5	5
Positive Control	0	0	5
Negative Control	3	3	3

Subacute Study

Five doses 24 hours apart; animals killed 6 hours after last dose.

Treatment	Killed After Administration
High Level	5
Intermediate Level	5
Low Level	5
Negative Control	3

All animals were dosed by gastric intubation.

Four hours after the last compound administration, and two hours prior to killing, each animal was given 4 mg/kg of colcemid intra-



BIONETICS

peritoneally in order to arrest the bone marrow cells in G-mitosis. Animals were killed by using CO₂, and the adhering muscle and epiphysis of one femur were removed. The marrow "plug" was removed with a tuberculin syringe and an 18 gauge needle, aspirated into 5 ml of Hanks' balanced salt solution (BSS) in a test tube and capped. The specimens were centrifuged at 1,500 RPM in a table-top centrifuge for 5 minutes, decanted, and 2 ml of hypotonic 0.5% KCl solution was added with gentle agitation to resuspended the cells. The specimens were then placed in a 37°C water bath for 20 minutes in order to swell the cells. Following centrifugation for 5 minutes at 1,500 RPM, the supernatant was decanted and 2 ml of fixative (3:1 absolute methanol:glacial acetic acid) was added. The cells were resuspended in the fixative with gentle agitation, capped, and placed at 4°C for 30 minutes. The specimens were again centrifuged, decanted, 2 ml of prepared fixative was added, and the cells were resuspended and placed at 4°C overnight.

The following day the specimens were again centrifuged, decanted and 0.3 - 0.6 ml of freshly prepared fixative was added to obtain a suitable density. The cells were resuspended and 2 - 3 drops of the suspension were allowed to drop onto a clean, dry slide held at 15° from the horizontal. As the suspension flowed to the edge of the slide, it was ignited by an alcohol burner and allowed to flame. Following ignition, the slides were allowed to dry at room temperature overnight. Duplicate slides were prepared. The slides were stained using a 5% Giemsa solution (Giemsa buffer pH 7.2) for 20 minutes, rinsed in acetone, 1:1 acetone:xylene, and placed in fresh xylene for 30 minutes. The slides were then mounted using Permount (Fisher Scientific) and 24 x 50 mm coverglasses. The coverglasses were selected to be 0.17 mm ± 0.005 mm in thickness by use of a coverglass micrometer. The preparations



were examined using Leitz Ortholux I & II microscopes with brightfield optics and xenon light sources. These specimens were scanned with 10X and 24X objectives and suitable metaphase spreads that were countable were then examined critically using 40X, 63X or 100X oil immersion flatfield apochromatic objectives. Oculars were either 12X or 16X widefield periplanatics and the tube magnification either 1X or 1.25X. The filters used were either a didymium (BG20) or a Schott IL570 μ interference filter.

The chromosomes of each cell were counted and only diploid cells were analyzed. They were scored for chromatid gaps and breaks, chromosome gaps and breaks, reunions, cells with greater than ten aberrations, polyploidy, pulverization, and any other chromosomal aberrations which were observed. They were recorded on the currently used forms and expressed as percentages on the summary sheets. Fifty metaphase spreads were scored per animal. Mitotic indices were obtained by counting at least 500 cells and the ratio of the number of cells in mitosis/the number of cells observed was expressed as the mitotic index.

Positive controls in the acute study consisted of animals which had been given the known mutagen Triethylene Melamine (TEM) administered intraperitoneally at a level of 0.30 mg/kg. Negative controls on the acute and subacute studies consisted of the vehicle in which the compound was administered. The dosage levels, solvents and toxicity data are included in the Results and Discussion Section of the report.

b. In vitro study

Human embryonic lung cultures (WI-38) which were negative for adventitious agents (viruses, mycoplasma) which may interfere

were used. These cells were employed at passage level 19. The cells had been transferred using 0.025% trypsin and planted in 32 oz. prescription bottles containing 40 ml of tissue culture medium. When growth was approximately 95% confluent the cells were removed from the glass using trypsin, centrifuged, and frozen in tissue culture medium containing dimethyl sulfoxide (DMSO). Cells were frozen in vials in the vapor phase of liquid nitrogen at a concentration of 2×10^6 cells/ml. When needed, the vials were removed from liquid nitrogen, quick-thawed in a 37°C water bath, washed free of DMSO, suspended in tissue culture medium (minimal essential medium [MEM] plus 1% glutamine, 200 units/ml of penicillin and 200 µg/ml of streptomycin and 15% fetal calf serum) and planted in milk dilution bottles at a concentration of 5×10^5 cells/ml. The test compound was added at three dose levels using three bottles for each level, 24 hours after planting. The dose levels required a preliminary determination of a tissue culture toxicity. This was accomplished by adding logarithmic doses of the compound in saline to a series of tubes containing 5×10^5 cells/ml which were almost confluent. The cells were examined at 24, 48, and 72 hours. Any cytopathic effect (CPE) or inhibition of mitoses was scored as toxicity. Five more closely spaced dose levels were employed within the two logarithmic dosages, the higher of which showed toxicity and the lower no effect. The solvents used and the range finding data are presented in the toxicity data report under Results and Discussion. The dose level below the lowest toxic level was employed as the high level. Logarithmic dose levels were employed for the medium and low levels.

Cells were incubated at 37°C and examined twice daily to determine when an adequate number of mitoses were present. Cells were harvested by shaking when sufficient mitoses were observed, usually 24 - 48



BIOECONOMICS

Division

hours after planting, centrifuged, and fixed in absolute methanol:glacial acetic acid (3:1) for 30 minutes.

The specimens were centrifuged, decanted, and suspended in acetic acid-orcein stain (2.0%) and a drop of suspension placed on a clean dry slide. Selected coverglasses 0.17 mm in thickness were placed on the suspension and the excess stain gently expressed from the slide. The coverglasses were sealed with clear nail polish and examined immediately.

The microscopes, objectives, oculars, filters and light sources were enumerated under the metaphase description. Positive controls used were TEM (at a concentration of 0.1 mcg/ml dissolved in saline) and negative controls which consisted of the vehicle in which the test compound was dissolved, which was 0.85% saline. Data were reported on forms currently used and expressed as percentages on the anaphase summary sheets.

3. Dominant Lethal Assay

In this test, male and female random bred rats from a closed colony were employed. These animals were 10-12 weeks old at the time of use. Ten male rats were assigned to each of 5 groups; 3 dose levels selected as described above, a positive control (triethylene melamine) (TEM) and a negative control (solvent only). The positive control was administered intraperitoneally. Administration of the test compound was orally by intubation in both the acute study (1 dose) and in the subacute study (1 dose per day for 5 days). Following treatment, the males were sequentially mated to 2 females per week for 8 weeks (7 weeks in the subacute study). Two virgin female rats were housed with a male for 5 days (Monday through Friday). These two females were removed and housed in a cage until killed. The male was rested on Saturday and Sunday and two new females introduced to the cage on



Monday. It has been our experience that conception has taken place in more than 90% of the females by Friday and that the two day rest is beneficial to the male as regards subsequent weekly matings. Females were killed using CO₂ at 14 days after separating from the male, and at necropsy the uterus was examined for deciduomata (early deaths), late fetal deaths and total implantations.

Sufficient animals were provided in our experimental design to accommodate for any reduction in the number of conceptions. Each male was mated with two females per week, and this provided for an adequate number of implantations per group per week (200 minimum) for negative controls, even if there was a fourfold reduction in fertility of implantations. Results were analyzed according to the statistical procedures described in Supplementary Materials and Methods. Corpora lutea, early fetal deaths, late fetal deaths and total implantations per uterine horn were recorded on the raw data sheets, which are submitted separately.

D. Supplementary Materials and Methods

1. Host-Mediated Assay In Vitro and Formulae

a. Bacterial in vitro plate tests

This method has been published by Ames: The Detection of Chemical Mutagens with Enteric Bacteria, in Chemical Mutagens; Principles and Methods for Their Detection, Vol. I, Chapter 9, pp. 267-282, A. Hollaender, Editor, Plenum Press, New York (1971).

b. In vitro for mitotic recombination

(1) Strain D-3 was grown to stationary phase on complete medium agar plates at 30°C (3-4 days). Cells were rinsed from the plates and washed twice in saline and cell concentration determined spectro-



photometrically. (A standard curve previously determined for colony forming units versus % transmittance at 545 m μ was easily used.)

(2) Cells from the concentration suspension were diluted appropriately into 0.067 M Phosphate buffer pH 7.2 to provide 5×10^7 cells/ml in a total of 25 ml.

(3) The test chemical was first tested for 4 hours at 30°C, with shaking, at concentrations which permitted determination of the 50% survival level. Then, if not included in the first experiment, the compound was tested again only at the 50% survival level. If 50% survival level could not be determined, the arbitrary test level of 5% w/v was used.

(4) Following treatment, cells were diluted and plated on complete agar medium for determination of total population and red sectors. Total surviving population was conveniently measured on plates of 10^{-4} and 10^{-5} dilutions using 0.2 ml per plate (5 plates), and sectors determined on plates of 10^{-3} and 10^{-4} dilutions using 0.2 ml per plate (5 plates). Plates were incubated for 2 days at 30°C followed by a holding period of 2 days at 4°C to promote color development with limited enlargement of the colonies. Red sectors were scored by systematically scanning the plates with a dissecting microscope at 10X magnification.

(5) The frequency of red sectors can then be calculated and may be expressed conveniently as sectors per 10^5 survivors for comparison with untreated controls.

(6) Ethyl Methane Sulfonate (EMS) was employed as the positive control in both in vitro systems.

c. Minimal medium (bacteria):

Spizizen's Minimal Medium:



BIOMETRICS

International

4X Salt Solution:

(NH ₄) ₂ SO ₄	8.0 gm
K ₂ HPO ₄	56.0 gm
KH ₂ PO ₄	24.0 gm
Na Citrate	4.0 gm
Mg SO ₄	0.8 gm
Biotin	0.004 gm
H ₂ O	qs to 1 liter Sterilize by autoclaving (121°C/15 min.)

Medium:

4X Salt Solution :250 ml

5.0% Glucose (sterile) :100 ml (If histidine is added at concentration of 30 mg/liter, this becomes a complete bacterial medium.)

1.5% Bacto-agar :650 ml
(sterile)

d. Complete medium (bacteria):

Bacto-Tryptone 1.0 gm

Yeast-Extract 0.5 gm

Bacto-Agar 2.0 gm

Distilled H₂O 100.0 ml

Sterilize by autoclaving (121°C for 15 minutes).

e. Complete medium (yeast):

KH₂PO₄ 1.5 gm

MgSO₄ 0.5 gm

(NH₄)₂SO₄ 4.5 gm



BIO-RAD

Peptone	3.5 gm
Yeast-Extract	5.0 gm
Glucose	20.0 gm
Agar	20.0 gm
Distilled H ₂ O	1000.0 ml

Sterilize by autoclaving (121°C for 15 minutes).

2. Cytogenetics In Vitro Preparation of Anaphase Chromosomes
 (from Nichols, 1970)

"Anaphase preparations may be made by several methods. One convenient approach is to grow cells directly on coverslips in petri dishes. With human fibroblasts 400,000 cells added to a 22 x 44 mm coverslip in a 50 mm petri dish grown in a 5% CO₂ atmosphere in air has proved very satisfactory. When adequate numbers of mitoses are visualized directly utilizing an inverted microscope (usually 48 to 92 hours after planting) the coverslip is transferred to absolute ethanol for 15 minutes for fixation. They are then stained with any one of a number of suitable stains (Fuclgen, May-Grunwald-Giemse, orcein) and attached to a slide with mounting media for evaluation. Anaphase preparations may also be prepared on cells grown in suspension or cells from a monolayer that have been put into suspension. In this instance the cells are centrifuged and fixed with the squash fixative. They are then suspended in the stain and a drop of the suspension put on the slide and covered with a coverslip. However, in this case, only the excess stain is gently expressed from under the coverslip and no squashing is carried out. In anaphase preparations no pretreatment with colchicine or hypotonic expansion is used and no technique for spreading the cells is used, so that the spindle and normal relationships of the chromosomes are not disturbed."



3. Statistical Analyses of Dominant Lethal Studies

The following statistical analyses were employed as a means of analyzing the results of the dominant lethal studies.

a. The fertility index

The number of pregnant females/number of mated females with the chi-square was used to compare each treatment to the control. Armitage's trend was used for linear proportions to test whether the fertility index was linearly related to arithmetic or log dose.

b. Total number of implantations

The t-test was used to determine significant differences between average number of implantations per pregnant female for each treatment compared to the control. Regression techniques were used to determine whether the average number of implantations per female was related to the arithmetic or log dose.

c. Total number of corpora lutea

The t-test was used to determine significant differences between average number of corpora lutea per pregnant female for each treatment compared to the control.

d. Preimplantation losses

Preimplantation losses were computed for each female by subtracting the number of implantations from the number of corpora lutea. Freeman-Tukey transformation was used on the preimplantation losses for each female and then the t-test was used to compare each treatment to control. Regression technique was used to determine whether the average number of preimplantation losses per female was related to the arithmetic or log dose.



e. Dead implants

Dead implants were treated the same as pre-implantation losses.

f. One or more dead implants

The proportion of females with one or more dead implants was computed, each treatment compared to control by chi-square test and Armitage's trend used for linear proportions to see if proportions were linearly related to either arithmetic or log dose. Also, probit regression analysis was used to determine whether the probit of the proportions was related to log dose.

g. Two or more dead implants

The proportion of females with two or more dead implants computed was treated same as above (f).

h. Dead implants per total implants

Dead implants per total implants were computed for each female and used Freeman-Tukey arc-sine transformation on data for each female; then used t-test to compare each treatment to control.

Historical control data was compiled on a continuous basis as studies were completed. In addition to comparing each treatment to control, as outlined above, each treatment was compared to a historical control.

In order to take variation between males into account, a nested model was used. An analysis of across weeks is also provided.

In addition to these tests, the distribution forms of the various parameters were tested in order to evaluate the appropriateness of some of the tests being used. Certain correlations between parameters may exist and were examined as one step to determine the appropriateness of models. If necessary, alternate test methods were implemented.



The results are presented in tabular form with the addition of historical control information. In addition to these tables, a written report of all findings is provided. As information became available from the on-going investigation of these data, it was reported and suggestions included for changes to the methods of analysis. The statistical reports give the level of significance using both a one-tailed and two-tailed test. Finally, a summary sheet for each study is provided.



MODEL

$$y_{ijk} = \mu + \alpha_i + \beta_{ij} + \epsilon_{ijk},$$

$i = 1, 2$. Group $j = 1, 2, \dots, 10$ Males within each group
 1, 2. Females within Males within Groups

EMPTIONS:

$$\alpha_1 + \alpha_2 = 0, \quad \epsilon_{ij} \sim \text{nid}(\mu, \sigma^2),$$

$$\epsilon_{ijk} \sim \text{nid}(\mu, \sigma^2)$$

Males are randomly drawn from infinite population

SUM	df	S.E.	MS	E(MS)	F
TOTAL	29	$\sum (y_{ijk} - \bar{y}_{...})^2$			
GROUPS	1	$2\sum (\bar{y}_{..} - \bar{y}_{...})^2$	S_1^2	$6^2 + 20L^2/20000$	
MALES WITHIN GROUPS	18	$2\sum (\bar{y}_{ij} - \bar{y}_{...})^2$	S_2^2	$0^2 + 20L^2$	
REMAINDER	20	$2\sum (\bar{y}_{ijk} - \bar{y}_{ij})^2$	S_3^2	0^2	

E. References

1. Host-Mediated Assay
 - a. Gabridge, M.G., Denunzio, A. and Legator, M.S.: *Nature*, 221:68, 1969.
 - b. Gabridge, M.G., Denunzio, A. and Legator, M.S.: *Science*, 163:689, 1969.
 - c. Gabridge, M.G. and Legator, M.S.: *Proc. Soc. Exptl. Biol. Med.*, 130:831, 1969.
 - d. Gabridge, M.G., Oswald, E.J. and Legator, M.S.: *Mut. Res.*, 7:117, 1969.
 - e. Legator, M.S. and Malling, H.V.: In, Environmental Chemical Mutagens, A. Hollaender (Ed.), Plenum Publishing Corp., New York, in press.
2. Cytogenetics
 - a. Nichols, V.W.: Personal communication.
 - b. Legator, M.S.: In, Laboratory Diagnosis of Diseases Caused by Toxic Agents, F. W. Sunderman and F. W. Sunderman (Ed.), Warren H. Green, Inc., St. Louis, pp. 17-22, 1970.
 - c. Hsu, T.C. and Patton, J.L.: Technical Addendum in, Comparative Mammalian Cytogenetics, K. Benirschke (Ed.), Springer-Verlag, New York, pp. 454-460, 1969.
 - d. Legator, M.S. et al.: Cytogenetic studies in rats of cyclohexylamine, a metabolite of cyclamate. *Science*, 165:1139, 1969.

3. Dominant Lethal

- a. Bateman, A.J.: Genet. Res. Comb., 1:381, 1960.
- b. Bateman, A.J.: Nature, 210:205, 1966.
- c. Ehling, U.H., Cumming, R.B. and Malling, H.V.: Mut. Res., 5:417, 1968.
- d. Epstein, S.S. and Shafner, H.: Nature, 219: 385, 1968.



F. Abbreviations

1. μ = micron
2. mcg = ug = microgram
3. g = gram
4. kg = kilogram
5. ml = milliliter
6. rpm = revolutions per minute
7. °C = degrees centigrade
8. pH = power of the hydrogen ion concentration to the base 10
9. M = molar solution
10. conc. = concentration
11. MTD = maximum tolerated dosage = High = LD₅ if determined or else exceedingly high dose, such as 5 g/kg
12. INT = intermediate = medium level
13. USE = usage level if known = low level
14. BSS = balanced salt solution
15. C-metaphase = cells arrested in metaphase, using colchicine or colcemid
16. LD₅₀ = that dosage which produced 50% mortality in the group of animals treated
17. LD₅ = that dosage which produced 5% mortality in the group of animals treated
18. NC = negative control
19. PC = positive control
20. AU = acute usage level (low level)
21. AI = acute intermediate level (medium level)
22. AMTD = acute maximum tolerated dose level (LD₅ level, high level)



23. SAU = subacute usage level (low level)
24. SAI = subacute intermediate level (medium level)
25. SA LD₅ = subacute LD₅ level (MTD level, high level)
26. CO₂ = carbon dioxide
27. DMN = Dimethyl nitrosamine
28. EMS = Ethyl methane sulfonate
29. TEM = Triethylene melamine
30. DMSO = Dimethyl sulfoxide
31. MEM = minimal essential medium (Eagle's)
32. CPE = cytopathic effect
33. his = histidine marker
34. D-3 = mitotic recombinant strain of Saccharomyces
35. mf = mean mutant frequency
36. MFr/MFc = mean mutant frequency of the test compound group compared to mean mutant frequency of the negative control group
37. CFU = colony forming units
38. WI-38 = code name for a strain of human embryonic lung tissue culture cells
39. Rec x 10⁵ = mitotic recombinants x 10⁵
40. Mean B/A = mean frequency
41. tot. scr. = total scored
42. tot. = total
43. χ^2 = a test of variation in the data from the computed regression line - tested in these studies at the 5% level
44. Aber. = aberrations
45. Frag. = fragment
46. HMA = host-mediated assay

