

BIONETICS

SUMMARY OF MUTAGENICITY
SCREENING STUDIES
HOST-MEDIATED ASSAY
CYTOGENETICS
DOMINANT LETHAL ASSAY
CONTRACT FDA 71-268
COMPOUND FDA 71-48
SILICA AEROGEL P26

Summary of mutagenicity screening studies, host-mediated assay cytogenetics dominant
lethal assay-Contract FDA 71-268 & Compound FDA 71-48
10/24/74
(Silica Aerogel)

LBI PROJECT #2446

P26

SUMMARY OF MUTAGENICITY
SCREENING STUDIES
HOST-MEDIATED ASSAY
CYTOGENETICS
DOMINANT LETHAL ASSAY
CONTRACT FDA 71-268
COMPOUND FDA 71-48
SILICA AEROGEL

SUBMITTED TO

FOOD & DRUG ADMINISTRATION
DEPARTMENT OF HEALTH, EDUCATION AND WELFARE
ROCKVILLE, MARYLAND

SUBMITTED BY

LITTON BIONETICS, INC.
5516 NICHOLSON LANE
KENSINGTON, MARYLAND

OCTOBER 24, 1974



BIONETICS



BIONETICS

5516 Nicholson Lane, Kensington, Maryland 20795 301 881-5800

October 24, 1974

Mr. Leonard Appleby, Contracting Officer
Department of Health, Education and Welfare
Public Health Service
Food and Drug Administration, CA-212
5600 Fishers Lane, Room 5C-13
Rockville, Maryland 20852

Reference: Contract FDA 71-268; LBI Project #2446

Dear Mr. Appleby:

Litton Bionetics, Inc., is pleased to submit a report for the referenced contract entitled "Mutagenicity Screening Studies" for compound FDA 71-48, Silica Aerogel.

Included in this report are the results and raw data of the three tests conducted: Host-Mediated Assay, Cytogenetic Studies and Dominant Lethal Assay. Eight (8) copies are being submitted for your review.

Upon completion of the toxicology work an evaluation was made of our results to those appearing in the literature. In cases where our values were lower, the toxicology was repeated. In some instances either the Host-Mediated Assay, Dominant Lethal Assay, and/or Cytogenetic Studies were also repeated at one or more levels to fulfill the requirements of the contract. In some cases, the acute and/or subacute assays were involved.

If there are any questions concerning this report, or, if additional information is required, please do not hesitate to contact us.

Sincerely,

LITTON BIONETICS, INC.

Robert J. Weir, Ph.D.
Vice President

RJW:11s
Enclosures (8)

TABLE OF CONTENTS

	Page No.
I. REPORT	1
A. Introduction	1
B. Objective	2
C. Compound	3
1. Test Material	3
2. Dosages	3
D. Methods	4
E. Summary	4
1. Host-Mediated Assay	4
2. Cytogenetics	4
a. <u>In vivo</u>	4
b. <u>In vitro</u>	5
3. Dominant Lethal	5
F. Results and Discussion	5
1. Toxicity Data - Test I	5
a. <u>In vivo</u>	5
b. <u>In vitro</u>	6
c. Toxicity data sheets	8
2. Host-Mediated Assay - Test I	12
a. Host-mediated assay summary sheets	14
b. Host-mediated assay data sheets ...	16
3. Toxicity Data - Test II	41
Toxicity Data Sheets	42
4. Host-Mediated Assay - Test II	44
a. Host-mediated assay summary sheets	45
b. Host-mediated assay data sheets ...	49
5. Cytogenetics - Test I	78
a. <u>In vivo</u>	78
b. <u>In vitro</u>	78
c. Cytogenetic summary sheets	80
6. Cytogenetics - Test II	84
Cytogenetic Summary Sheets	85
7. Dominant Lethal Study - Test I	88
Dominant Lethal Assay Summary Tables	90
8. Dominant Lethal Study - Test II	108
Dominant Lethal Assay Summary Tables	109
II. MATERIALS AND METHODS	126
A. Animal Husbandry	126
1. Animals (Rats and Mice)	126
2. Preparation of Diet	126
3. Husbandry	126
B. Dosage Determination	126
1. Acute LD ₅₀ and LD ₅ Determination	126
2. Subacute Studies	128



BIONETICS

TABLE OF CONTENTS (continued)

Page No.

II. MATERIALS AND METHODS (continued)

C.	Mutagenicity Testing Protocols	128
1.	Host-Mediated Assay	128
a.	Acute study	129
b.	Subacute study	131
c.	<u>In vitro</u> study	131
2.	Cytogenetic Studies	132
a.	<u>In vivo</u> study	132
b.	<u>In vitro</u> study	134
3.	Dominant Lethal Assay	136
D.	Supplementary Materials and Methods	137
1.	Host-Mediated Assay <u>In Vitro</u> and Formulae.	137
a.	Bacterial <u>in vitro</u> plate tests	137
b.	<u>In vitro</u> for mitotic recombination.	137
c.	Minimal medium (bacteria)	138
d.	Complete medium (bacteria)	139
e.	Complete medium (yeast)	139
2.	Cytogenetics <u>In Vitro</u> Preparation of Anaphase Chromosomes	140
3.	Statistical Analyses of Dominant Lethal Studies	141
a.	The fertility index	141
b.	Total number of implantations	141
c.	Total number of <u>corpora lutea</u>	141
d.	Preimplantation losses	141
e.	Dead implants	142
f.	One or more dead implants	142
g.	Two or more dead implants	142
h.	Dead implants per total implants ..	142
E.	References	145
1.	Host-Mediated Assay	145
2.	Cytogenetics	145
3.	Dominant Lethal	146
F.	Abbreviations	147



BIONETICS

I. REPORT

A. Introduction

Litton Bionetics, Inc. (LBI) has investigated the possible mutagenicity of compounds selected and provided by the Food and Drug Administration under Contract 71-268. LBI's investigation utilized the three mammalian test systems herein described -- Host-Mediated Assay, Cytogenetic Studies and Dominant Lethal Assay. These tests provide information as to the types of genetic damage caused by environmental compounds -- pesticides, chemicals, food additives, drugs and cosmetics.

The Host-Mediated Assay is based upon the assumption that the action of a mutagen on the genetics of bacteria is similar to that in man. This is further strengthened by the use of an eukaryotic organism (Saccharomyces cerevisiae). Since the mutation frequencies are well established for the indicator organism, any deviation due to the action of the test compound is readily detectable. As some compounds are mutagenic in bacteria and not in the host animal, and vice versa, this test is able to differentiate an action which may have been due to hosts' ability to detoxify or potentiate a suspected mutagen. This action is dependent upon the ability of the compound to gain access to the peritoneal cavity. Coupled with the direct action of the compound on the indicator organism in vitro, the assay provides a clear insight into host-mediation of mutagenicity.

Cytogenetics provides a valuable tool for the direct observation of chromosomal damage in somatic cells. Alteration of the chromosome number and/or form in somatic cells may be an index of mutation. These studies utilized examination of bone marrow cells arrested in C-metaphase from rats exposed to the test compound as compared to positive and negative control animals. If mutational

changes occur, the types of damage expected due to the action of chemicals are structural rearrangements, breaks and other forms of damage to the chromosomal complement of the cells exposed.

For the in vitro cytogenetic studies, we have a more rapid and inexpensive means of determining chromosomal damage. This is accomplished by observing cells in anaphase. As the chromatids separate and move along the spindle, aberrations may occur. Chromatids which do not migrate to the daughter cells may lead to uneven distribution of parts or of entire chromatids (mitotic nondysjunction). These give rise to "side arm" bridges which have been interpreted as point stickiness or localized failures of chromosome duplication point errors. These aberrations (bridges, pseudochiasmata, multipolar cells, acentric fragments, etc.) are extremely sensitive indicators of genetic damage.

The Dominant Lethal Test is an accurate and sensitive measure of the amount and type of fetal wastage which may occur following administration of a potential mutagen. Dominant lethal mutations are indicators of lethal genetic lesions. The effects of mutagens on the chromosomal complement of the spermatozoa of treated males results in alterations of form and number of chromosomes. Structural rearrangements and aneuploidy may lead to the production of non-viable zygotes, early and late fetal deaths, abortions and congenital malformations. In addition, aberrations could lead to sterility or reduced reproductive capacity of the F_1 generation. The action of a mutagen on specific portions of spermatogenesis is also apparent in this test.

B. Objective

The purpose of these studies is to determine any mutagenic effect of the test compound by employing the Host-Mediated Assay, Cytogenetic Studies



and the Dominant Lethal Assay, both in vivo and in vitro tests are employed with the cytogenetic and microbial test systems. These tests and their descriptions are referenced in the Appendices A through F.

C. Compound

1. Test Material

Compound FDA 71-48, Silica Aerogel (Syloid 244), Lot Number 2, as supplied by the Food and Drug Administration.

2. Dosages

The animals employed, the determination of the dosage levels and the route of administration are contained in the technical discussion.

The dosage levels employed for compound FDA 71-48 are as follows for the Cytogenetic Studies in vivo in rats.

	<u>Test I⁺</u>	<u>Test II⁺</u>
Low Level	1.4 mg/kg	-----
Intermediate Level	14.0 mg/kg	500.0 mg/kg
LD ₅	140.0 mg/kg	5000.0 mg/kg
Negative Control	Saline	Saline
Positive Control (TEM*)	0.3 mg/kg	0.3 mg/kg

The dosage levels employed for compound FDA 71-48 are as follows for the Host-Mediated Assay in vivo in mice.

	<u>Test I⁺</u>	<u>Test II⁺</u>
Low Level	1.4 mg/kg	-----
Intermediate Level	14.0 mg/kg	500.0 mg/kg
LD ₅	140.0 mg/kg	5000.0 mg/kg
Negative Control	Saline	Saline
Positive Control (EMS**)	350 mg/kg	350 mg/kg
(DMN***)	100 mg/kg	100 mg/kg

* Triethylene Melamine

** Ethyl Methane Sulfonate

*** Dimethyl Nitrosamine

+ These two tests were performed at different time intervals.



The dosage levels employed for compound FDA 71-48 are as follows for the Dominant Lethal Assay in vivo in rats.

	<u>Test I</u> ⁺	<u>Test II</u> ⁺
Low Level	1.4 mg/kg	-----
Intermediate Level	14.0 mg/kg	500.0 mg/kg
LD ₅	140.0 mg/kg	5000.0 mg/kg
Negative Control	Saline	Saline
Positive Control (TEM*)	0.3 mg/kg	0.3 mg/kg

The in vitro Cytogenetic Studies were performed employing three logarithmic dose levels.

Low Level	0.1 mcg/ml
Medium Level	1.0 mcg/ml
High Level	10.0 mcg/ml
Negative Control	Saline
Positive Control (TEM*)	0.1 mcg/ml

The discussion of this test is contained in the technical discussion.

D. Methods

The protocols employed are explained in Appendices C and D.

E. Summary

1. Host-Mediated Assay

The compound caused no increased mutation or recombinant frequencies when tested against Salmonella TA-1530 and G-46 or Saccharomyces D3, respectively, at the dose levels tested. The in vitro tests were negative.

2. Cytogenetics

a. In vivo

The compound produced no detectable significant aberration of the bone marrow metaphase chromosomes of rats when administered orally at the dosage levels employed in this study.

*Triethylene Melamine

+These two tests were performed at different time intervals.



BIONETICS

b. In vitro

The compound produced no significant aberration in the anaphase chromosomes of human tissue culture cells when tested at the dosage levels employed in this study.

3. Dominant Lethal

This compound was considered to be non-mutagenic in rats in the Dominant Lethal Assay when using the dosages employed in this study.

F. Results and Discussion

1. Toxicity Data - Test I

a. In vivo

Compound FDA 71-48 was suspended in 0.85% saline and administered to 10 male rats by oral intubation. The average weight of the animals was 340 grams and each received a dose of 5000 mg/kg. Saline as a finely ground powder. All animals were found dead on day 1 within 6 hours after administration of the compound. Findings at necropsy indicated distended stomach with bloody patches in the stomach at the pyloric end. Also found at necropsy were a vascular stomach and reddened intestinal lining.

Dose levels of 10, 50, 100, 500, 1000 and 2000 mg/kg were selected to determine an acute LD₅₀.

The toxicity data is presented on the LD₅₀ reporting form using the Litchfield-Wilcoxon method.

The LD₅₀ was determined as 470 mg/kg. The LD₅ dose level was derived from the raw data LD₅₀ probit line (uncorrected). The LD₅₀ derived from both corrected probit line and the uncorrected probit line were within confidence limits of each other. The acute doses used were LD₅ - 140 mg/kg, intermediate - 14.0 mg/kg and usage level - 1.4 mg/kg. The subacute



dose levels used were the same as those for the acute. The data on the dose levels, numbers of animals and the necropsy findings are presented in the toxicity data sheets.

b. In vitro

The compound was ground finely and suspended in 0.85% saline at the concentrations listed below. It was introduced into the tubes containing the WI-38 cells. The cells were observed for any CPE and the presence of mitoses.

<u>Tube No.</u>	<u>No. of Cells</u>	<u>Conc. mcg/ml</u>	<u>CPE</u>	<u>Mitoses</u>
1	5×10^5	1000	+	+
2	5×10^5	1000	+	+
3	5×10^5	500	+	+
4	5×10^5	500	+	+
5	5×10^5	100	+	+
6	5×10^5	100	+	+
7	5×10^5	10	-	+
8	5×10^5	10	-	+
9	5×10^5	1.0	-	+
10	5×10^5	1.0	-	+

Since a CPE (clumping of cells) was noted a closer range of concentrations was employed, as shown on the following page.

<u>Tube No.</u>	<u>No. of Cells</u>	<u>Conc. mcg/ml</u>	<u>CPE</u>	<u>Mitoses</u>
1	5×10^5	100	+	+
2	5×10^5	100	-	+
3	5×10^5	75	+	+
4	5×10^5	75	+	+
5	5×10^5	50	+	+
6	5×10^5	50	+	+
7	5×10^5	25	-	+
8	5×10^5	25	+	+
9	5×10^5	10	-	+
10	5×10^5	10	-	+

Since the 10 mcg/ml level was the only level free of observable CPE in both range findings it was selected for use as the high level. The medium and low levels were 1.0 mcg/ml and 0.1 mcg/ml, respectively. The surprising toxicity of this compound in vitro could be due to its hydroscopic qualities and an apparent alkaline reaction of the tissue culture medium.

c. TOXICITY DATA SHEETS
CONTRACT FDA 71-268
COMPOUND FDA 71-48
SILICA AEROGEL
TEST I



TOXICITY DATA
COMPOUND FDA 71-48

Solvent: 0.85% saline

Dosage Form: Suspension

Animals: Male rats with an average body weight of 340 grams. All animals were observed for 10 days.

Ring Finding:

	<u>Dose mg/kg</u>	<u># Dead # Animals</u>	<u>Day of Death and Necropsy</u>
	5000	10/10	Day 1: Distended stomach with bloody patches at the pyloric end.
LD ₅₀ :	10	0/5	None
	50	0/5	None
	100	1/5	Day 3: Distended stomach with bloody patches at the pyloric end.
	500	3/5	Day 1 (1); Day 2 (1); Day 3 (1): Distended stomach with bloody patches at the pyloric end.
	1000	3/5	Day 1: Distended stomach with bloody patches at the pyloric end.
	2000	4/5	Day 1: Distended stomach with bloody patches at the pyloric end.



LD₅₀ REPORTING FORM USING LITCHFIELD-WILCOXON METHOD

DOSE EFFECT CURVE FOR Compound FDA 71-48
Silica Aerogel
FDA Contract 71-268

DOSE	PROPORTION	OBSERVED PERCENT	EXPECTED PERCENT	OBS-EXPT PERCENT	CONTRIB. TO (chi) ²
50	.5/5	.100	.111	- .011	.006
100	1/5	.200	.203	- .003	.000
500	3/5	.600	.520	+ .080	.128
1000	3/5	.600	.666	- .066	.103
2000	4/5	.800	.794	+ .006	.001

Total animals = 25

Total = .238

Number Doses, K = 5

(CHI)² = .238

Animals/Dose = 5

Decreases of Freedom, n=k-2= 3

(CHI)² for n of k-2 = 7.81

since .238 is less than 7.81,
therefore data not significantly
heterogeneous

LD₈₄ = 2,800

LD₅₀ = 470

LD₁₆ = 78

fLD₅₀ = S $\frac{2.77}{\sqrt{N!}}$ = 5.9915 $\frac{2.77}{\sqrt{N!}}$ = 5.9915 $\frac{2.77}{\sqrt{20}}$ = 3.033

LD₅₀ x feD₅₀ = 1,425.5

LD₅₀ = 155.0


fLD₅₀

LD₅₀ and 19/20 Confidence Limits = P (155 LD₅₀ 1426) = .95

Attached should be a plot of the dose-effect curve on log-probit paper.

Animals Dead / Total Animals

11

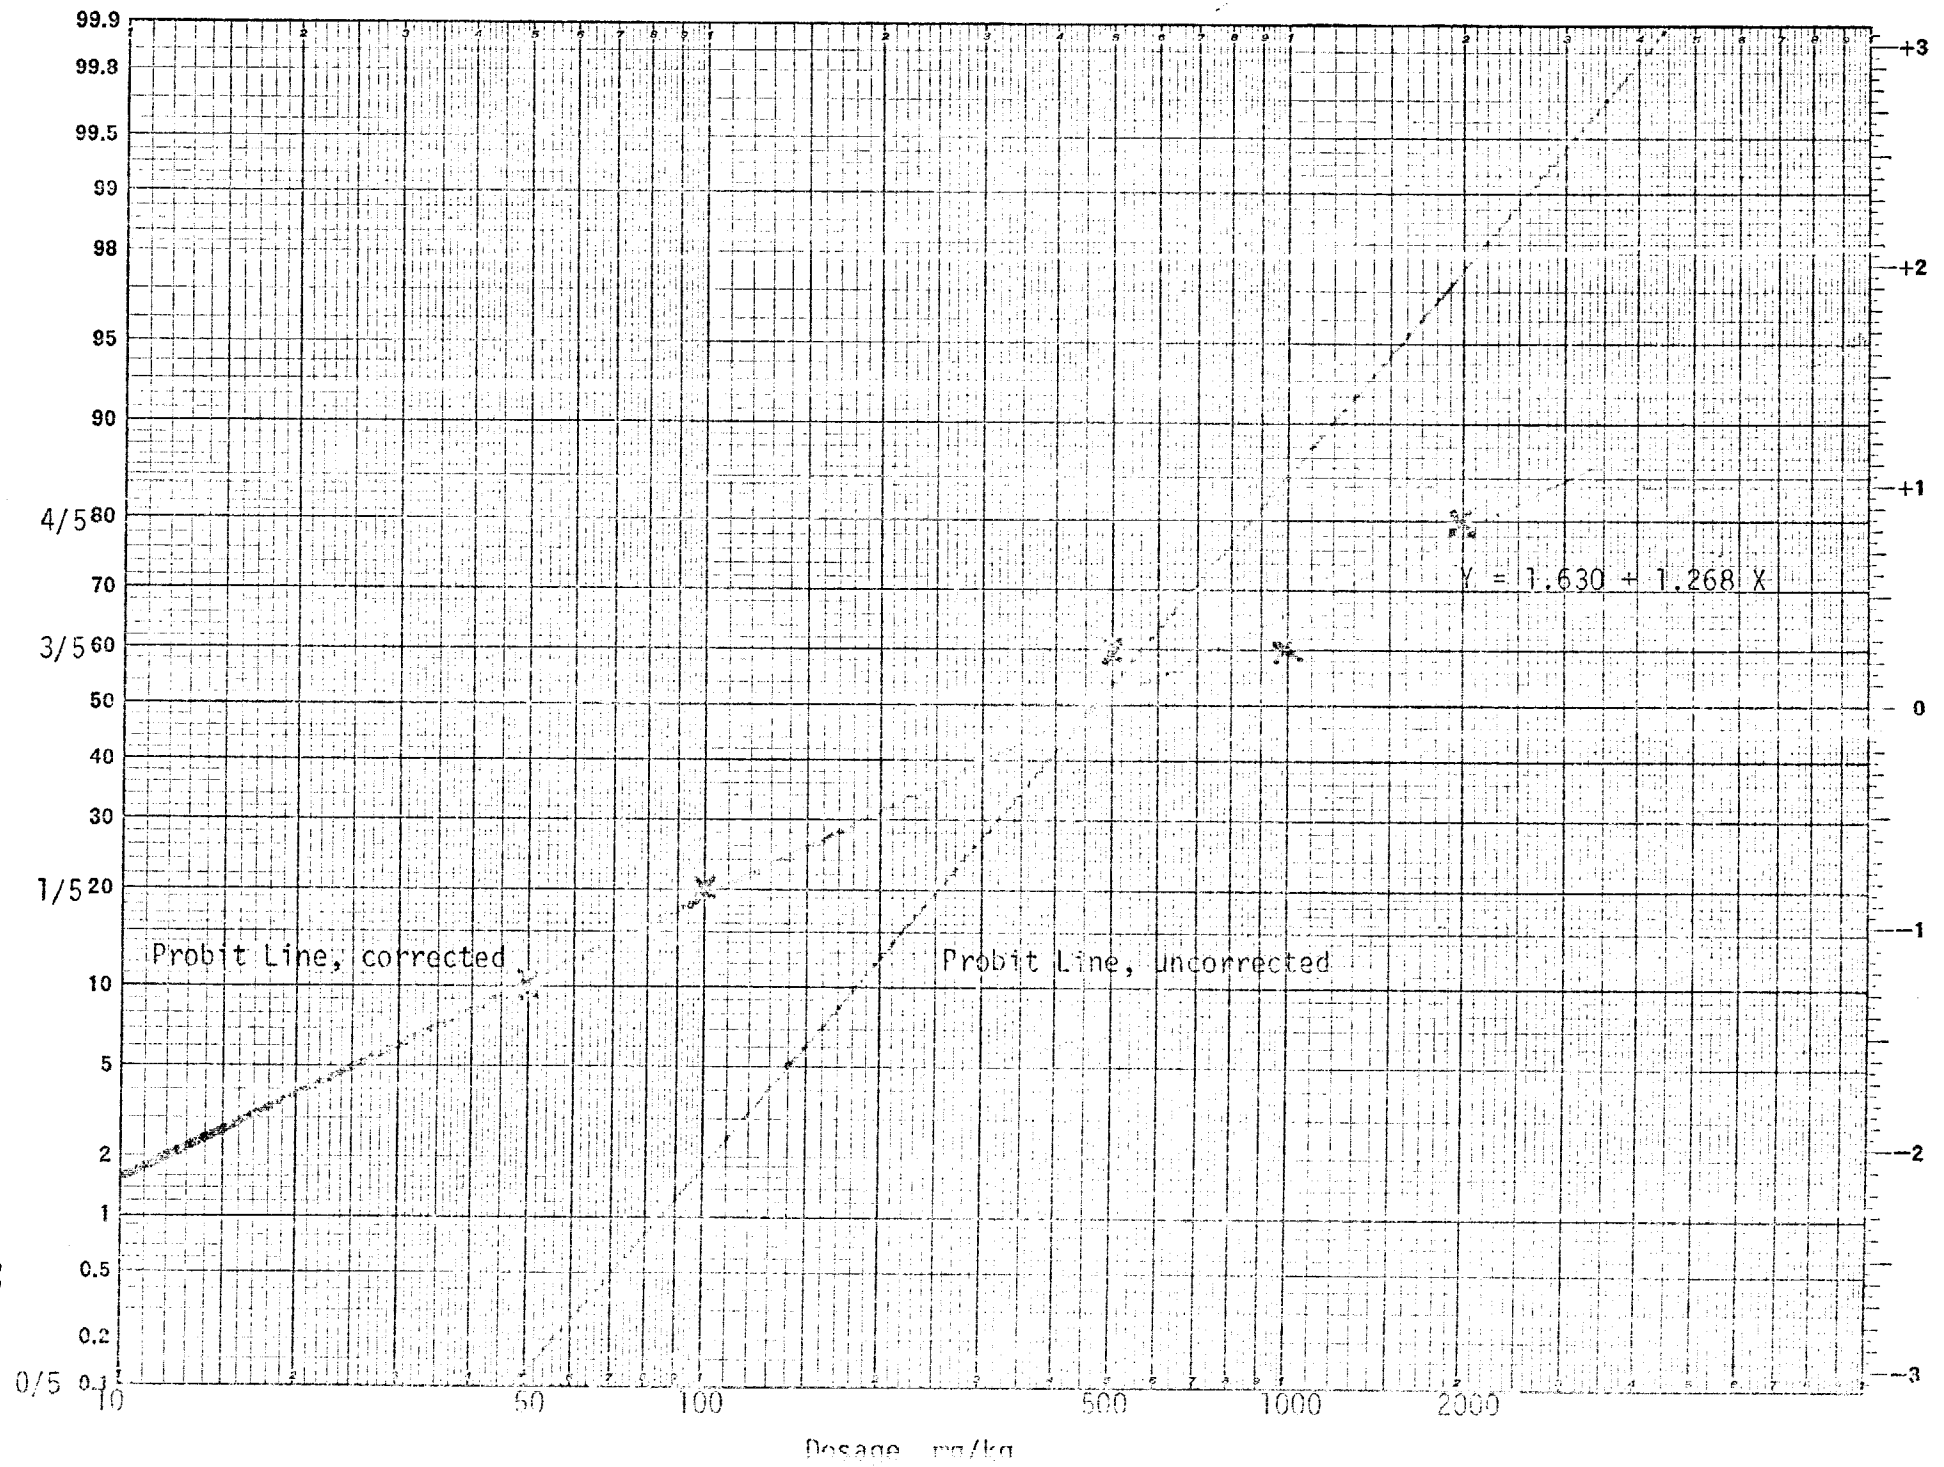

Compound FDA 71-48
Silica Aerogel

2. Host-Mediated Assay - Test I

Compound FDA 71-48 caused no increases in mutant or recombinant frequencies when tested against Salmonella TA-1530 and G-46 or Saccharomyces D3, respectively at the dose levels employed in this study. In vitro tests using the same organisms were negative.



EVALUATION SHEET

Compound: 71-48

Indicator Strain	In Vitro	In Vivo		
		Possible Low Recoveries	Controls	Other Comments
TA-1530	pos.	NC	NC OK	1. All doses negative
10/6/72		PC		
(all)	(neg.)	AL	PC slightly low	2. Two recoveries were
		AI		a little low but the
		AD	SANC	frequencies were OK
		SAL		3. Would like to see the
		SAI		positive control somewhat
		(SAH)		higher
<hr/>				
G-46		NC	NC OK	1. All doses negative
9/22/72	pos.	PC		
(all)	(neg.)	AL	PC OK	
		AI		
		AH	SANC	
		SANC		
		SAL		
		SAI		
		SAH		
<hr/>				
D3		NC	NC slightly low	1. All doses negative
9/1/72	pos.	PC		
(all)	(neg.)	AL	PC slightly low	
		AI		
		AH	SANC	
		SANC		
		SAL		
		SAI		
		SAH		

Summary: This compound shows no significant genetic activity in any of the assays.

I would like to see the positive control frequencies for TA-1530 and G-46 a

little higher. The positive and negative controls for D3 were a little low -

probably a result of the higher plating frequencies compared to earlier reports. I would expect this report to be accepted.

a. **HOST-MEDIATED ASSAY SUMMARY SHEETS**

CONTRACT FDA 71-268

COMPOUND FDA 71-48

SILICA AEROGEL

TEST I



BIONETICS

HOST MEDIATED ASSAY

COMPOUND: FDA 71-48

	TA1530		G-46		SACCHAROMYCES D-3	
	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC	MRF (X 10E-5)	MRT/MRC
ACUTE						
NC	.68		.64		2.75	
PC	5.85	8.60	14.40	22.50	23.09	8.40
AL	.77	1.13	.72	1.13	5.61	2.04
AI	.44	.65	1.28	2.00	7.72	2.81
LD5	.79	1.16	.77	1.20	7.23	2.63
SUBACUTE						
NC	.68		.64		2.75	
SL	.69	1.01	.51	.80	5.26	1.91
SI	.86	1.26	.79	1.23	7.38	2.68
SLD5	1.27	1.87	.53	.83	7.13	2.59
IN VITRO	TA1530	G-46	% CONC	D-3 % SURVIVAL	R X 10E5	
TCPD	-	-	7.5	72.6	2	
NC	-	-	-	100.0	5	
PC	+	+	0.5	68.8	267	

STOP
SRU'S:.5

b. HOST-MEDIATED ASSAY DATA SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-48

SILICA AEROGEL

TEST I



BIONETICS

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-42

ORGANISM: SALMONELLA T/153

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: OCTOBER 6, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E3/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-2
1	10.10	1.68	1.00	.59
2	7.00	1.17	1.00	.86
3	7.40	1.23	1.00	.81
4	18.50	3.03	2.00	.65
5	27.50	4.55	2.00	.44 *
6	26.90	4.48	3.00	.67
7	8.30	1.38	1.00	.72

NO. OF ANIMALS EQUALS 7
TOTAL CFU OUT OF RANGE EQUALS 2
SAMPLES WITH ZERO MUTANTS EQUAL 1

	COL. B (X 10E3)	COL. C (X 10E0)	COL. D (X 10E-2)
MEAN	2.51	1.57	.63
RANGE	3.38	2.00	.42
MAX	4.55	3.00	.86
MIN	1.17	1.00	.44

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E3)	COL. C (X 10E0)	COL. D (X 10E-2)
MEAN	2.17	1.50	.72
RANGE	3.32	2.00	.26
MAX	4.48	3.00	.86
MIN	1.17	1.00	.59

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: POSITIVE CONTROL - DMN - 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: OCTOBER 6, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8	
1	13.50	2.25	40.00	17.78	*
2	22.60	3.77	24.00	6.37	
3	14.70	2.45	15.00	6.12	
4	24.40	4.07	48.00	11.80	
5	26.90	4.48	33.00	7.36	
6	15.50	2.58	17.00	6.58	
7	26.30	4.38	25.00	5.70	
8	19.60	3.27	27.00	8.27	

NO. OF ANIMALS EQUALS 8
 NO. OF CONTAMINATED EQUALS 1
 TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	3.41	28.63	8.75
RANGE	2.23	33.00	12.07
MAX	4.48	48.00	17.78
MIN	2.25	15.00	5.70

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	3.57	27.00	7.46
RANGE	2.03	33.00	6.10
MAX	4.48	48.00	11.80
MIN	2.45	15.00	5.70

OP
 S:..7

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FPA 71-46

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: LOW - 1.40 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: OCTOBER 6, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-3
1	18.20	3.83	2.00	.66
2	16.00	2.87	3.00	1.12
3	21.50	3.58	2.00	.56
4	7.40	1.23	1.00	.81
5	13.70	2.28	3.00	1.31
6	36.20	6.03	2.00	.33
7	10.70	1.78	1.00	.56

NO. OF ANIMALS EQUALS 7
TOTAL CFU OUT OF RANGE EQUALS 3

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-3)
MEAN	2.95	2.00	.77
RANGE	4.82	2.00	.98
MAX	6.03	3.00	1.31
MIN	1.23	1.00	.33

NO OUTLIERS

HOST MEDIATED ASSAY REPORT SHEET

CO-POUNDS: FEA 71-48

ORGANISM: SALMONELLA T1531

DOSE LEVEL: INTERMEDIATE - 14.0 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: OCTOBER 6, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/P) X 10E-6
1	35.80	5.97	2.00	.34
2	18.10	3.02	1.00	.33
3	40.80	6.77	3.00	.44
4	11.30	1.88	1.00	.53
5	23.30	3.88	1.00	.26
6	8.80	1.47	1.00	.68
7	12.50	2.08	1.00	.43

NO. OF ANIMALS EQUALS 7

NO. OF CONTAMINATED EQUALS 1

TOTAL CFU OUT OF RANGE EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-6)
MEAN	3.58	1.43	.44
RANGE	5.30	2.00	.42
MAX	6.77	3.00	.68
MIN	1.47	1.00	.26

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-6)
MEAN	3.93	1.50	.46
RANGE	4.88	2.00	.27
MAX	6.77	3.00	.53
MIN	1.88	1.00	.26

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: F0A 71-48

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: LD5 - 140.0 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: OCTOBER 6, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-2
1	9.70	1.62	2.00	1.24
2	6.40	1.07	1.00	.94
3	8.30	1.30	1.00	.72
4	7.10	1.18	1.00	.85
5	16.10	2.60	1.00	.37
6	13.10	2.10	1.00	.46
7	6.20	1.03	1.00	.97

NO. OF ANIMALS EQUALS 7
TOTAL CFU OUT OF RANGE EQUALS 0

	COL. A (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-2)
MEAN	1.59	1.14	.79
RANGE	1.63	1.00	.85
MAX	2.60	2.00	1.24
MIN	1.03	1.00	.37

NO OUTLIERS

HUET MEDIATED ASSAY REPORT SHEET

DO POUND: FDA 71-48

ORGANISM: SALMONELLA 72153

DOSE LEVEL: LOW - 1.40 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: OCTOBER 6, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/A) X 10E-6
1	13.70	2.28	3.00	1.31
2	12.30	2.35	1.00	.49
3	34.00	5.67	3.00	.53
4	17.30	2.88	1.00	.35
5	7.20	1.20	1.00	.83
6	25.10	4.10	3.00	.72
7	19.00	3.17	2.00	.63

NO. OF ANIMALS EQUALS 7

TOTAL CFU OUT OF RANGE EQUALS 3

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-6)
MEAN	3.88	2.00	.69
RANGE	4.47	2.00	.97
MAX	5.67	3.00	1.31
MIN	1.20	1.00	.35

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-6)
MEAN	3.19	1.83	.50
RANGE	4.47	2.00	.49
MAX	5.67	3.00	.83
MIN	1.20	1.00	.35

TOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-46

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: INTERMEDIATE - 14.0 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: OCTOBER 6, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E2/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/D) X 10E-2
1	8.10	1.35	1.00	.70
2	6.80	1.13	2.00	1.76
3	22.50	3.75	3.00	.80
4	20.30	3.38	3.00	.89
5	18.10	3.02	1.00	.33
6	23.70	3.95	2.00	.51
7	11.60	1.97	2.00	1.02

NO. OF ANIMALS EQUALS 7

NO. OF CONTAMINATED EQUALS 1

TOTAL CFU OUT OF RANGE EQUALS 2

	COL. B (X 10E2)	COL. C (X 10E0)	COL. D (X 10E-2)
MEAN	2.65	2.00	.86
RANGE	2.82	2.00	1.43
MAX	3.95	3.00	1.76
MIN	1.13	1.00	.33

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E2)	COL. C (X 10E0)	COL. D (X 10E-2)
MEAN	2.90	2.00	.71
RANGE	2.00	2.00	.69
MAX	3.95	3.00	1.02
MIN	1.35	1.00	.33

TOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-43

ORGANISM: SALMONELLA T153

DOSE LEVEL: LD5 - 140.0 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: OCTOBER 6, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E6/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	7.30	1.22	2.00	1.64
2	10.59	1.75	3.00	1.71
3	7.40	1.23	1.00	.61
4	18.70	3.12	2.00	.64
5	12.20	2.63	2.00	.99
6	14.93	2.46	3.00	1.21
7	6.60	1.10	2.00	1.82
8	17.70	2.95	4.00	1.36

NO. OF ANIMALS EQUALS 8

NO. OF CONTAMINATED EQUALS 1

TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E6)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	1.99	2.38	1.27
RANGE	2.02	3.00	1.15
MAX	3.12	4.00	1.82
MIN	1.10	1.00	.64

NO OUTLIERS

TOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA 6-#6

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: SEPTEMBER 22, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	34.00	5.67	3.00	.53
2	50.90	8.48	4.00	.47
3	34.00	5.67	4.00	.71
4	58.00	9.67	4.00	.41
5	31.50	5.25	6.00	1.14
6	34.70	5.78	3.00	.52
7	54.20	9.03	6.00	.66

NO. OF ANIMALS EQUALS 7
TOTAL CFU OUT OF RANGE EQUALS 2
SAMPLES WITH ZERO MUTANTS EQUAL 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	7.08	4.29	.64
RANGE	4.42	3.00	.73
MAX	9.67	6.00	1.14
MIN	5.25	3.00	.41

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	7.38	4.00	.55
RANGE	4.00	3.00	.29
MAX	9.67	6.00	.71
MIN	5.67	3.00	.41

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FEA 71-48

ORGANISM: SALMONELLA G-46

DOSE LEVEL: POSITIVE CONTROL - DMN - 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: SEPTEMBER 22, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E6/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/D) X 10E-2	
1	19.10	3.18	91.00	28.59	*
2	57.70	9.62	97.00	10.09	
3	59.10	9.85	62.00	6.29	
4	55.40	9.23	106.00	11.70	
5	23.50	3.92	64.00	16.34	
6	44.90	7.48	75.00	10.42	
7	38.00	6.33	110.00	17.37	

NO. OF ANIMALS EQUALS 7
 NO. OF DEAD ANIMALS EQUALS 1
 NO. OF CONTAMINATED EQUALS 1
 TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E6)	COL. C (X 10E0)	COL. D (X 10E-2)
MEAN	7.09	87.14	14.42
RANGE	6.67	48.00	22.29
MAX	9.85	110.00	28.59
MIN	3.12	62.00	6.29

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E6)	COL. C (X 10E0)	COL. D (X 10E-2)
MEAN	7.74	86.50	12.03
RANGE	5.93	48.00	11.07
MAX	9.85	110.00	17.37
MIN	3.92	62.00	6.29

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FCA 71-48

ORGANISM: SALMONELLA 6-46

DOSE LEVEL: LOW - 1.40 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: SEPTEMBER 22, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	33.40	5.57	3.00	.54
2	37.10	6.18	2.00	.32
3	35.70	5.95	5.00	.84
4	27.20	4.53	4.00	.88
5	35.10	5.85	3.00	.51
6	54.00	9.00	9.00	1.00
7	42.00	7.00	6.00	.86
8	51.60	8.60	7.00	.81

NO. OF ANIMALS EQUALS 8
 NO. OF CONTAMINATED EQUALS 1
 TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.59	4.88	.72
RANGE	4.47	7.00	.68
MAX	9.00	9.00	1.00
MIN	4.53	2.00	.32

NO OUTLIERS

TCP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA 6-46

DOSE LEVEL: INTERMEDIATE - 14.0 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: SEPTEMBER 22, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	23.50	3.92	4.00	1.02
2	36.50	6.08	6.00	.99
3	13.50	2.30	1.00	.43
4	28.20	4.70	2.00	.43
5	18.70	3.12	3.00	.96
6	23.10	3.85	4.00	1.04
7	27.30	4.55	5.00	1.10
8	17.20	2.37	14.00	4.88
9	25.60	4.30	3.00	.70

*

NO. OF ANIMALS EQUALS 9
NO. OF CONTAMINATED EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	3.96	4.67	1.26
RANGE	3.78	13.00	4.46
MAX	6.08	14.00	4.88
MIN	2.30	1.00	.43

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	4.10	3.50	.83
RANGE	3.78	5.00	.67
MAX	6.08	6.00	1.10
MIN	2.30	1.00	.43

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA G-46

DOSE LEVEL: LD5 - 140.0 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: SEPTEMBER 22, 1970

ANIMAL NUMBER	A RAW CFU X 10 ⁷ /0.5ML	B TOTAL CFU X 10 ⁸ /1.0ML	C TOTAL NO. MUTANTS X 10 ¹⁰ /1.0ML	D MUTATION FRE (C/B) X 10 ⁻³
1	21.60	3.60	1.00	.23
2	19.40	3.23	1.00	.31
3	44.50	7.42	4.00	.54
4	30.60	5.10	2.00	.39
5	15.20	2.53	4.00	1.58
6	58.60	9.77	3.00	.31
7	36.10	6.02	4.00	.66
8	13.10	2.18	4.00	1.83
9	35.30	5.88	6.00	1.02

NO. OF ANIMALS EQUALS 9
NO. OF CONTAMINATED EQUALS 1

	COL. B (X 10 ⁸)	COL. C (X 10 ¹⁰)	COL. D (X 10 ⁻³)
MEAN	5.08	3.22	.77
RANGE	7.58	5.00	1.55
MAX	9.77	6.00	1.83
MIN	2.18	1.00	.23

NO OUTLIERS

HOST MEDIATED ASSAY REPORT SHEET

JO POUND: FDA 71-48

ORGANISM: SALMONELLA 6-16

DOSE LEVEL: LOW - 1.40 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: SEPTEMBER 22, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.5ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E6/1.0ML	D MUTATION FRE (C/D) X 10E-5
1	25.00	4.17	2.00	.48
2	44.10	7.35	2.00	.27
3	48.00	8.00	3.00	.37
4	57.80	9.60	11.00	1.15 *
5	42.70	7.12	3.00	.42
6	41.40	6.90	2.00	.29
7	39.10	6.82	4.00	.61
8	47.40	7.90	4.00	.51

NO. OF ANIMALS EQUALS 8
TOTAL CFU OUT OF RANGE EQUALS 0

	COL. B (X 10E8)	COL. C (X 10E6)	COL. D (X 10E-5)
MEAN	7.19	3.88	.51
RANGE	5.40	9.00	.87
MAX	9.60	11.00	1.15
MIN	4.17	2.00	.27

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E6)	COL. D (X 10E-5)
MEAN	6.88	2.36	.42
RANGE	3.85	2.00	.34
MAX	8.00	4.00	.61
MIN	4.17	2.00	.27

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA G-46

DOSE LEVEL: INTERMEDIATE 14.0 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: SEPTEMBER 22, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	10.20	1.70	2.00	1.18
2	32.80	5.47	4.00	.73
3	14.70	2.45	2.00	.82
4	42.50	7.08	1.00	.14
5	31.50	5.25	3.00	.57
6	36.60	6.10	8.00	1.31
7	28.50	4.75	6.00	1.26
8	38.80	6.47	4.00	.62
9	25.60	4.27	2.00	.47

NO. OF ANIMALS EQUALS 9
SAMPLES WITH ZERO MUTANTS EQUAL 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	4.84	3.56	.79
RANGE	5.38	7.00	1.17
MAX	7.08	8.00	1.31
MIN	1.70	1.00	.14

NO OUTLIERS

TOP
R: .7

HOST MEDIATED ASSAY REPORT SHEET

CO. POUND: FCA 71-48

ORGANISM: SALMONELLA G-46

DOSE LEVEL: LD5 - 140.0 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: SEPTEMBER 22, 1972

ANIMAL NUMBER	A RAW CFU X 10E7/0.5ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/F) X 10E-8
1	20.90	3.40	4.00	1.15
2	50.00	8.33	2.00	.24
3	27.30	4.55	4.00	.88
4	59.30	9.88	3.00	.30
5	36.00	6.00	3.00	.50
6	10.10	3.02	1.00	.33
7	54.50	9.10	3.00	.33

NO. OF ANIMALS EQUALS 7
TOTAL CFU OUT OF RANGE EQUALS 3

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.34	2.86	.53
RANGE	6.87	3.00	.91
MAX	9.88	4.00	1.15
MIN	3.02	1.00	.24

NO OUTLIERS

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: SEPTEMBER 1, 1972

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	786.00	.79	4.00	5.09
2	672.00	.67	1.00	1.49
3	681.00	.68	2.00	2.94
4	732.00	.73	2.00	2.73
5	562.00	.56	2.00	3.56
6	212.00	.21	0.	0.
7	252.00	.23	0.	0.
8	844.00	.84	2.00	2.37

TOTAL

4.72

13.00

NO. OF ANIMALS EQUALS 8

NO. OF CONTAMINATED EQUALS 1

TOTAL SCREENED OUT OF RANGE EQUALS 1

MEAN C/MEAN B = 2.75

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.59	1.63	2.27
RANGE	.63	4.00	5.09
MAX	.84	4.00	5.09
MIN	.21	0.	0.

NO OUTLIERS

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-6

DOSE LEVEL: POSITIVE CONTROL - EMS - 350 MG/KG I.M.

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: SEPTEMBER 1, 1973

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	681.00	.66	4.00	5.87
2	647.00	.65	18.00	27.82
3	292.00	.29	19.00	65.07
4	367.00	.37	12.00	32.70
5	562.00	.56	14.00	24.91
6	524.00	.52	22.00	41.98
7	871.00	.87	16.00	18.37
8	211.00	.21	11.00	52.13
9	573.00	.57	8.00	13.96
10	773.00	.77	3.00	3.88

TOTAL

5.50

127.00

NO. OF ANIMALS EQUALS 10

MEAN C/MEAN B = 23.09

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.55	12.70	28.67
RANGE	.66	19.00	61.19
MAX	.87	22.00	65.07
MIN	.21	3.00	3.88

NO OUTLIERS

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: LOW - 1.4 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: SEPTEMBER 1, 1973

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	600.00	.60	4.00	6.67
2	691.00	.69	6.00	8.68
3	551.00	.55	2.00	3.63
4	560.00	.56	4.00	7.14
5	544.00	.54	2.00	3.63
6	563.00	.56	2.00	3.55
7	591.00	.59	3.00	5.08
TOTAL		4.10	23.00	

NO. OF ANIMALS EQUALS 7
 NO. OF DEAD ANIMALS EQUALS 1
 NO. OF CONTAMINATED EQUALS 1
 TOTAL SCREENED OUT OF RANGE EQUALS 1

MEAN C/MEAN B = 5.61

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.59	3.29	5.49
RANGE	.15	4.00	5.13
MAX	.69	6.00	8.68
MIN	.54	2.00	3.55

NO OUTLIERS

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: INTERMEDIATE - 14.0 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: SEPTEMBER 1, 1972

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5	
1	511.00	.51	2.00	3.91	*
2	622.00	.62	4.00	6.43	
3	574.00	.57	5.00	8.71	
4	712.00	.71	6.00	8.43	
5	571.00	.57	4.00	7.01	
6	554.00	.55	5.00	9.03	
7	522.00	.52	6.00	11.49	*
8	600.00	.60	4.00	6.67	

TOTAL 4.67 36.00

NO. OF ANIMALS EQUALS 8
TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = 7.72

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.58	4.50	7.71
RANGE	.20	4.00	7.58
MAX	.71	6.00	11.49
MIN	.51	2.00	3.91

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 7.71

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.61	4.67	7.71
RANGE	.16	2.00	2.59
MAX	.71	6.00	9.03
MIN	.55	4.00	6.43

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: LD5 - 140.0 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: SEPTEMBER 1, 1972

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	554.00	.55	6.00	10.83
2	710.00	.71	4.00	5.63
3	621.00	.62	2.00	3.22
4	555.00	.55	7.00	12.61
5	530.00	.53	3.00	5.66
6	584.00	.58	6.00	10.27
7	703.00	.70	4.00	5.69
8	607.00	.61	4.00	6.59
9	531.00	.53	3.00	5.65

TOTAL 5.39 39.00

NO. OF ANIMALS EQUALS 9
TOTAL SCREENED OUT OF RANGE EQUALS 1

MEAN C/MEAN B = 7.23

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.60	4.33	7.35
RANGE	.18	5.00	9.39
MAX	.71	7.00	12.61
MIN	.53	2.00	3.22

NO OUTLIERS

TOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: LOW - 1.40MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: SEPTEMBER 1, 1972

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	542.00	.54	2.00	3.69
2	585.00	.58	2.00	3.42
3	670.00	.67	3.00	4.48
4	614.00	.61	4.00	6.51
5	681.00	.68	4.00	5.87
6	541.00	.54	2.00	3.70
7	553.00	.55	5.00	9.04

*

TOTAL 4.19 22.00

NO. OF ANIMALS EQUALS 7
TOTAL SCREENED OUT OF RANGE EQUALS 3

MEAN C/MEAN B = 5.26

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.60	3.14	5.24
RANGE	.14	3.00	5.62
MAX	.68	5.00	9.04
MIN	.54	2.00	3.42

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 4.68

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.61	2.83	4.61
RANGE	.14	2.00	3.10
MAX	.68	4.00	6.51
MIN	.54	2.00	3.42

OP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: INTERMEDIATE - 14.0 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: SEPTEMBER 1, 1972

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	742.00	.74	4.00	5.39
2	717.00	.72	6.00	8.37
3	513.00	.51	5.00	9.75
4	561.00	.56	3.00	5.35
5	459.00	.46	6.00	13.07
6	700.00	.70	4.00	5.71
7	684.00	.68	4.00	5.85
8	774.00	.77	6.00	7.75
TOTAL		5.15	38.00	

NO. OF ANIMALS EQUALS 8
TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = 7.38

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.64	4.75	7.65
RANGE	.32	3.00	7.72
MAX	.77	6.00	13.07
MIN	.46	3.00	5.35

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 6.82

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.67	4.57	6.88
RANGE	.26	3.00	4.40
MAX	.77	6.00	9.75
MIN	.51	3.00	5.35

TOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: LD5 - 140.0 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: SEPTEMBER 1, 1972

	A	B	C	D
ANIMAL NUMBER	RAW CFU X 10E5/1.0ML	TOTAL CFU SCREENED X 10E5/1.0ML	TOTAL RECOMBINANTS /1.0ML	RECOMB/CFU SCREENED X 10E-5
1	590.00	.59	2.00	3.39
2	740.00	.74	10.00	13.51
3	525.00	.52	4.00	7.62
4	426.00	.43	4.00	9.39
5	781.00	.78	2.00	2.56
6	571.00	.57	4.00	7.01
7	434.00	.43	3.00	6.91
TOTAL		4.07	29.00	

NO. OF ANIMALS EQUALS 7
TOTAL SCREENED OUT OF RANGE EQUALS 3

MEAN C/MEAN B = 7.13

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.58	4.14	7.20
RANGE	.36	8.00	10.95
MAX	.78	10.00	13.51
MIN	.43	2.00	2.56

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 5.71

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.55	3.17	6.15
RANGE	.36	2.00	6.83
MAX	.78	4.00	9.39
MIN	.43	2.00	2.56

STOP

3. Toxicity Data - Test II

Compound FDA 71-48 was prepared as a 12.1% (w/v) suspension and administered orally to a group of ten male rats (average body weight 267.7 grams) at a dose of 5000 mg/kg. Because of the large volume at this dilution the dosage was given in three equal divided doses.

No signs of toxicity or abnormal behavior were observed in the seven-day observation period. No deaths occurred. At termination all animals were killed and on necropsy no gross findings were observed.

The acute oral LD₅₀ for compound FDA 71-48 is considered to be greater than 5000 mg/kg.



TOXICITY DATA SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-48

SILICA AEROGEL

TEST II



BIONETICS

TOXICITY DATA

CONTRACT FDA 71-268

COMPOUND FDA 71-48

SILICA AEROGEL

Solvent: 0.85% saline

Dosage Form: Suspension

Animals: Male rats with an average body weight of 267.7 grams. All animals were observed for seven (7) days.


LD₅₀: Could not be determined at a dosage of 5 grams per kilogram. The LD₅₀ is greater than 5 grams per kilogram and there was no abnormal gross pathology on the animals used in this study.



4. Host-Mediated Assay - Test II

This compound was tested at new doses of 500 mg/kg and 5000 mg/kg in acute and subacute runs against all three indicator strains.

Except for the subacute high dose against TA-1530, all other tests were clearly negative. The apparent positive results observed for TA-1530 subacute high dose resulted from an unusually high mutant count from one animal. This was likely due to contamination and the compound should be considered negative in this test as well.


David Brusick



a. **HOST-MEDIATED ASSAY SUMMARY TABLES**

CONTRACT FDA 71-268

COMPOUND FDA 71-48

SILICA AEROGEL

TEST II



BIONETICS

??

HOST MEDIATED ASSAY
SUMMARY SHEET

COMPOUND: FDA 71-48

	SALMONELLA				SACCHAROMYCES D-3	
	TA1530		G-46			
	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC	MRF (X 10E-5)	MRT/MRC
ACUTE						
NC	1.64		1.38		10.02	
PC	72.14	43.99	306.21	221.89	56.52	5.64
AL	0.	0.	0.	0.	0.	0.
AI	0.	0.	0.	0.	0.	0.
AH	0.	0.	0.	0.	0.	0.
SUBACUTE						
NC	1.64		1.38		10.02	
SL	0.	0.	0.	0.	0.	0.
SI	2.06	1.26	1.69	1.22	11.83	1.18
SH	0.	0.	1.68	1.22	14.31	1.43

IN VITRO	TA1530	G-46	% CONC	D-3 % SURVIVAL	R X 10E5
NC					
PC					

STOP

HOST MEDIATED ASSAY

SUMMARY SHEET

COMPOUND: FDA 71-48

	SALMONELLA				SACCHAROMYCES D-3	
	TA1530	G-46	TA1530	G-46		
	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC	MRF (X 10E-5)	MRT/MRC
ACUTE						
NC	2.27		1.00		8.92	
PC	39.17	17.26	0.	0.	179.23	20.09
AL	0.	0.	0.	0.	0.	0.
AI	0.	0.	0.	0.	0.	0.
AH	0.	0.	0.	0.	8.44	.95
SUBACUTE						
NC	2.27		1.00		1.00	
SL	0.	0.	0.	0.	0.	0.
SI	0.	0.	0.	0.	0.	0.
SH	29.01	12.78	0.	0.	0.	0.

IN VITRO	TA1530	G-46	% CONC	D-3 % SURVIVAL	R X 10E5
----------	--------	------	--------	-------------------	----------

NC
PC

STOP
SRU'S: .4

HOST MEDIATED ASSAY

SUMMARY SHEET

COMPOUND: FDA 71-48

	TA1530		SALMONELLA		G-46	SACCHAROMYCES D-3	
	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC		MRF (X 10E-5)	MRT/MRC
ACUTE							
NC	2.38		1.19			13.02	
PC	32.74	13.76	113.11	95.05		54.80	4.21
AL	0.	0.	0.	0.		0.	0.
AI	2.64	1.11	1.33	1.12		11.75	.90
AH	3.88	1.63	1.27	1.07		0.	0.
SUBACUTE							
NC	1.00		1.00			1.00	
SL	0.	0.	0.	0.		0.	0.
SI	0.	0.	0.	0.		0.	0.
SH	0.	0.	0.	0.		0.	0.

IN VITRO	TA1530	G-46	D-3
	% CONC	% SURVIVAL	R X 10E5
NC			
PC			

STOP

b. HOST-MEDIATED ASSAY DATA SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-48

SILICA AEROGEL

TEST II



BIONETICS

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 20, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE. (C/B) X 10E-8
1	57.70	9.62	28.00	2.91
2	75.90	12.65	32.00	2.53
3	88.80	14.80	35.00	2.36
4	47.70	7.95	23.00	2.89
5	49.60	8.27	25.00	3.02
6	69.00	11.50	24.00	2.09
7	57.60	9.60	12.00	1.25
8	72.10	12.02	27.00	2.25
9	74.50	12.42	22.00	1.77
10	65.70	10.95	30.00	2.74

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	10.98	25.80	2.38
RANGE	6.85	23.00	1.77
MAX	14.80	35.00	3.02
MIN	7.95	12.00	1.25

NO OUTLIERS

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: POSITIVE CONTROL -- DMN -- 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 20, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	65.30	10.88	255.00	23.43
2	38.00	6.33	142.00	22.42
3	67.70	11.28	281.00	24.90
4	57.20	9.53	372.00	39.02
5	58.80	9.80	357.00	35.43
6	50.20	8.37	109.00	13.03
7	75.80	12.63	690.00	54.62
8	53.80	8.97	332.00	37.03
9	62.90	10.48	267.00	25.47
10	75.00	12.50	638.00	51.04

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	10.08	344.30	32.74
RANGE	6.30	581.00	41.59
MAX	12.63	690.00	54.62
MIN	6.33	109.00	13.03

NO OUTLIERS

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: INTERMEDIATE - 500 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 20, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE. (C/B) X 10E-8
1	46.50	7.75	15.00	1.94
2	53.00	8.83	14.00	1.58
3	70.80	11.80	26.00	2.20
4	51.00	8.50	25.00	2.94
5	44.60	7.43	22.00	2.96
6	48.20	8.03	34.00	4.23
7	37.50	6.25	19.00	3.04
8	72.60	12.10	27.00	2.23

NO. OF ANIMALS EQUALS: 8

TOTAL CFU OUT OF RANGE EQUALS: 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	8.84	22.75	2.64
RANGE	5.85	20.00	2.65
MAX	12.10	34.00	4.23
MIN	6.25	14.00	1.58

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	8.95	21.14	2.41
RANGE	5.85	13.00	1.46
MAX	12.10	27.00	3.04
MIN	6.25	14.00	1.58

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: HIGH -- 5000 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 20, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	44.50	7.42	23.00	3.10
2	45.50	7.58	31.00	4.09
3	48.50	8.08	19.00	2.35
4	56.40	9.40	38.00	4.04
5	54.40	9.07	38.00	4.19
6	41.10	6.85	22.00	3.21
7	43.40	7.23	30.00	4.15
8	59.20	9.87	58.00	5.88

NO. OF ANIMALS EQUALS 8

TOTAL CFU OUT OF RANGE EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	8.19	32.38	3.88
RANGE	3.02	39.00	3.53
MAX	9.87	58.00	5.88
MIN	6.85	19.00	2.35

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	7.95	28.71	3.59
RANGE	2.55	19.00	1.84
MAX	9.40	38.00	4.19
MIN	6.85	19.00	2.35

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: FEBRUARY 22, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8	
1	86.80	14.47	51.00	3.53	*
2	112.30	18.72	37.00	1.98	
3	118.00	19.67	19.00	.97	
4	76.00	12.67	27.00	2.13	
5	80.60	13.43	11.00	.82	
6	101.60	16.93	24.00	1.42	
7	126.40	21.07	31.00	1.47	
8	51.50	8.58	15.00	1.75	
9	84.70	14.12	19.00	1.35	
10	156.60	26.10	26.00	1.00	

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	16.58	26.00	1.64
RANGE	17.52	40.00	2.71
MAX	26.10	51.00	3.53
MIN	8.58	11.00	.82

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	16.81	23.22	1.43
RANGE	17.52	26.00	1.31
MAX	26.10	37.00	2.13
MIN	8.58	11.00	.82

STOP
SRU'S:.6

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: POSITIVE CONTROL - DMN - 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 22, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	100.00	16.67	600.00	36.00
2	63.10	10.52	1008.00	95.85
3	60.10	10.02	812.00	81.06
4	80.80	13.47	772.00	57.33
5	44.90	7.48	299.00	39.95
6	101.80	16.97	1272.00	74.97
7	69.00	11.50	1635.00	142.17
8	105.60	17.60	1356.00	77.04
9	90.40	15.07	759.00	50.38
10	74.50	12.42	827.00	66.60

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	13.17	934.00	72.14
RANGE	10.12	1336.00	106.17
MAX	17.60	1635.00	142.17
MIN	7.48	299.00	36.00

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	13.36	856.11	64.35
RANGE	10.12	1057.00	59.85
MAX	17.60	1356.00	95.85
MIN	7.48	299.00	36.00

STOP
S J'S:.6

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: INTERMEDIATE - 500 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: FEBRUARY 22, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	72.40	12.07	23.00	1.91
2	74.30	12.38	26.00	2.10
3	58.20	9.70	23.00	2.37
4	39.40	6.57	21.00	3.20
5	73.30	12.22	27.00	2.21
6	169.20	28.20	42.00	1.49
7	134.60	22.43	26.00	1.16

NO. OF ANIMALS EQUALS 7

NO. OF CONTAMINATED EQUALS 3

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	14.80	26.86	2.06
RANGE	21.63	21.00	2.04
MAX	28.20	42.00	3.20
MIN	6.57	21.00	1.16

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	16.17	27.83	1.87
RANGE	18.50	19.00	1.21
MAX	28.20	42.00	2.37
MIN	9.70	23.00	1.16

STOP
SRU'S: .6

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA 1A1530

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: MARCH 15, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	113.30	18.88	24.00	1.27
2	61.40	10.23	22.00	2.15
3	47.80	7.97	24.00	3.01
4	95.90	15.98	16.00	1.00
5	90.90	15.15	38.00	2.51
6	83.80	13.97	30.00	2.15
7	68.60	11.43	32.00	2.81
8	68.10	11.35	37.00	3.26

NO. OF ANIMALS EQUALS 8

NO. OF CONTAMINATED EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	13.12	27.88	2.27
RANGE	10.92	22.00	2.26
MAX	18.88	38.00	3.26
MIN	7.97	16.00	1.00

NO OUTLIERS

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: POSITIVE CONTROL - DMN - 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: MARCH 15, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.5ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	66.60	11.10	472.00	42.52
2	62.80	10.47	332.00	31.72
3	59.20	9.87	279.00	28.28
4	73.40	12.23	650.00	53.13
5	56.70	9.45	289.00	30.54
6	49.50	8.25	219.00	26.54
7	80.50	13.42	329.00	24.52
8	50.70	8.45	320.00	37.87
9	55.50	9.25	992.00	107.24
10	68.10	11.35	106.00	9.34

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	10.38	398.80	39.17
RANGE	5.17	886.00	97.90
MAX	13.42	992.00	107.24
MIN	8.25	106.00	9.34

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	10.51	332.89	31.61
RANGE	5.17	544.00	43.79
MAX	13.42	650.00	53.13
MIN	8.25	106.00	9.34

S OP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: MARCH 15, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	54.30	9.05	33.00	3.65
2	48.50	8.08	49.00	6.06
3	33.50	5.58	45.00	8.06
4	27.80	4.63	866.00	186.90
5	42.20	7.03	29.00	4.12
6	35.50	5.92	39.00	6.59
7	32.10	5.35	41.00	7.66
8	29.90	4.98	45.00	9.03

NO. OF ANIMALS EQUALS 8
TOTAL CFU OUT OF RANGE EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.33	143.38	29.01
RANGE	4.42	837.00	183.26
MAX	9.05	866.00	186.90
MIN	4.63	29.00	3.65

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.57	40.14	6.45
RANGE	4.07	20.00	5.38
MAX	9.05	49.00	9.03
MIN	4.98	29.00	3.65

S.OP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA G-46

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JANUARY 16, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	53.10	8.85	13.00	1.47
2	46.60	7.77	12.00	1.55
3	61.00	10.17	13.00	1.28
4	36.50	6.08	7.00	1.15
5	50.30	8.38	11.00	1.31
6	61.90	10.32	10.00	.97
7	57.10	9.52	6.00	.63

*

NO. OF ANIMALS EQUALS 7
TOTAL CFU OUT OF RANGE EQUALS 3

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	8.73	10.29	1.19
RANGE	4.23	7.00	.91
MAX	10.32	13.00	1.55
MIN	6.08	6.00	.63

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	8.59	11.00	1.29
RANGE	4.23	6.00	.58
MAX	10.32	13.00	1.55
MIN	6.08	7.00	.97

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA G-46

DOSE LEVEL: POSITIVE CONTROL - DMN - 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JANUARY 16, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/R) X 10E-8
1	80.20	13.37	869.00	65.01
2	67.70	11.28	1281.00	113.53
3	128.10	21.35	1209.00	56.63
4	69.80	11.63	1296.00	111.40
5	60.10	10.02	1632.00	162.93
6	56.20	9.37	909.00	97.04
7	68.50	11.42	1129.00	98.89
8	58.00	9.67	2107.00	217.96
9	69.60	11.60	1097.00	94.57

NO. OF ANIMALS EQUALS 9
TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	12.19	1281.00	113.11
RANGE	11.98	1238.00	161.33
MAX	21.35	2107.00	217.96
MIN	9.37	869.00	56.63

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	12.50	1177.75	100.00
RANGE	11.98	763.00	106.30
MAX	21.35	1632.00	162.93
MIN	9.37	869.00	56.63

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA G-46

DOSE LEVEL: INTERMEDIATE - 500 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JANUARY 16, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	59.10	9.85	14.00	1.42
2	74.00	12.33	19.00	1.54
3	57.30	9.55	14.00	1.47
4	61.70	10.28	12.00	1.17
5	58.70	9.78	10.00	1.02
6	51.10	8.52	14.00	1.64
7	53.40	8.90	11.00	1.24
8	75.00	12.50	14.00	1.12

NO. OF ANIMALS EQUALS 8

NO. OF CONTAMINATED EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	10.21	13.50	1.33
RANGE	3.98	9.00	.62
MAX	12.50	19.00	1.64
MIN	8.52	10.00	1.02

NO OUTLIERS

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA G-46

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JANUARY 16, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	65.10	10.85	14.00	1.29
2	52.00	8.67	13.00	1.50
3	59.60	9.93	11.00	1.11
4	71.40	11.90	13.00	1.09
5	75.90	12.65	13.00	1.03
6	69.80	11.63	22.00	1.89
7	60.00	10.00	10.00	1.00

NO. OF ANIMALS EQUALS 7
TOTAL CFU OUT OF RANGE EQUALS 3

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	10.80	13.71	1.27
RANGE	3.98	12.00	.49
MAX	12.65	22.00	1.89
MIN	8.67	10.00	1.00

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	10.67	12.33	1.17
RANGE	3.98	4.00	.50
MAX	12.65	14.00	1.50
MIN	8.67	10.00	1.00

HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA G-46

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: JANUARY 18, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.5ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	32.10	5.35	9.00	1.68
2	53.20	8.87	22.00	2.48
3	115.60	19.27	7.00	.36
4	40.20	6.70	7.00	1.04
5	45.20	7.53	11.00	1.46
6	39.40	6.57	13.00	1.98
7	39.30	6.55	8.00	1.22
8	50.10	8.35	7.00	.84

NO. OF ANIMALS EQUALS 8
NO. OF CONTAMINATED EQUALS 1
TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	8.65	10.50	1.38
RANGE	13.22	15.00	2.12
MAX	19.27	22.00	2.48
MIN	5.35	7.00	.36

NO OUTLIERS

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA G-46

DOSE LEVEL: POSITIVE CONTROL - DMN - 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JANUARY 18, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.5ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	42.40	7.07	4376.00	619.23
2	30.20	5.03	1611.00	320.06
3	46.30	7.72	2907.00	376.71
4	36.20	6.03	2073.00	343.58
5	40.70	6.78	1404.00	206.97
6	46.30	7.72	1364.00	176.76
7	36.60	6.10	1376.00	225.57
8	53.20	8.87	1968.00	221.95
9	45.50	7.58	2270.00	299.33
10	39.40	6.57	1786.00	271.97

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.95	2113.50	306.21
RANGE	3.83	3012.00	442.48
MAX	8.87	4376.00	619.23
MIN	5.03	1364.00	176.76

* SUMMARY WITH OUT IERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	6.93	1962.11	271.43
RANGE	3.83	1543.00	199.95
MAX	8.87	2907.00	376.71
MIN	5.03	1364.00	176.76

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA G-46

DOSE LEVEL: INTERMEDIATE - 500 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: JANUARY 18, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.4ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	36.70	6.12	10.00	1.63
2	47.30	7.88	6.00	.76
3	32.70	5.45	10.00	1.83
4	38.10	6.35	10.00	1.57
5	36.10	6.02	12.00	1.99
6	31.80	5.30	12.00	2.26
7	32.60	5.43	7.00	1.29
8	31.50	5.25	9.00	1.71
9	40.10	6.68	7.00	1.05
10	30.10	5.02	14.00	2.79

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	5.95	9.70	1.69
RANGE	2.87	8.00	2.03
MAX	7.88	14.00	2.79
MIN	5.02	6.00	.76

NO OUTLIERS

STAP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SALMONELLA G-46

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: JANUARY 18, 1974

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	44.90	7.48	17.00	2.27
2	66.80	11.08	20.00	1.80
3	55.80	9.30	11.00	1.19
4	54.00	9.13	14.00	1.53
5	53.90	8.98	15.00	1.67
6	188.10	31.35	18.00	.57
7	56.60	9.43	10.00	1.06
8	36.10	6.02	22.00	3.66
9	51.40	8.57	12.00	1.40

NO. OF ANIMALS EQUALS 9
NO. OF CONTAMINATED EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	11.26	15.44	1.68
RANGE	25.33	12.00	3.66
MAX	31.35	22.00	3.66
MIN	6.02	10.00	.57

* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	11.92	14.63	1.44
RANGE	23.87	10.00	1.70
MAX	31.35	20.00	2.27
MIN	7.48	10.00	.57

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: FEBRUARY 8, 1974

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	980.00	.98	12.00	12.24
2	606.00	.61	4.00	6.60
3	525.00	.52	2.00	3.81
4	807.00	.81	13.00	16.11
5	216.00	.22	0.	0.
6	254.00	.25	9.00	35.43
7	788.00	.79	8.00	10.15
8	913.00	.91	3.00	3.29

TOTAL 5.09 51.00

NO. OF ANIMALS EQUALS 8
TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = 10.02

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.64	6.38	10.95
RANGE	.76	13.00	35.43
MAX	.98	13.00	35.43
MIN	.22	0.	0.

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 8.69

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.69	6.00	7.46
RANGE	.76	13.00	16.11
MAX	.98	13.00	16.11
MIN	.22	0.	0.

S OP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FCA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: POSITIVE CONTROL - EMS - 350 MG/KG I.M.

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 8, 1974

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	302.00	.30	25.00	82.78
2	813.00	.81	58.00	71.34
3	510.00	.51	45.00	88.24
4	949.00	.95	21.00	22.13
5	673.00	.67	42.00	62.41
6	834.00	.83	34.00	40.77
7	791.00	.79	27.00	34.13
8	836.00	.84	91.00	108.85
9	1114.00	1.11	46.00	41.20
10	733.00	.73	38.00	51.84

TOTAL 7.55 427.00

NO. OF ANIMALS EQUALS 10

MEAN C/MEAN B = 56.52

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.76	42.70	60.38
RANGE	.81	70.00	86.72
MAX	1.11	91.00	108.85
MIN	.30	21.00	22.13

NO OUTLIERS

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: INTERMEDIATE - 500 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: FEBRUARY 8, 1974

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	323.00	.32	7.00	21.67
2	662.00	.66	7.00	10.57
3	566.00	.57	7.00	12.37
4	1001.00	1.00	8.00	7.99
5	586.00	.59	4.00	6.83
6	823.00	.82	3.00	3.65
7	351.00	.35	3.00	8.55
8	620.00	.62	18.00	29.03
9	647.00	.65	9.00	13.91

TOTAL 5.58 66.00

NO. OF ANIMALS EQUALS 9
TOTAL SCREENED OUT OF RANGE EQUALS 1

MEAN C/MEAN B = 11.83

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.62	7.33	12.73
RANGE	.68	15.00	25.39
MAX	1.00	18.00	29.03
MIN	.32	3.00	3.65

NO OUTLIERS

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: FEBRUARY 8, 1974

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	681.00	.68	8.00	11.75
2	1108.00	1.11	11.00	9.93
3	647.00	.65	14.00	21.64
4	625.00	.62	9.00	14.40
5	881.00	.88	14.00	15.89
6	454.00	.45	13.00	28.63
7	965.00	.96	14.00	14.51
8	287.00	.29	1.00	3.48
9	501.00	.50	4.00	7.98

TOTAL 6.15 88.00

NO. OF ANIMALS EQUALS 9
TOTAL SCREENED OUT OF RANGE EQUALS 1

MEAN C/MEAN B = 14.31

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.68	9.78	14.25
RANGE	.82	13.00	25.15
MAX	1.11	14.00	28.63
MIN	.29	1.00	3.48

NO OUTLIERS

SDP

HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-8

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: MAY 2, 1974

ANIMAL NUMBER	RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB CFU SCREENED X 10E5
1	1463.00	1.46	3.00	2.05
2	349.00	.35	8.00	22.92
3	1071.00	1.07	.00	7.87
4	1199.00	1.20	11.00	9.17
5	608.00	.61	11.00	18.89
6	500.00	.50	4.00	.00
7	1209.00	1.21	6.00	.96
8	616.00	.62	9.00	14.61
9	891.00	.89	8.00	8.98
10	725.00	.72	9.00	12.41

TOTAL

8.63

77.00

NO. OF ANIMALS EQUALS 10

MEAN C/MEAN B = 8.92

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.86	7.70	10.87
RANGE	1.11	8.00	20.87
AX	1.46	11.00	22.92
MIN	.35	3.00	2.05

NO OUTLIERS

STOP

HOST-MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHARO CES D-3

DOSE LEVEL: POSITIVE CONTROL - EMS - 35 MG/KG I.H.

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: MAY 2, 1974

ANIMAL NUMBER	RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	RECOMB. CFU SCREENED X 10E-5
1	1059.00	1.06	166.00	156.75
2	1516.00	1.52	177.00	116.75
3	1138.00	1.14	166.00	165.44
4	556.00	.56	168.00	336.92
5	856.00	.86	197.00	230.14
6	1174.00	1.17	207.00	175.32
7	1171.00	1.17	184.00	157.13
8	1185.00	1.19	200.00	168.5
9	825.00	.82	195.00	236.36

TOTAL 9.49 1700.00

NO. OF ANIMALS EQUALS

TOTAL SCREENED OUT OF RANGE EQUALS

MEAN C/MEAN B = 179.23

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	1.5	188.89	193.57
RANGE	.56	1.00	220.16
MAX	1.52	207.00	336.92
MIN	.86	166.00	116.75

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 169.37

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	1.12	189.00	175.66
RANGE	.89	41.00	119.61
MAX	1.52	207.00	236.36
MIN	.82	166.00	116.75

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-

DOSE LEVEL: HIGH - 5000 MG/ G

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: MAY 2, 1974

ANIMAL NUMBER	RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	1336.00	1.34	10.00	7.49
2	717.00	.72	5.00	8.37
3	1082.00	1.09	5.00	4.60
4	976.00	.93	11.00	11.27
5	940.00	.94	5.00	5.32
6	732.00	.73	4.00	5.46
7	968.00	.9	11.00	11.36
8	397.00	.40	10.00	25.19
9	787.00	.79	5.00	6.55

TOTAL 7.9 67.00

NO. OF ANIMALS EQUALS

TOTAL SCREENED OUT OF RANGE EQUALS

MEAN C/MEAN B = 8.44

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.88	7.44	9.49
RANGE	.94	7.00	20.59
MAX	1.34	11.00	25.19
MIN	.40	4.00	4.60

* SUMMARY WITH OUT IERS REMOVED

MEAN C/MEAN B = 7.46

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.94	7.13	7.53
RANGE	.62	7.00	6.77
MAX	1.34	11.00	11.36
MIN	.72	4.00	4.60

STOP

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: NEGATIVE CONTROL - SALINE

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: JUNE 21, 1974

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	1079.00	1.08	16.00	14.83
2	208.00	.21	5.00	24.04
3	480.00	.48	5.00	10.42
4	527.00	.53	10.00	18.98
5	368.00	.37	5.00	13.59
6	896.00	.90	6.00	6.70
7	744.00	.74	9.00	12.10
TOTAL		4.30	56.00	

NO. OF ANIMALS EQUALS 7

NO. OF CONTAMINATED EQUALS 1

TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = 13.02

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.61	8.00	14.38
RANGE	.87	11.00	17.34
MAX	1.08	16.00	24.04
MIN	.21	5.00	6.70

NO OUTLIERS

STOP
RUS:.5
!SWITCH IN\$:SL262
!SAL

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: POSITIVE CONTROL - EMS - 350 MG/KG I.M.

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JUNE 21, 1974

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	309.00	.31	39.00	126.21
2	1222.00	1.22	20.00	16.37
3	401.00	.90	36.00	39.96
4	697.00	.70	53.00	76.04
5	1181.00	1.18	48.00	40.64
6	801.00	.80	36.00	44.94
7	317.00	.32	44.00	138.80
8	941.00	.94	76.00	80.77
9	1670.00	1.67	54.00	32.34
10	1104.00	1.10	95.00	86.05

TOTAL 9.14 501.00

NO. OF ANIMALS EQUALS 10

MEAN C/MEAN B = 54.80

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.91	50.10	68.21
RANGE	1.36	75.00	122.43
MAX	1.67	95.00	138.80
MIN	.31	20.00	16.37

NO OUTLIERS

TOP

SHOTS: .6

SWITCH IN: SL268

AL

HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-48

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: INTERMEDIATE - 500 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: JUNE 21, 1974

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	1090.00	1.09	4.00	3.67
2	508.00	.51	7.00	13.78
3	499.00	.50	9.00	18.04
4	285.00	.29	4.00	14.04
5	232.00	.23	7.00	30.17
6	607.00	.61	4.00	6.59
7	811.00	.81	7.00	8.63
8	647.00	.65	13.00	20.09
TOTAL		4.68	55.00	

NO. OF ANIMALS EQUALS 8
TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = 11.75

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.58	6.88	14.38
RANGE	.86	9.00	26.50
MAX	1.09	13.00	30.17
MIN	.23	4.00	3.67

* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 10.79

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.64	6.86	12.12
RANGE	.80	9.00	16.42
MAX	1.09	13.00	20.09
MIN	.29	4.00	3.67

STOP

SRU'S: .7

LSWITCH IN: SL273

5. Cytogenetics - Test I

a. In vivo

(1) Acute study

The usage levels and the LD₅ level contained breaks that were higher than the negative controls, 4-6% and 2-5% vs. 2-3%, respectively. These are not considered significantly different especially when compared to historical negative control values of 0-6%. Mitotic indices were lower than the negative controls and others of the treatment group in three cases, the usage level 48 hours (6%), LD₅ level 24 hours (7%), and the LD₅ level 48 hours (7%). These are not considered significantly different when compared to the range of mitotic indices observed in the remaining groups (8-12%). The positive control group contained 8% of the cells with severe chromosomal damage (>10 aberrations/cell) in addition to the numerous breaks and reunions indicated on the summary sheet. The mitotic index was depressed by the control substance TEM to 4%.

(2) Subacute study

The negative control was essentially negative and exhibited no aberrations. The usage level, medium level, and the LD₅ level contained 2, 0 and 0% breaks, respectively. While these are higher than the negative controls, they are not considered significant and do fall within the range of historical negative controls (0-6%). There was no reunions observed in any of the groups.

b. In vitro

The low and intermediate levels contained 3% and 4% of the cells with acentric fragments. The intermediate level also contained

a cell with a bridge. The negative control contained only one cell with an acentric fragment. While other levels were somewhat higher in aberrations than the negative control, they are not considered significant. The positive control contained three cells with severely pulverized chromosomes together with the other aberrations indicated on the summary sheet.



c. CYTOGENETIC SUMMARY SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-48

SILICA AEROGEL

TEST I



SILICA AEROGEL
FDA 71-48
ACUTE STUDY
METAPHASE SUMMARY SHEET
TEST I

<u>Compound</u>	<u>Dosage (mg/kg)</u>	<u>Time*</u>	<u>No. of Animals</u>	<u>No. of Cells</u>	<u>Mitotic Index %***</u>	<u>% Cells with Breaks</u>	<u>% Cells with Reunion</u>	<u>% Cells Other Aber.**</u>	<u>% Cells with Aber.**</u>
Negative Control	Saline	6	3	150	12	3	0	0	3
		24	3	150	11	2	0	0	2
		48	3	150	8	3	0	0	3
Usage Level	1.4	6	5	250	10	4	0	0	4
		24	5	250	9	6	0	0	6
		48	5	250	6	4	0	0	4
Intermediate Level	14.0	6	5	250	12	3	0	0	3
		24	5	250	10	1	0	0	1
		48	5	250	10	4	0	0	4
LD ₅	140.0	6	5	250	10	5	0	0	5
		24	5	250	7	2	0	0	2
		48	5	250	7	3	0	0	3
Positive Control TEM	0.3	48	5	250	4	32	14	8(a)	52

* Time of kill after injection (hours).

** Cells that have polyploidy (P), pulverization (pp), or greater than 10 aberrations (a).

*** Percent of cells in mitosis: 500 cells observed/animal.

++ Duplicate aberrations in a single cell will cause this to be a % less than a summation of the % aberration seen.

SILICA AEROGEL
FDA 71-48
SUBACUTE STUDY
METAPHASE SUMMARY SHEET
TEST I

<u>Compound</u>	<u>Dosage (mg/kg)*</u>	<u>No. of Animals</u>	<u>No. of Cells</u>	<u>Mitotic Index %***</u>	<u>% Cells with Breaks</u>	<u>% Cells with Reunion</u>	<u>% Cells Other Aber.**</u>	<u>% Cells with Aber.</u>
Negative Control	Saline	3	150	8	0	0	0	0
Usage Level	1.4	5	250	7	2	0	0	2
Intermediate Level	14.0	5	250	8	0	0	0	0
LD ₅	140.0	5	250	10	0	0	0	0

* Dosage 1X/day X 5 days.

** Cells that have polyploidy (P), pulverization (pp), fragments (f) or greater than 10 aberrations (a).

*** Percent of cells in mitosis: 500 cells observed/animal.

SILICA AEROGEL
FDA 71-48
ANAPHASE SUMMARY SHEET
TEST I

<u>Compound</u>	<u>Dosage (mcg/ml)</u>	<u>Mitotic Index**</u>	<u>No. of Cells</u>	<u>% Cells with Acentric Frag.</u>	<u>% Cells with Bridges</u>	<u>% Multipolar Cells</u>	<u>% Cells Other Aber.*</u>	<u>% Cells with Aber.++</u>
Low Level	0.1	3	100	3	0	0	0	3
Medium Level	1.0	4	100	4	1	0	0	5
High Level	10.0	4	100	0	0	0	0	0
Negative Control	Saline	3	100	1	0	0	0	1
Positive Control TEM	0.1	2	100	13	4	1	3(pp)	21

* Cells that have polyploidy (P), pulverization (pp), or greater than 10 aberrations (a).

** Percent of cells in mitosis: 200 cells observed/dose level.

++ Duplicate aberrations in a single cell will cause this to be a % less than a summation of the % aberration seen.

6. Cytogenetics - Test II

At 24 hours, five percent of the cells in the acute high dose level of compound FDA 71-48 showed rearrangements. This does not appear to reflect dose or time-related trends, and, therefore, is not considered strong evidence of mutagenesis.



CYTOGENETIC SUMMARY SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-48

SILICA AEROGEL

TEST II



BIONETICS

SILICA AEROGEL
FDA 71-48
ACUTE STUDY
METAPHASE SUMMARY SHEET
TEST II

<u>Compound</u>	<u>Dosage (mg/kg)</u>	<u>Time*</u>	<u>No. of Animals</u>	<u>No. of Cells</u>	<u>Mitotic Index %⁺⁺</u>	<u>No. of Cells w/ Breaks**</u>	<u>No. of Cells w/ Reunion**</u>	<u>No. of Cells With Other Aberrations**</u>	<u>No. of Cells w/ Aber.**</u>
Intermediate Level	500	6 Hrs.	5	250	5.96	0	1(0.4)	2pp(0.8)	3(1.2)
		24 Hrs.	5	250	5.84	0	0	1pp(0.4)	1(0.4)
		48 Hrs.	5	250	4.27	0	1(0.4)	0	1(0.4)
High Level	5,000	6 Hrs.	5	250	4.00	2(0.8)	1(0.4)	3pp(1.2)	7(2.80)
		24 Hrs.	5	223	3.76	0	12(5.3)	0	12(5.38)
		48 Hrs.	5	250	3.68	3(1.2)	0	1pp(0.4)	4(1.60)
Negative Control	Saline	6 Hrs.	3	150	5.07	1(0.66)	0	1f(0.66)	1(0.66)
		24 Hrs.	3	150	4.20	0	0	1pp	1(0.66)
		48 Hrs.	3	150	5.13	0	0	1f	1(0.66)
Positive Control TEM	0.3	24 Hrs.	5	250	2.92	17(6.8)	25(10.0)	>19(7.6) 22f(8.8)	68(27.2)

* Time of kill after dosing.

** Numbers in () are percent aberrations per total cells counted.

+ Symbols: > = greater than 10 aberrations per cell; f = fragments; pp = polyploid; and pu = pulverization.

++ Based on a count of at least 500 cells per animal.

SILICA AEROGEL
FDA 71-48
SUBACUTE STUDY
METAPHASE SUMMARY SHEET
TEST II

<u>Compound</u>	<u>Dosage (mg/kg)</u>	<u>No. of Animals</u>	<u>No. of Cells</u>	<u>Mitotic Index %⁺⁺</u>	<u>No. of Cells w/ Breaks^{**}</u>	<u>No. of Cells w/ Reunion^{**}</u>	<u>No. of Cells w/ Other Aber.^{**}</u>	<u>No. of Cells w/ Aber.^{**}</u>
Intermediate Level	500	5	250	10.72	1(0.4)	0	3f(1.2) 2pp(0.8)	5(2.0)
High Level	5,000	5	250	6.32	1(0.4)	0	0	1(0.4)
Negative Control	Saline	3	150	7.67	0	0	1f(0.66)	1(0.66)

^{**} Number in () are percent aberrations per total cells counted.

⁺⁺ Based on a count of at least 500 cells per animal.

+ Symbols: > = greater than 10 aberrations per cell; f = fragments; pp = polyploid; and pu = pulverization.

7. Dominant Lethal Study - Test I

The interpretation of these data was made by Dr. David Brusick, Assistant Professor of Microbiology, Howard University, Washington, D.C., as a consultant to LBI.

Fertility Index:

Acute - No significant findings.

Subacute - Significant dose-related increase at week 3 intermediate dose.

Significant dose-related decrease at the high dose of week 5.

Average # Implants/Pregnant Female:

Acute - Significant decrease at intermediate dose of week 1.

Subacute - Significant dose-related decrease at high dose of week 5.

Average Corpora Lutea/Pregnant Female:

Acute - Significant dose-related increase at the intermediate dose of week 5. Significant decrease at the low dose of week 1.

Subacute - Significant increases at all three dose levels of week 3.

Significant decreases at the high dose of weeks 1 and 5.

The week 5 decrease is dose-related.

Average Preimplantation Loss/Pregnant Female:

Acute - Significant increases at the low dose of week 4 and the intermediate dose of weeks 4 and 7.

Subacute - Significant dose-related increase at the high dose of week 2.

Significant increases at the low dose of week 3 and the high dose.

Average Dead Implants/Pregnant Female:

Acute - Significant decrease at the low dose in week 5 and a significant increase at the low dose in week 6.

Subacute - A significant decrease in all three doses of week 4.*

One or More Dead Implants/Female:

Acute - No significant findings.

Subacute - No significant findings.

Two or More Dead Implants/Female:

Acute - Significant increases at the intermediate dose of weeks 2 and 4.

Week 8 shows significant decreases at the low and intermediate doses.

Subacute - No significant findings.

Dead Implants/Total Implants:

Acute - Significant increase at the intermediate dose level of week 1.

Subacute - Significant decreases observed at the intermediate and high dose levels of week 4.*

*The consistent decreases in week 4, subacute, bothers me.

DOMINANT LETHAL ASSAY SUMMARY TABLES

CONTRACT FDA 71-268

COMPOUND FDA 71-48

SILICA AEROGEL

TEST I

(Through error the computer had been programmed so that a double rounding off of numbers occurred at print out. In no way does this alter the statistics which are calculated on the full unrounded numbers.)



All female rats in the Dominant Lethal Assay were given tetracycline hydrochloride for the duration of the study. All male rats were given tetracycline hydrochloride beginning on October 24, 1972, until November 7, 1972, and started again on November 15, 1972, and continued to the end of the study.

The daily dosage level contained in the cage water bottle was approximately 75 mg/kg.

TABLE I
COMPOUND 48 STUDY ACUTE

FERTILITY INDEX

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG	POSITIVE CONTROL
		1	109/159=0.69	14/19=0.74	11/20=0.55	13/19=0.69	11/20=0.55	15/20=0.75
		2	119/159=0.75	17/20=0.85	16/19=0.85	18/20=0.90	15/20=0.75	16/20=0.80
!	!	3	119/158=0.76	13/18=0.73	14/18=0.78	16/18=0.89	19/20=0.95*	15/20=0.75
!	!	4	136/160=0.85	19/20=0.95	18/20=0.90	16/20=0.80	18/20=0.90	14/18=0.78
!!	!!	5	127/159=0.80	9/19=0.48**	11/20=0.55*	9/20=0.45**	9/20=0.45**	4/14=0.29**
		6	128/159=0.81	17/20=0.85	12/20=0.60*	16/20=0.80	16/20=0.80	15/20=0.75
		7	133/157=0.85	16/18=0.89	13/20=0.65*	17/19=0.90	17/20=0.85	16/20=0.80
		8	133/160=0.84	16/20=0.80	13/19=0.69	14/20=0.70	18/20=0.90	17/20=0.85

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE II

DOSE LEVEL
1.400 MG/KG

ε ! ! ε !

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTOPICAL CONTECL GROUP

§ AND * = TWO-TAILED TEST

TWO !, E, O, * = SIGNIFICANT AT P LESS THAN 0.01

93

8,1 SIGNIFICANT RELATIONSHIP WITH ABITH OR LOG DOSE (HEADING OF COLUMN)

TABLE III
COMPOUND 48 STUDY ACUTE

AVERAGE CORPORA LUTEA PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG	POSITIVE CONTROL
& !! & !		1	1504/109=13.8	219/14=15.6 @I	149/11=13.6@D	191/13=14.7	174/11=15.8 @I	243/15=16.2 **@I
		2	1588/119=13.3	250/17=14.7 *@@I	249/16=15.6 *@I	245/18=13.6	212/15=14.1	232/16=14.5
		3	1565/119=13.2	176/13=13.5	184/14=13.1	216/16=13.5	242/19=12.7	192/15=12.8
		4	1784/136=13.1	242/19=12.7	221/18=12.3	212/16=13.3	225/18=12.5	180/14=12.9
& !		5	1648/127=13.0	108/ 9=12.0 @D	129/11=11.7 @D	125/ 9=13.9*@I	122/ 9=13.6	54/ 4=13.5*@I
		6	1689/128=13.2	227/17=13.4	162/12=13.5	196/16=12.3 @D	210/16=13.1	200/15=13.3
		7	1767/133=13.3	212/16=13.3	169/13=13.0	247/17=14.5	219/17=12.9	212/16=13.3
		8	1823/133=13.7	229/16=14.3	183/13=14.1	182/14=13.0	248/18=13.8	242/17=14.2

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, @, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, @, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

&, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE IV
COMPOUND 48 STUDY ACUTE

AVERAGE PREIMPLANTATION LOSSES PER PREGNANT FEMALE

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG	POSITIVE CONTROL
88!! 88!!	1	153/109= 1.4	39/14= 2.8 @I	21/11= 1.9 @I	47/13= 3.6 **@DI	39/11= 3.6 **@DI	81/15= 5.4**@DI **@DI
!	2	161/119= 1.4	36/17= 2.1	58/16= 3.6 *@DI	32/18= 1.8	31/15= 2.1 @I	86/16= 5.4**@DI **@DI
	3	130/119= 1.1	20/13= 1.5	23/14= 1.6	22/16= 1.4	25/19= 1.3 @I	45/15= 3.0@DI **@DI
	4	158/136= 1.2	10/19= 0.5	21/18= 1.2@I	25/16= 1.6@I	16/18= 0.9	23/14= 1.6**@DI @I
	5	182/127= 1.4	9/ 9= 1.0	6/11= 0.6	13/ 9= 1.4	15/ 9= 1.7	8/ 4= 2.0
	6	177/128= 1.4	27/17= 1.6	20/12= 1.7	16/16= 1.0	30/16= 1.9	38/15= 2.5
88!! 8 !!	7	141/133= 1.1	20/16= 1.3	21/13= 1.6	49/17= 2.9@DI **@DI	31/17= 1.8 **@DI	37/16= 2.3 **@DI
	8	272/133= 2.1	52/16= 3.3 @I	37/13= 2.9	38/14= 2.7	43/18= 2.4	62/17= 3.7 *@DI

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

8 AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !,8,@,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,8,@,* = SIGNIFICANT AT P LESS THAN 0.01

*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL

8,! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE V
COMPOUND 48 STUDY ACUTE

AVERAGE RESORPTIONS (DEAD IMPLANTS) PER PREGNANT FEMALE

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG	POSITIVE CONTROL
	1	28/109=0.26	0/14=0.0 **@@D	1/11=0.10	0/13=0.0 **@@D	2/11=0.19	35/15=2.34**@@I **@@I
	2	53/119=0.45	4/17=0.24	20/16=1.25	31/18=1.73	12/15=0.80	36/16=2.25**@@I **@@I
!	3	61/119=0.52	1/13=0.08 **@@D	4/14=0.29	2/16=0.13 **@@D	5/19=0.27	61/15=4.07**@@I **@@I
	4	62/136=0.46	3/19=0.16 *@@D	7/18=0.39	7/16=0.44	10/18=0.56	62/14=4.43**@@I **@@I
	5	74/127=0.59	8/ 9=0.89	2/11=0.19@@D *@@D	4/ 9=0.45	4/ 9=0.45	4/ 4=1.00
	6	58/128=0.46	4/17=0.24	8/12=0.67@I	5/16=0.32	11/16=0.69	18/15=1.20@I
	7	65/133=0.49	10/16=0.63	6/13=0.47	12/17=0.71	6/17=0.36	24/16=1.50
	8	71/133=0.54	13/16=0.82	5/13=0.39	7/14=0.50	10/18=0.56	18/17=1.06 **@@I

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, @, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, @, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

!, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VI
COMPOUND 48 STUDY ACUTE

PROPORTION OF FEMALES WITH ONE OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG	POSITIVE CONTROL
	1	24/109=0.23	0/14=0.0	1/11=0.10	0/13=0.0	1/11=0.10	11/15=0.74** **
	2	38/119=0.32	4/17=0.24	3/16=0.19	5/18=0.28	3/15=0.20	11/16=0.69** **
	3	39/119=0.33	1/13=0.08	3/14=0.22	1/16=0.07 *	4/19=0.22	11/15=0.74** **
	4	46/136=0.34	3/19=0.16	4/18=0.23	3/16=0.19	5/18=0.28	12/14=0.86** **
	5	45/127=0.36	5/ 9=0.56	2/11=0.19	3/ 9=0.34	3/ 9=0.34	3/ 4=0.75
	6	44/128=0.35	3/17=0.18	6/12=0.50	5/16=0.32	7/16=0.44	7/15=0.47
	7	46/133=0.35	8/16=0.50	5/13=0.39	7/17=0.42	5/17=0.30	7/16=0.44
	8	50/133=0.38	7/16=0.44	5/13=0.39	5/14=0.36	8/18=0.45	12/17=0.71 **

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VII
COMPOUND 48 STUDY ACUTE

PROPORTION OF FEMALES WITH TWO OR MORE DEAD IMPLANTATIONS

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG	POSITIVE CONTROL
		1	3/109=0.03	0/14=0.0	0/11=0.0	0/13=0.0	1/11=0.10	9/15=0.60**
		2	14/119=0.12	0/17=0.0	2/16=0.13	4/18=0.23*	3/15=0.20	8/16=0.50**
		3	17/119=0.15	0/13=0.0	1/14=0.08	1/16=0.07	1/19=0.06	11/15=0.74**
		4	12/136=0.09	0/19=0.0	2/18=0.12	3/16=0.19*	2/18=0.12	9/14=0.65**
		5	18/127=0.15	1/ 9=0.12	0/11=0.0	1/ 9=0.12	1/ 9=0.12	1/ 4=0.25
		6	13/128=0.11	1/17=0.06	2/12=0.17	0/16=0.0	2/16=0.13	4/15=0.27
		7	14/133=0.11	2/16=0.13	1/13=0.08	3/17=0.18	1/17=0.06	3/16=0.19
		8	18/133=0.14	6/16=0.38 *	0/13=0.0 *	1/14=0.08*	2/18=0.12	6/17=0.36 *

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VIII
COMPOUND 48 STUDY ACUTE

DEAD IMPLANTS / TOTAL IMPLANTS

WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG	POSITIVE CONTROL
1	28/1351=0.03	0/180=0.0 **@@D	1/128=0.01	0/144=0.0 @I **@@D	2/135=0.02	35/162=0.22**@ **@D
2	53/1427=0.04	4/214=0.02	20/191=0.11	31/213=0.15	12/181=0.07	36/146=0.25**@ **@D
3	61/1435=0.05	1/156=0.01 **@@D	4/161=0.03 @D	2/194=0.02 **@@D	5/217=0.03	61/147=0.42**@ **@D
4	62/1626=0.04	3/232=0.02 *@D	7/200=0.04	7/187=0.04	10/209=0.05	62/157=0.40**@ **@D
5	74/1466=0.06	8/ 99=0.09	2/123=0.02 **@@D	4/112=0.04	4/107=0.04	4/ 46=0.09
6	58/1512=0.04	4/200=0.02	8/142=0.06	5/180=0.03	11/180=0.07	18/162=0.12@I @I
7	65/1626=0.04	10/192=0.06	6/148=0.05	12/198=0.07	6/188=0.04	24/175=0.14
8	71/1551=0.05	13/177=0.08	5/146=0.04	7/144=0.05	10/205=0.05	18/180=0.10 **@D

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE HISTORICAL CONTROL GROUP

* = TWO-TAILED TEST

@ = ONE-TAILED TEST

ONE *,@ = SIGNIFICANT AT P LESS THAN 0.05

TWO *,@ = SIGNIFICANT AT P LESS THAN 0.01

*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL

TABLE I
COMPOUND 48 STUDY SUBACUTE

FERTILITY INDEX

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG
	1	104/159=0.66	11/20=0.55	13/20=0.65	9/20=0.45	11/20=0.55
	2	118/160=0.74	15/20=0.75	12/20=0.60	13/19=0.69	11/17=0.65
	3	119/159=0.75	14/20=0.70	16/19=0.85	20/20=1.00** *	17/19=0.90
	4	120/154=0.78	12/15=0.80	15/20=0.75	17/20=0.85	17/20=0.85
! !	5	122/157=0.78	11/19=0.58	10/17=0.59	9/20=0.45 **	4/20=0.20* **
	6	136/159=0.86	16/20=0.80	17/20=0.85	16/20=0.80	17/20=0.85
! !	7	135/155=0.88	13/18=0.73	17/20=0.85	18/20=0.90	14/20=0.70 *

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE II
COMPOUND 48 STUDY SUBACUTE

AVERAGE NUMBER OF IMPLANTATIONS PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG
		1	1231/104=11.8	134/11=12.2	143/13=11.0	91/ 9=10.1	125/11=11.4
		2	1474/118=12.5	180/15=12.0	135/12=11.3	156/13=12.0	128/11=11.6
		3	1405/119=11.8	155/14=11.1	179/16=11.2	241/20=12.1	184/17=10.8
		4	1414/120=11.8	135/12=11.3	164/15=10.9	198/17=11.7	191/17=11.2
!		5	1462/122=12.0	127/11=11.6	120/10=12.0	91/ 9=10.1 *@D	38/ 4= 9.5@D **@D
!!	!!	6	1626/136=12.0	187/16=11.7	183/17=10.8 @D	190/16=11.9	204/17=12.0
		7	1566/135=11.6	140/13=10.8	184/17=10.8	196/18=10.9	153/14=10.9

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, @, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, @, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

&, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE III
COMPOUND 48 STUDY SUBACUTE

AVERAGE CORPORA LUTEA PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG
		1	1385/104=13.3	184/11=16.7 **@@I	207/13=15.9 *@I	142/ 9=15.8 *@I	160/11=14.6@D
!	!	2	1599/118=13.6	208/15=13.9	159/12=13.3	191/13=14.7	175/11=15.9 @I
!!	!!	3	1535/119=12.9	169/14=12.1	233/16=14.6 *@I	1282/20=14.1 *@I	238/17=14.0@I
		4	1499/120=12.5	144/12=12.0	183/15=12.2	215/17=12.7	212/17=12.5
!	!	5	1554/122=12.7	137/11=12.5	129/10=12.9	110/ 9=12.2	38/ 4= 9.5**@@D **@@D
!!	!!	6	1809/136=13.3	214/16=13.4	214/17=12.6	207/16=12.9	225/17=13.2
!	!	7	1711/135=12.7	159/13=12.2	211/17=12.4	244/18=13.6	191/14=13.6

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST
! AND @ = ONE-TAILED TEST

ONE !, &, @, * = SIGNIFICANT AT P LESS THAN 0.05
TWO !, &, @, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL
&, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE IV
COMPOUND 48 STUDY SUBACUTE

AVERAGE PREIMPLANTATION LOSSES PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG
8!!	!	1	154/104= 1.5	50/11= 4.6 **@@I	64/13= 4.9 **@I	51/ 9= 5.7 **@I	35/11= 3.2 @I
8!!	88!!	2	125/118= 1.1	28/15= 1.9	24/12= 2.0	35/13= 2.7 *@I	47/11= 4.3@I **@I
8!!	88!!	3	130/119= 1.1	14/14= 1.0	54/16= 3.4**@I **@I	41/20= 2.1 @I	54/17= 3.2*@I **@I
!		4	85/120= 0.7	9/12= 0.8	19/15= 1.3 @I	17/17= 1.0	21/17= 1.2 @I
		5	92/122= 0.8	10/11= 0.9	9/10= 0.9	19/ 9= 2.1 *@I	0/ 4= 0.0**@I **@I
		6	183/136= 1.4	27/16= 1.7	31/17= 1.8	17/16= 1.1	21/17= 1.2
8!!	8 !!	7	145/135= 1.1	19/13= 1.5	27/17= 1.6 *@I	48/18= 2.7 **@I	38/14= 2.7 @I

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

8 AND * = TWO-TAILED TEST
! AND @ = ONE-TAILED TEST

ONE !,8,@,* = SIGNIFICANT AT P LESS THAN 0.05
TWO !,8,@,* = SIGNIFICANT AT P LESS THAN 0.01

*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL
8,! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

COMPOUND 48

TABLE V

STUDY SUBACUTE

AVERAGE RESORPTIONS (DEAD IMPLANTS) PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG
		1	40/104=0.39	2/11=0.19	3/13=0.24	0/ 9=0.0 **@D	7/11=0.64
		2	59/118=0.50	2/15=0.14 *@@D	0/12=0.0 **@D	7/13=0.54	4/11=0.37
!!		3	69/119=0.58	6/14=0.43	3/16=0.19 *@D	2/20=0.10 **@D	4/17=0.24 @D
		4	66/120=0.55	20/12=1.67 *@I	8/15=0.54@D	8/17=0.48@D	9/17=0.53@D
		5	78/122=0.64	6/11=0.55	9/10=0.90	9/ 9=1.00	1/ 4=0.25
		6	62/136=0.46	9/16=0.57	6/17=0.36	13/16=0.82	7/17=0.42
		7	70/135=0.52	6/13=0.47	10/17=0.59	15/18=0.84	4/14=0.29

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, @, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, @, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

&, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VI
COMPOUND 48 STUDY SUBACUTE

PROPORTION OF FEMALES WITH ONE OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG
	1	31/104=0.30	1/11=0.10	2/13=0.16	0/ 9=0.0	2/11=0.19
	2	38/118=0.33	2/15=0.14	0/12=0.0 *	2/13=0.16	2/11=0.19
	3	42/119=0.36	2/14=0.15	3/16=0.19	1/20=0.05 **	3/17=0.18
	4	42/120=0.35	8/12=0.67 *	5/15=0.34	7/17=0.42	6/17=0.36
	5	54/122=0.45	3/11=0.28	5/10=0.50	2/ 9=0.23	1/ 4=0.25
	6	43/136=0.32	7/16=0.44	6/17=0.36	6/16=0.38	5/17=0.30
	7	42/135=0.32	5/13=0.39	7/17=0.42	8/18=0.45	4/14=0.29

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VII
COMPOUND 48 STUDY SUBACUTE

PROPORTION OF FEMALES WITH TWO OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG
	1	8/104=0.08	1/11=0.10	1/13=0.08	0/9=0.0	1/11=0.10
	2	10/118=0.09	0/15=0.0	0/12=0.0	2/13=0.16	2/11=0.19
	3	17/119=0.15	1/14=0.08	0/16=0.0	1/20=0.05	1/17=0.06
	4	15/120=0.13	4/12=0.34 *	3/15=0.20	1/17=0.06	3/17=0.18
	5	19/122=0.16	2/11=0.19	2/10=0.20	2/9=0.23	0/4=0.0
	6	13/136=0.10	2/16=0.13	0/17=0.0	3/16=0.19	2/17=0.12
	7	16/135=0.12	1/13=0.08	1/17=0.06	4/18=0.23	0/14=0.0

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, * = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VIII
COMPOUND 48 STUDY SUBACUTE

DEAD IMPLANTS / TOTAL IMPLANTS

WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 1.400 MG/KG	DOSE LEVEL 14.000 MG/KG	DOSE LEVEL 140.000 MG/KG
1	40/1231=0.04	2/134=0.02	3/143=0.03	0/ 91=0.0	7/125=0.06
2	59/1474=0.05	2/180=0.02	0/135=0.0 **@@@	7/156=0.05 **@@@	4/128=0.04
3	69/1405=0.05	6/155=0.04	3/179=0.02 *@@	2/241=0.01 **@@@	4/184=0.03
4	66/1414=0.05	20/135=0.15 @I	8/164=0.05	8/198=0.04@@	9/191=0.05@@
5	78/1462=0.06	6/127=0.05	9/120=0.08	9/ 91=0.10	1/ 38=0.03
6	62/1626=0.04	9/187=0.05	6/183=0.04	13/190=0.07	7/204=0.04
7	70/1566=0.05	6/140=0.05	10/184=0.06	15/196=0.08	4/153=0.03

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE HISTORICAL CONTROL GROUP

* = TWO-TAILED TEST
@ = ONE-TAILED TEST

ONE *,@ = SIGNIFICANT AT P LESS THAN 0.05
TWO *,@ = SIGNIFICANT AT P LESS THAN 0.01

*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL

8. Dominant Lethal Study - Test II

Compound FDA 71-48, Silica Aerogel, was administered to ten male rats (400 grams) at the dosage levels 5,000 mg/kg and 500 mg/kg according to acute (single dose) and subacute (five doses) protocols. Each treated male rat was mated with two virgin female rats each week for 7 (subacute) or 8 (acute) weeks. Two weeks after mating, female rats were sacrificed and the fertility index, preimplantation loss and lethal effects on the embryos were determined and compared with these same parameters calculated from negative (saline-dosed) and positive (0.3 mg/kg TEM-dosed) control animals.

The values calculated for these parameters from animals dosed with compound FDA 71-48, Silica Aerogel, did not significantly vary from those obtained from the negative controls; whereas, TEM caused a significant preimplantation loss and embryo resorption during the first five weeks.

Comparing these data with the previously obtained values for dose levels of 140 mg/kg, 14 mg/kg and 1.4 mg/kg revealed no dose response or time trend patterns, thus indicating that compound FDA 71-48, Silica Aerogel, does not induce dominant lethal mutations as measured by this test.

DOMINANT LETHAL ASSAY SUMMARY TABLES

CONTRACT FDA 71-268

COMPOUND FDA 71-48

SILICA AEROGEL

TEST II

(Through error the computer had been programmed so that a double rounding off of numbers occurred at print out. In no way does this alter the statistics which are calculated on the full unrounded numbers.)



BIONETICS

TABLE 1
COMPOUND 48 STUDY ACUTE

FERTILITY INDEX

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG	POSITIVE CONTROL
!!	!	1	158/219=0.71	9/ 20=0.45 *	10/ 20=0.50	9/ 20=0.45 *	14/ 20=0.70
!!	!						
!!	!!	2	169/219=0.78	9/ 20=0.45 **	13/ 20=0.65	10/ 20=0.50 **	9/ 20=0.45 **
!!	!!						
!	!	3	168/218=0.78	10/ 20=0.50 **	11/ 20=0.55 *	13/ 20=0.65	12/ 20=0.60
!	!						
!!	!	4	189/220=0.86	14/ 20=0.70	14/ 20=0.70	13/ 20=0.65 *	5/ 20=0.25** **
!!	!						
!!	!!	5	175/219=0.80	10/ 20=0.50 **	13/ 20=0.65	10/ 20=0.50 **	18/ 20=0.90**
!!	!!						
!	!	6	175/219=0.80	11/ 20=0.55 *	15/ 20=0.75	11/ 20=0.55 *	18/ 20=0.90*
!	!						
!!	!!	7	184/217=0.85	13/ 20=0.65 *	14/ 20=0.70	12/ 20=0.60 **	15/ 20=0.75
!!	!!						
		8	182/220=0.83	18/ 20=0.90	15/ 20=0.75	15/ 20=0.75	16/ 20=0.80

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

AVERAGE NUMBER OF IMPLANTATIONS PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG	POSITIVE CONTROL
	WEEK					
	1	1923/154=12.5	115/ 9=12.8	130/ 10=13.0	118/ 9=13.1	127/ 14= 9.1**@D **@D
	2	2053/169=12.2	102/ 9=11.3	163/ 13=12.5	119/ 10=11.9	52/ 9= 5.8*@D **@D
	3	2040/168=12.1	132/ 10=13.2 @I	149/ 11=13.6	167/ 13=12.9	71/ 12= 5.9**@D **@D
	4	2271/189=12.0	181/ 14=12.9 @I	178/ 14=12.7	167/ 13=12.9	32/ 5= 6.4*@D *@D
	5	2099/175=12.0	122/ 10=12.2	160/ 13=12.3	122/ 10=12.2	176/ 18= 9.8*@@D **@D
	6	2122/175=12.1	132/ 11=12.0	183/ 15=12.2	133/ 11=12.1	198/ 18=11.0
	7	2265/184=12.3	173/ 13=13.3	181/ 14=12.9	140/ 12=11.7	195/ 15=13.0
8 ! 8 !! 86!! 86!!	8	2177/182=12.0	219/ 18=12.2	186/ 15=12.4	209/ 15=13.9*@@I **@D	200/ 16=12.5

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

8 AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, @, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, @, * = SIGNIFICANT AT P LESS THAN 0.01

II*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

8, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE III
COMPOUND 48 STUDY ACUTE

AVERAGE CORPORA LUTEA PER PREGNANT FEMALE

LOG ABITH DOSE DOSE	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG	POSITIVE CONTROL
WEEK					
1	2187/154=14.2	133/ 9=14.8	146/ 10=14.6	128/ 9=14.2	205/ 14=14.6
2	2337/169=13.8	144/ 9=16.0	204/ 13=15.7 *@I	151/ 10=15.1 @I	155/ 9=17.3 **@@I
3	2302/168=13.7	150/ 10=15.0	176/ 11=16.0 *@@I	195/ 13=15.0	160/ 12=13.3
4	2531/189=13.4	208/ 14=14.9 *@I	197/ 14=14.1	205/ 13=15.8 *@I	61/ 5=12.2*@@D @D
5	2352/175=13.4	135/ 10=13.5	179/ 13=13.8	131/ 10=13.1	241/ 18=13.4
6	2402/175=13.7	180/ 11=16.4 *@I	211/ 15=14.1@D	161/ 11=14.6	240/ 18=13.3*@D
7	2487/184=13.5	190/ 13=14.6 @I	207/ 14=14.8 @I	167/ 12=13.9	222/ 15=14.8 **@@I
8	2547/182=14.0	257/ 18=14.3	202/ 15=13.5	220/ 15=14.7	216/ 16=13.5

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

@ AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, @, *, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, @, *, * = SIGNIFICANT AT P LESS THAN 0.01

@, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

!, ! SIGNIFICANT RELATIONSHIP WITH ABITH OR LOG DOSE (READING OF COLUMN)

TABLE IV
COMPOUND 48 STUDY ACUTE

AVERAGE PREIMPLANTATION LOSSES PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG	POSITIVE CONTROL
		1	264/154 = 1.7	18/ 9 = 2.0	16/ 10 = 1.6	10/ 9 = 1.1	18/ 14 = 5.6* ** @I
8!!	!	2	284/169 = 1.7	42/ 9 = 4.7 * @I	41/ 13 = 3.2 ** @I	32/ 10 = 3.2	104/ 9 = 11.6* * @I
		3	262/168 = 1.6	18/ 10 = 1.8	27/ 11 = 2.5	28/ 13 = 2.2	89/ 12 = 7.4* * @I
!	8 !!	4	260/189 = 1.4	27/ 14 = 1.9	19/ 14 = 1.4	38/ 13 = 2.9 * @I	29/ 5 = 5.8 @I
		5	253/175 = 1.5	13/ 10 = 1.3	19/ 13 = 1.5	9/ 10 = 0.9	65/ 18 = 3.6* * @I
!	!	6	280/175 = 1.6	48/ 11 = 4.4 * @I	28/ 15 = 1.9@D	28/ 11 = 2.6 @I	42/ 18 = 2.3
8 !!	!	7	222/184 = 1.2	17/ 13 = 1.3	26/ 14 = 1.9 @I	27/ 12 = 2.3	27/ 15 = 1.8 * @I
!	!	8	370/182 = 2.0	38/ 18 = 2.1	16/ 15 = 1.1	11/ 15 = 0.7@D ** @D	16/ 16 = 1.0 @D

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

8 AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, 8, *, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, 8, *, * = SIGNIFICANT AT P LESS THAN 0.01

113

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

8, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

COMPOUND 48

TABLE V

STUDY ACUTE

AVERAGE RESORPTIONS (DEAD IMPLANTS) PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG	POSITIVE CONTROL
8&!!	8&!!	1	52/154=0.34	4/ 9=0.45	10/ 10=1.00	9/ 9=1.00 *OI	112/ 14=8.00**@OI **@OI
		2	85/169=0.51	7/ 9=0.78	5/ 13=0.39	6/ 10=0.60	39/ 9=4.34**@OI **@OI
8 !!		3	92/168=0.55	13/ 10=1.39 **@OI	22/ 11=2.00	12/ 13=0.93@OI	70/ 12=5.84**@OI **@OI
		4	93/189=0.50	8/ 14=0.58	7/ 14=0.50	10/ 13=0.77	28/ 5=5.60*@OI *@OI
		5	104/175=0.60	6/ 10=0.60	5/ 13=0.39	10/ 10=1.00	89/ 18=4.95**@OI **@OI
!		6	93/175=0.54	10/ 11=0.91	15/ 15=1.00 @OI	4/ 11=0.37	23/ 18=1.28 *@OI
		7	90/184=0.49	6/ 13=0.47	6/ 14=0.43	4/ 12=0.34	14/ 15=0.94
		8	96/182=0.53	12/ 18=0.67	10/ 15=0.67	6/ 15=0.40	13/ 16=0.82 *OI

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

8 AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, 8, @, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, 8, @, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

8, ! SIGNIFICANT RELATIONSHIP WITH ARITH OF LOG DOSE (HEADING OF COLUMN)

TABLE VI
COMPOUND 48 STUDY ACUTE

PROPORTION OF FEMALES WITH ONE OR MORE DEAD IMPLANTATIONS

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG	POSITIVE CONTROL
!	!!	1	39/154=0.26	4/ 9=0.45	3/ 10=0.30	6/ 9=0.67 **	14/ 14=1.00** **
	!!	2	58/169=0.35	4/ 9=0.45	5/ 13=0.39	4/ 10=0.40	9/ 9=1.00** **
		3	57/168=0.34	10/ 10=1.00 **	6/ 11=0.55*	7/ 13=0.54*	12/ 12=1.00 **
		4	71/189=0.38	7/ 14=0.50	6/ 14=0.43	8/ 13=0.62	4/ 5=0.80
		5	66/175=0.38	3/ 10=0.30	4/ 13=0.31	3/ 10=0.30	16/ 18=0.89** **
		6	65/175=0.38	5/ 11=0.46	10/ 15=0.67 *	2/ 11=0.19	11/ 18=0.62 *
		7	65/184=0.36	4/ 13=0.31	6/ 14=0.43	4/ 12=0.34	7/ 15=0.47
		8	69/182=0.38	7/ 18=0.39	9/ 15=0.60	4/ 15=0.27	10/ 16=0.63

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, * = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

COMPOUND 48

TABLE VII

STUDY ACUTE

PROPORTION OF FEMALES WITH TWO OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE DOSE WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG	POSITIVE CONTROL
!! !!	1	8/154=0.06	0/ 9=0.0	3/ 10=0.30 **	2/ 9=0.23 * 14/ 14=1.00**
	2	22/169=0.14	2/ 9=0.23	0/ 13=0.0	2/ 10=0.20 6/ 9=0.67**
	3	26/168=0.16	3/ 10=0.30	3/ 11=0.28	3/ 13=0.24 12/ 12=1.00**
	4	16/139=0.09	1/ 14=0.08	1/ 14=0.08	1/ 13=0.08 4/ 5=0.80**
	5	24/175=0.14	2/ 10=0.20	1/ 13=0.08	2/ 10=0.20 15/ 18=0.84**
	6	21/175=0.12	3/ 11=0.28	2/ 15=0.14	2/ 11=0.19 1/ 18=0.39**
	7	20/134=0.11	1/ 13=0.08	0/ 14=0.0	0/ 12=0.0 4/ 15=0.27
	8	22/132=0.13	3/ 18=0.17	1/ 15=0.07	2/ 15=0.14 3/ 16=0.19

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VIII
COMPOUND 48 STUDY ACUTE

DEAD IMPLANTS / TOTAL IMPLANTS					
WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG	POSITIVE CONTROL
1	52/1923=0.03	4/115=0.03	10/130=0.08	9/118=0.08 * \mathcal{Q} I	112/127=0.88** \mathcal{Q} \mathcal{Q} I ** \mathcal{Q} \mathcal{Q} I
2	85/2053=0.04	7/102=0.07	5/163=0.03	6/119=0.05	39/ 52=0.75** \mathcal{Q} \mathcal{Q} I ** \mathcal{Q} \mathcal{Q} I
3	92/2040=0.05	13/132=0.10 ** \mathcal{Q} \mathcal{Q} I	22/149=0.15	12/167=0.07	70/ 71=0.99** \mathcal{Q} \mathcal{Q} I ** \mathcal{Q} \mathcal{Q} I
4	93/2271=0.04	8/181=0.04	7/178=0.04	10/167=0.06	28/ 32=0.88** \mathcal{Q} \mathcal{Q} I ** \mathcal{Q} \mathcal{Q} I
5	104/2099=0.05	6/122=0.05	5/160=0.03	10/122=0.08	89/176=0.51** \mathcal{Q} \mathcal{Q} I ** \mathcal{Q} \mathcal{Q} I
6	93/2122=0.04	10/132=0.08	15/183=0.08 \mathcal{Q} I	4/133=0.03	23/198=0.12 ** \mathcal{Q} \mathcal{Q} I
7	90/2265=0.04	6/173=0.03	6/181=0.03	4/140=0.03	14/195=0.07
8	96/2177=0.04	12/219=0.05	10/186=0.05	6/209=0.03	13/200=0.06

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE HISTORICAL CONTROL GROUP

* = TWO-TAILED TEST
 \mathcal{Q} = ONE-TAILED TEST

ONE *, \mathcal{Q} = SIGNIFICANT AT P LESS THAN 0.05
TWO *, \mathcal{Q} = SIGNIFICANT AT P LESS THAN 0.01

*, \mathcal{Q} SIGNIFICANTLY DIFFERENT FROM CONTROL

TABLE 1
COMPOUND 48 STUDY-SUBACUTE

FERTILITY INDEX

LOG ARITH DOSE DOSE WEEK	HISTOPICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG
1	148/219=0.68	17/ 20=0.85	15/ 20=0.75	15/ 18=0.84
2	156/220=0.76	16/ 20=0.80	14/ 20=0.70	14/ 18=0.78
3	171/219=0.79	16/ 20=0.80	12/ 20=0.60	14/ 18=0.78
4	170/214=0.80	16/ 20=0.80	18/ 20=0.90	13/ 18=0.73
5	171/217=0.79	16/ 20=0.80	14/ 20=0.70	15/ 18=0.84
6	186/219=0.85	16/ 20=0.80	14/ 20=0.70	13/ 18=0.73
7	186/215=0.87	18/ 20=0.90	15/ 20=0.75	13/ 18=0.73

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE 11
COMPOUND 48 STUDY SUBACUTE

AVERAGE NUMBER OF IMPLANTATIONS PER PREGNANT FEMALE

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG
	1	1792/148=12.1	214/ 17=12.6	196/ 15=13.1	179/ 15=11.9
	2	2086/166=12.6	187/ 16=11.7	178/ 14=12.7	176/ 14=12.6
!	3	2056/171=12.0	198/ 16=12.4	158/ 12=13.2 *001	161/ 14=11.5
S !! S ! SS!! SS!!	4	1998/170=11.8	185/ 16=11.6	235/ 18=13.1 *01	180/ 13=13.9*001 **001
	5	2079/171=12.2	204/ 16=12.8	161/ 14=11.5	186/ 15=12.4
	6	2237/186=12.0	196/ 16=12.3	169/ 14=12.1	169/ 13=13.0
S !! S !!	7	2173/186=11.7	209/ 18=11.6	163/ 15=10.9	176/ 13=13.5*01 **001

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

S AND * = TWO-TAILED TEST
! AND 0 = ONE-TAILED TEST

ONE !, S, 0, * = SIGNIFICANT AT P LESS THAN 0.05
TWO !, S, 0, * = SIGNIFICANT AT P LESS THAN 0.01

*, 0 SIGNIFICANTLY DIFFERENT FROM CONTROL
S, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (READING OF COLUMN)

TABLE III
COMPOUND 48 STUDY SUBACUTE

AVERAGE CORPORA LUTEA PER PREGNANT FEMALE

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG
	1	2050/148=13.9	245/ 17=14.4	215/ 15=14.5	219/ 15=14.6
8 ! 88!! 88!!	2	2342/166=14.1	242/ 16=15.1	201/ 14=14.4	231/ 14=16.5 **@@I
	3	2329/171=13.6	234/ 16=14.6	180/ 12=15.0 **@@I	199/ 14=14.2
88!! 88!!	4	2197/170=12.9	230/ 16=14.4	286/ 18=15.9 **@@I	194/ 13=14.9 *@@I
!	5	2333/171=13.6	223/ 16=13.9	223/ 14=15.9 @I	213/ 15=14.2
! 8 !	6	2549/186=13.7	233/ 16=14.6	189/ 14=13.5	204/ 13=15.7 *@I
! 88!! 88!! 88!!	7	2505/186=13.5	260/ 18=14.4 @I	219/ 15=14.6	225/ 13=17.3* *@I **@@I

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

8 AND * = TWO-TAILED TEST
! AND @ = ONE-TAILED TEST

ONE !, 8, @, * = SIGNIFICANT AT P LESS THAN 0.05
TWO !, 8, @, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL
8, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

COMPOUND 48

TABLE IV

STUDY SUBACUTE

AVERAGE PREIMPLANTATION LOSSES PER PREGNANT FEMALE

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG
!	1	258/148= 1.7	31/ 17= 1.8	22/ 15= 1.5	40/ 15= 2.7 @I
8!! 88!!	2	256/166= 1.5	55/ 16= 3.4 **@DI	23/ 14= 1.6*@D	55/ 14= 3.9 **@DI
8!! 88!!	3	273/171= 1.6	36/ 16= 2.3	22/ 12= 1.8	38/ 14= 2.7 **@DI
8 !	4	199/170= 1.2	45/ 16= 2.8 *DI	51/ 18= 2.8 **@DI	14/ 13= 1.1@D
8!!	5	254/171= 1.5	19/ 16= 1.2	62/ 14= 4.4**@DI **@DI	27/ 15= 1.8
!	6	312/186= 1.7	37/ 16= 2.3 @I	20/ 14= 1.4	35/ 13= 2.7 @I
8!! 88!!	7	332/186= 1.8	51/ 18= 2.8	56/ 15= 3.7 **@DI	49/ 13= 3.8 *@DI

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

8 AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, 8, @, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, 8, @, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

8, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

COMPOUND 48

TABLE 4
STUDY SUBACUTE

AVERAGE RESORPTIONS (DEAD IMPLANTS) PER PREGNANT FEMALE

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG
	1	70/148=0.48	9/ 17=0.53	11/ 15=0.74 @I	6/ 15=0.40
	2	95/166=0.58	14/ 16=0.88	8/ 19=0.58	18/ 14=1.29
	3	106/171=0.62	13/ 16=0.82 @I	14/ 12=1.17	11/ 14=0.79
! 8!!	4	93/170=0.55	8/ 16=0.50	20/ 18=1.12	12/ 13=0.93 @I
	5	110/171=0.65	9/ 16=0.57	9/ 14=0.65	14/ 15=0.94
	6	101/186=0.55	6/ 16=0.38	8/ 14=0.58	7/ 13=0.54
	7	127/186=0.69	11/ 18=0.62	11/ 15=0.74	7/ 13=0.54

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

8 AND * = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, 8, @, * = SIGNIFICANT AT P LESS THAN 0.05

TWO !, 8, @, * = SIGNIFICANT AT P LESS THAN 0.01

*, @ SIGNIFICANTLY DIFFERENT FROM CONTROL

8, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (READING OF COLUMN)

TABLE VI
COMPOUND 48 STUDY SUBACUTE

PROPORTION OF FEMALES WITH ONE OR MORE DEAD IMPLANTATIONS

LOG ARITH DOSE DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG
	1	49/148=0.34	8/ 17=0.48	9/ 15=0.60 *	5/ 15=0.34
	2	58/166=0.35	9/ 16=0.57	6/ 14=0.43	6/ 14=0.43
	3	62/171=0.37	11/ 16=0.69 *	5/ 12=0.42	8/ 14=0.58
! !	4	64/170=0.38	5/ 16=0.32	10/ 18=0.56	9/ 13=0.70* *
	5	75/171=0.44	4/ 16=0.25	7/ 14=0.50	6/ 15=0.40
	6	70/186=0.38	6/ 16=0.38	5/ 14=0.36	4/ 13=0.31
	7	68/136=0.37	8/ 18=0.45	6/ 15=0.40	5/ 13=0.39

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

PROPORTION OF FEMALES WITH TWO OR MORE DEAD IMPLANTATIONS

LOG DOSE	ARITH DOSE	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG
WEEK					
1		16/148=0.11	1/ 17=0.06	2/ 15=0.14	1/ 15=0.07
2		18/166=0.11	5/ 16=0.32 *	2/ 14=0.15	3/ 14=0.22
3		27/171=0.16	2/ 16=0.13	1/ 12=0.09	3/ 14=0.22
4		20/170=0.12	3/ 16=0.19	4/ 18=0.23	2/ 13=0.16
5		27/171=0.16	2/ 16=0.13	1/ 14=0.08	3/ 15=0.20
6		24/186=0.13	0/ 16=0.0	2/ 14=0.15	2/ 13=0.16
7		32/186=0.18	2/ 18=0.12	2/ 15=0.14	2/ 13=0.16

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,* = SIGNIFICANT AT P LESS THAN 0.01

* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

COMPOUND 48

TABLE VIII
STUDY SUBACUTE

DEAD IMPLANTS / TOTAL IMPLANTS

WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 500. MG/KG	DOSE LEVEL 5000. MG/KG
1	70/1792=0.04	9/214=0.04	11/196=0.06	6/179=0.03
2	95/2086=0.05	14/187=0.07 @I	8/178=0.04	18/176=0.10
3	106/2056=0.05	13/198=0.07	14/158=0.09	11/161=0.07
4	93/1998=0.05	8/185=0.04	20/235=0.09	12/180=0.07
5	110/2079=0.05	9/204=0.04	9/161=0.06	14/186=0.08
6	101/2237=0.05	6/196=0.03	8/169=0.05	7/169=0.04
7	127/2173=0.06	11/209=0.05	11/163=0.07	7/176=0.04

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT DIFFERENCES USING
THE HISTORICAL CONTROL GROUP

* = TWO-TAILED TEST

@ = ONE-TAILED TEST

ONE *,@ = SIGNIFICANT AT P LESS THAN 0.05

TWO *,@ = SIGNIFICANT AT P LESS THAN 0.01

*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL

APPENDICES

II. MATERIALS AND METHODS

A. Animal Husbandry

1. Animals (Rats and Mice)

Ten to twelve week old rats (280 to 350 g) and male mice (25 to 30 g) were fed a commercial 4% fat diet and water ad libitum until they were put on experiment. Flow Laboratories random-bred, closed colony, Sprague-Dawley CD strain rats were used in the cytogenetic studies. Flow Laboratories ICR male mice were employed in the Host-Mediated Assay.

2. Preparation of Diet

A commercial 4% fat diet was fed to all animals. Periodic tests to verify the absence of coliforms, Salmonella and Pseudomonas sp. were performed.

3. Husbandry

Animals were held in quarantine for 4-11 days. Mice were housed five to a cage and rats one to five to a cage. Animals were identified by ear punch. Sanitary cages and bedding were used, and changed two times per week, at which time water containers were cleaned, sanitized and filled. Once a week, cages were repositioned on racks; racks were repositioned within rooms monthly. Personnel handling animals or working within animal facilities wore head coverings and face masks, as well as suitable garments. Individuals with respiratory or other overt infections were excluded from the animal facilities.

B. Dosage Determination

1. Acute LD₅₀ and LD₅ Determination

Since the compounds proposed for testing are included in

the food additive regulations as "generally recognized as safe" (GRAS), it was expected that a large number of them would be sufficiently non-toxic so that determination of a LD_{50} or a LD_5 would be of no practical value. In fact, this has been our experience with previously tested compounds from this list. In the case of these relatively non-toxic compounds, attempts were made to assure that the amounts to be administered would not affect the animals by means (mechanical, physical, etc.) related to their bulk rather than to their toxicity. In the cases of certain compounds where a LD_{50} or a LD_5 could not be determined, an exceedingly high concentration, 5 g/kg, was employed and accepted as the LD_5 level. In cases where the toxicity was high enough to allow determination of a LD_5 , the following protocol was used.

Thirty rats of the strain chosen for studies described below and of approximately the age and weight specified were assigned at random to six groups. Each group was then given, using the chosen route of administration, one of a series of dosages of the test compound following a logarithmic dosage scheme. The series of dosages were derived from a consideration of whatever toxicity information was available for the particular test compound. The objective in selecting dosages was to choose values which would cause mortalities between 10% and 90%.

When information was inadequate to derive a suitable series of dosages, five rats were used to identify the proper range. Each of these was given one of a widely spaced (differing by 10X) series of doses. This was confidently expected to suffice for derivation of the series of dosages to be used in the LD_{50} determination.

The mortalities observed when the series of dosages were given to the 30 rats were then subjected to a probit analysis and calculation of LD_{50} , LD_5 , slope and confidence limits by the method of Litchfield and Wilcoxon. The highest dose level used was either a finite LD_5 or 5000 mg/kg. The intermediate level used was either 1/10 of the finite LD_5 or 2500 mg/kg. The low level used was either 1/100 of the finite LD_5 or 30 mg/kg.

2. Subacute Studies

Subacute doses were identical to those used in the acute studies. Each subacute study animal was given the acute dosage once a day for each of five consecutive days (24 hours apart).

C. Mutagenicity Testing Protocols

1. Host-Mediated Assay

Flow Laboratories ICR random-bred male mice were used in this study. In the acute and subacute studies ten animals, 25-30 g each, were employed at each dose level. Solvent and positive controls were run at all times. The positive control (dimethyl nitrosamine) was run by the acute system only at a dose of 100 mg/kg for Salmonella. For yeast, ethyl methane sulfonate (EMS) intramuscularly injected at a dose of 350 mg/kg was used. The solvents used and the toxicity data are presented in the Results and Discussion Section of the report.

The indicator organisms used in this study were: (1) two histidine auxotrophs (his G-46, TA-1530) of Salmonella typhimurium, and (2) a diploid strain (D-3) of Saccharomyces cerevisiae. The induction of reverse mutation was determined with the Salmonella; mitotic recombination was determined with yeast. Chemicals were evaluated directly by in vitro bacterial and yeast studies prior to, or concurrent with, the studies in



mice. Only animals on the subacute studies were not fed the evening prior to compound administration. The Salmonella were carried in tryptone yeast extract gel, transferred weekly. They were transferred to tryptone yeast extract broth 48 hours before use: they were transferred a second time from broth to broth 24 hours prior to use, and again 8 hours before use. The mouse inoculum was prepared by transferring 4 ml of the 8-hour broth culture to 50 ml broth bottles which had been prewarmed at 37°C. Exponential log-phase organisms were inoculated intraperitoneally into the mice approximately 2-1/2 hours later when the appropriate density indicating 3.0×10^8 cells/ml was reached. The Saccharomyces was carried in yeast complete agar. The inoculum was prepared by harvesting the organisms from the surface of the plates with sterile saline. The cells were washed three times with sterile saline and suspended in a concentration of 5.0×10^8 cells/ml. Two ml of the suspension was inoculated into each mouse intraperitoneally. Total plate counts on Salmonella were on tryptone yeast extract and for Saccharomyces on yeast complete medium.

a. Acute study

Three dosage levels (usage, intermediate [determined as discussed previously], and LD_5) were administered orally by intubation to ten mice. Positive controls and negative vehicle controls were included in each study. All animals received 2 ml of the indicator organism intraperitoneally. Each ml contained 3.0×10^8 cells for Salmonella and 5.0×10^8 cells for Saccharomyces. Three hours later, each animal was killed and 2 ml of sterile saline was introduced intraperitoneally. As much fluid as possible was then aseptically removed from the peritoneal cavity. Dilution blanks for bacteria containing 4.5 ml of sterile saline were prepared in advance. Tenfold serial



dilutions were made of each peritoneal exudate (0.5 ml exudate + 4.5 ml saline) yielding a concentration series from 10^0 (undiluted peritoneal exudate) through 10^{-7} . For enumeration of total bacterial counts, the 10^{-6} and 10^{-7} dilutions were plated on tryptone yeast extract agar, 3 plates/sample, 0.2 ml sample/plate. Each sample was spread over the surface of the plate using a bent glass rod immersed in 95% ethanol and flamed just prior to use. In plating for the total mutant counts on minimal agar, the 10^0 dilution was used, 0.2 ml being plated on each of 5 plates. The plating procedure was identical to that followed for the tryptone yeast extract agar plates. All plates were incubated at 37°C, tryptone yeast extract agar plates for 18 hours and minimal agar plates for 40 hours. For yeast mitotic recombination, dilution blanks containing 4.5 ml of sterile saline were prepared in advance. Tenfold serial dilutions were made of each sample yielding a series from 10^0 to 10^{-5} . Samples of 0.1 ml of the 10^{-5} , 10^{-4} , and 10^{-3} dilutions were removed and plated on complete medium (10 plates each). All plates were incubated at 30°C for 40 hours. The 10^{-5} dilutions were used to determine total populations and the 10^{-4} and 10^{-3} plates were examined after an additional 40 hours at 4°C for red sectors indicating a mutation. Bacterial scoring was calculated as follows:

Total mutants on 5 plates x appropriate exponent =
CFU/ml (CFU is Colony Forming Units) of sample plated CFU/ml x one/dilution
factor ($10^0 - 10^{-7}$) = CFU/ml in undiluted exudate. The mutation frequency (MF)
calculated for each sample was:

$$MF = \frac{\text{total mutant cells}}{\text{total population}}$$

$$MF_t/MF_c = \frac{MF \text{ of experimental sample}}{MF \text{ of control sample}}$$

($MF_t/MF_c = 1.00$ for
control sample)



BIONETICS

Yeast mitotic recombinants (presumptive ade 2, his 8 homozygotes) were seen as red colonies or as red sectors on a normally white yeast colony. The plates (from 10^{-4} and 10^{-3} dilutions) were scanned under the 10X lens of a dissecting scope to enumerate the red colonies and sectors. Population determinations were made from the 10^{-5} dilution plates. A recombinant frequency (RF) was calculated:

$$RF = \frac{\text{total recombinants counted}}{\text{total number colonies screened}}$$

b. Subacute study

Similar groups of animals at each dose level received five oral doses of the test compound 24 hours apart. Within 30 minutes after the last dosing, the animals were inoculated with the test organism and handled in the same fashion as those in the acute study.

c. In vitro study

Cultures of S. typhimurium histidine auxotrophs (G-46 and TA-1530) were plated on appropriate media. The test compound was then added to the plate, either in the form of a microdrop of solution (0.01 to 0.25 ml) applied to a small filter paper disc resting on the agar or a small crystal applied directly to the agar. Tenfold serial dilutions of the culture were employed and plated so as not to miss the optimum cell density for mutant growth. Mutant colonies were observed and scored. Strain D-3 Saccharomyces cells at proper dilutions were shaken with the test compound, diluted, and plated at 50% survival level or above (see HMA Supplementary Materials and Methods). Red sectors were then scored and the frequency calculated after suitable incubation. Negative and positive controls were run concurrently. The positive control was EMS for Salmonella and Saccharomyces. The in vitro Salmonella tests were reported



as (+) or (-) or questionable; the in vitro Saccharomyces tests were reported as sample concentrations, percent survival, and recombinants/ 10^5 survivors. For the Saccharomyces a 50% survival level, e.g., an arbitrary 5.0% w/v test level, was used when no LD₅₀ was determinable.

2. Cytogenetic Studies

a. In vivo study

Ten to twelve week old, male, albino rats obtained from a closed colony (random-bred) were used. A total of 59 animals in the acute study and 18 animals in the subacute study was used, as illustrated in the following protocol.

Number of Animals Used

Acute Study

<u>Treatment</u>	<u>Time Killed After Administration</u>		
	<u>6 Hours</u>	<u>24 Hours</u>	<u>48 Hours</u>
High Level	5	5	5
Intermediate Level	5	5	5
Low Level	5	5	5
Positive Control	0	0	5
Negative Control	3	3	3

Subacute Study

Five doses 24 hours apart; animals killed 6 hours after last dose.

<u>Treatment</u>	<u>Killed After Administration</u>
High Level	5
Intermediate Level	5
Low Level	5
Negative Control	3

All animals were dosed by gastric intubation.

Four hours after the last compound administration, and two hours prior to killing, each animal was given 4 mg/kg of colcemid intra-



peritoneally in order to arrest the bone marrow cells in C-mitosis. Animals were killed by using CO₂, and the adhering muscle and epiphysis of one femur were removed. The marrow "plug" was removed with a tuberculin syringe and an 18 gauge needle, aspirated into 5 ml of Hanks' balanced salt solution (BSS) in a test tube and capped. The specimens were centrifuged at 1,500 RPM in a table-top centrifuge for 5 minutes, decanted, and 2 ml of hypotonic 0.5% KCl solution was added with gentle agitation to resuspended the cells. The specimens were then placed in a 37°C water bath for 20 minutes in order to swell the cells. Following centrifugation for 5 minutes at 1,500 RPM, the supernatant was decanted and 2 ml of fixative (3:1 absolute methanol:glacial acetic acid) was added. The cells were resuspended in the fixative with gentle agitation, capped, and placed at 4°C for 30 minutes. The specimens were again centrifuged, decanted, 2 ml of prepared fixative was added, and the cells were resuspended and placed at 4°C overnight.

The following day the specimens were again centrifuged, decanted and 0.3 - 0.6 ml of freshly prepared fixative was added to obtain a suitable density. The cells were resuspended and 2 - 3 drops of the suspension were allowed to drop onto a clean, dry slide held at 15° from the horizontal. As the suspension flowed to the edge of the slide, it was ignited by an alcohol burner and allowed to flame. Following ignition, the slides were allowed to dry at room temperature overnight. Duplicate slides were prepared. The slides were stained using a 5% Giemsa solution (Giemsa buffer pH 7.2) for 20 minutes, rinsed in acetone, 1:1 acetone:xylene, and placed in fresh xylene for 30 minutes. The slides were then mounted using Permount (Fisher Scientific) and 24 x 50 mm coverglasses. The coverglasses were selected to be 0.17 mm \pm 0.005 mm in thickness by use of a coverglass micrometer. The preparations

were examined using Leitz Ortholux I & II microscopes with brightfield optics and xenon light sources. These specimens were scanned with 10X and 24X objectives and suitable metaphase spreads that were countable were then examined critically using 40X, 63X or 100X oil immersion flatfield apochromatic objectives. Oculars were either 12X or 16X widefield periplanatics and the tube magnification either 1X or 1.25X. The filters used were either a didymium (BG20) or a Schott IL570 m μ interference filter.

The chromosomes of each cell were counted and only diploid cells were analyzed. They were scored for chromatid gaps and breaks, chromosome gaps and breaks, reunions, cells with greater than ten aberrations, polyploidy, pulverization, and any other chromosomal aberrations which were observed. They were recorded on the currently used forms and expressed as percentages on the summary sheets. Fifty metaphase spreads were scored per animal. Mitotic indices were obtained by counting at least 500 cells and the ratio of the number of cells in mitosis/the number of cells observed was expressed as the mitotic index.

Positive controls in the acute study consisted of animals which had been given the known mutagen Triethylene Melamine (TEM) administered intraperitoneally at a level of 0.30 mg/kg. Negative controls on the acute and subacute studies consisted of the vehicle in which the compound was administered. The dosage levels, solvents and toxicity data are included in the Results and Discussion Section of the report.

b. In vitro study

Human embryonic lung cultures (WI-38) which were negative for adventitious agents (viruses, mycoplasma) which may interfere

were used. These cells were employed at passage level 19. The cells had been transferred using 0.025% trypsin and planted in 32 oz. prescription bottles containing 40 ml of tissue culture medium. When growth was approximately 95% confluent the cells were removed from the glass using trypsin, centrifuged, and frozen in tissue culture medium containing dimethyl sulfoxide (DMSO). Cells were frozen in vials in the vapor phase of liquid nitrogen at a concentration of 2×10^6 cells/ml. When needed, the vials were removed from liquid nitrogen, quick-thawed in a 37°C water bath, washed free of DMSO, suspended in tissue culture medium (minimal essential medium [MEM] plus 1% glutamine, 200 units/ml of penicillin and 200 µg/ml of streptomycin and 15% fetal calf serum) and planted in milk dilution bottles at a concentration of 5×10^5 cells/ml. The test compound was added at three dose levels using three bottles for each level, 24 hours after planting. The dose levels required a preliminary determination of a tissue culture toxicity. This was accomplished by adding logarithmic doses of the compound in saline to a series of tubes containing 5×10^5 cells/ml which were almost confluent. The cells were examined at 24, 48, and 72 hours. Any cytopathic effect (CPE) or inhibition of mitoses was scored as toxicity. Five more closely spaced dose levels were employed within the two logarithmic dosages, the higher of which showed toxicity and the lower no effect. The solvents used and the range finding data are presented in the toxicity data report under Results and Discussion. The dose level below the lowest toxic level was employed as the high level. Logarithmic dose levels were employed for the medium and low levels.

Cells were incubated at 37°C and examined twice daily to determine when an adequate number of mitoses were present. Cells were harvested by shaking when sufficient mitoses were observed, usually 24 - 48



hours after planting, centrifuged, and fixed in absolute methanol:glacial acetic acid (3:1) for 30 minutes.

The specimens were centrifuged, decanted, and suspended in acetic acid-orcein stain (2.0%) and a drop of suspension placed on a clean dry slide. Selected coverglasses 0.17 mm in thickness were placed on the suspension and the excess stain gently expressed from the slide. The coverglasses were sealed with clear nail polish and examined immediately.

The microscopes, objectives, oculars, filters and light sources were enumerated under the metaphase description. Positive controls used were TEM (at a concentration of 0.1 mcg/ml dissolved in saline) and negative controls which consisted of the vehicle in which the test compound was dissolved, which was 0.85% saline. Data were reported on forms currently used and expressed as percentages on the anaphase summary sheets.

3. Dominant Lethal Assay

In this test, male and female random bred rats from a closed colony were employed. These animals were 10-12 weeks old at the time of use. Ten male rats were assigned to each of 5 groups; 3 dose levels selected as described above, a positive control (triethylene melamine) (TEM) and a negative control (solvent only). The positive control was administered intraperitoneally. Administration of the test compound was orally by intubation in both the acute study (1 dose) and in the subacute study (1 dose per day for 5 days). Following treatment, the males were sequentially mated to 2 females per week for 8 weeks (7 weeks in the subacute study). Two virgin female rats were housed with a male for 5 days (Monday through Friday). These two females were removed and housed in a cage until killed. The male was rested on Saturday and Sunday and two new females introduced to the cage on



Monday. It has been our experience that conception has taken place in more than 90% of the females by Friday and that the two day rest is beneficial to the male as regards subsequent weekly matings. Females were killed using CO₂ at 14 days after separating from the male, and at necropsy the uterus was examined for deciduomata (early deaths), late fetal deaths and total implantations.

Sufficient animals were provided in our experimental design to accommodate for any reduction in the number of conceptions. Each male was mated with two females per week, and this provided for an adequate number of implantations per group per week (200 minimum) for negative controls, even if there was a fourfold reduction in fertility of implantations. Results were analyzed according to the statistical procedures described in Supplementary Materials and Methods. Corpora lutea, early fetal deaths, late fetal deaths and total implantations per uterine horn were recorded on the raw data sheets, which are submitted separately.

D. Supplementary Materials and Methods

1. Host-Mediated Assay In Vitro and Formulae

a. Bacterial in vitro plate tests

This method has been published by Ames: The Detection of Chemical Mutagens with Enteric Bacteria, in Chemical Mutagens; Principles and Methods for Their Detection, Vol. 1, Chapter 9, pp. 267-282, A. Hollaender, Editor, Plenum Press, New York (1971).

b. In vitro for mitotic recombination

(1) Strain D-3 was grown to stationary phase on complete medium agar plates at 30°C (3-4 days). Cells were rinsed from the plates and washed twice in saline and cell concentration determined spectro-



photometrically. (A standard curve previously determined for colony forming units versus % transmittance at 545 mμ was easily used.)

(2) Cells from the concentration suspension were diluted appropriately into 0.067 M Phosphate buffer pH 7.2 to provide 5×10^7 cells/ml in a total of 25 ml.

(3) The test chemical was first tested for 4 hours at 30°C, with shaking, at concentrations which permitted determination of the 50% survival level. Then, if not included in the first experiment, the compound was tested again only at the 50% survival level. If 50% survival level could not be determined, the arbitrary test level of 5% w/v was used.

(4) Following treatment, cells were diluted and plated on complete agar medium for determination of total population and red sectors. Total surviving population was conveniently measured on plates of 10^{-4} and 10^{-5} dilutions using 0.2 ml per plate (5 plates), and sectors determined on plates of 10^{-3} and 10^{-4} dilutions using 0.2 ml per plate (5 plates). Plates were incubated for 2 days at 30°C followed by a holding period of 2 days at 4°C to promote color development with limited enlargement of the colonies. Red sectors were scored by systematically scanning the plates with a dissecting microscope at 10X magnification.

(5) The frequency of red sectors can then be calculated and may be expressed conveniently as sectors per 10^5 survivors for comparison with untreated controls.

(6) Ethyl Methane Sulfonate (EMS) was employed as the positive control in both in vitro systems.

c. Minimal medium (bacteria):

Spizizen's Minimal Medium:



4X Salt Solution:

$(\text{NH}_4)_2\text{SO}_4$	8.0 gm
K_2HPO_4	56.0 gm
KH_2PO_4	24.0 gm
Na Citrate	4.0 gm
Mg SO_4	0.8 gm
Biotin	0.004 gm
H_2O	qs to 1 liter
Sterilize by autoclaving (121°C/15 min.)	

Medium:

4X Salt Solution	:250 ml
5.0% Glucose (sterile)	:100 ml (If histidine is added at concentration of 30 mg/liter, this becomes a complete bacterial medium.)
1.5% Bacto-agar (sterile)	:650 ml

d. Complete medium (bacteria):

Bacto-Tryptone	1.0 gm
Yeast-Extract	0.5 gm
Bacto-Agar	2.0 gm
Distilled H_2O	100.0 ml

Sterilize by autoclaving (121°C for 15 minutes).

e. Complete medium (yeast):

KH_2PO_4	1.5 gm
MgSO_4	0.5 gm
$(\text{NH}_4)_2\text{SO}_4$	4.5 gm



Peptone	3.5 gm
Yeast-Extract	5.0 gm
Glucose	20.0 gm
Agar	20.0 gm
Distilled H ₂ O	1000.0 ml

Sterilize by autoclaving (121°C for 15 minutes).

2. Cytogenetics In Vitro Preparation of Anaphase Chromosomes
(from Nichols, 1970)

"Anaphase preparations may be made by several methods. One convenient approach is to grow cells directly on coverslips in petri dishes. With human fibroblasts 400,000 cells added to a 22 x 44 mm coverslip in a 50 mm petri dish grown in a 5% CO₂ atmosphere in air has proved very satisfactory. When adequate numbers of mitoses are visualized directly utilizing an inverted microscope (usually 48 to 92 hours after planting) the coverslip is transferred to absolute ethanol for 15 minutes for fixation. They are then stained with any one of a number of suitable stains (Fuegen, May-Grunwald-Giemse, orcein) and attached to a slide with mounting media for evaluation. Anaphase preparations may also be prepared on cells grown in suspension or cells from a monolayer that have been put into suspension. In this instance the cells are centrifuged and fixed with the squash fixative. They are then suspended in the stain and a drop of the suspension put on the slide and covered with a coverslip. However, in this case, only the excess stain is gently expressed from under the coverslip and no squashing is carried out. In anaphase preparations no pretreatment with colchicine or hypotonic expansion is used and no technique for spreading the cells is used, so that the spindle and normal relationships of the chromosomes are not disturbed."

3. Statistical Analyses of Dominant Lethal Studies

The following statistical analyses were employed as a means of analyzing the results of the dominant lethal studies.

a. The fertility index

The number of pregnant females/number of mated females with the chi-square was used to compare each treatment to the control. Armitage's trend was used for linear proportions to test whether the fertility index was linearly related to arithmetic or log dose.

b. Total number of implantations

The t-test was used to determine significant differences between average number of implantations per pregnant female for each treatment compared to the control. Regression techniques were used to determine whether the average number of implantations per female was related to the arithmetic or log dose.

c. Total number of corpora lutea

The t-test was used to determine significant differences between average number of corpora lutea per pregnant female for each treatment compared to the control.

d. Preimplantation losses

Preimplantation losses were computed for each female by subtracting the number of implantations from the number of corpora lutea. Freeman-Tukey transformation was used on the preimplantation losses for each female and then the t-test was used to compare each treatment to control. Regression technique was used to determine whether the average number of preimplantation losses per female was related to the arithmetic or log dose.

e. Dead implants

Dead implants were treated the same as pre-implantation losses.

f. One or more dead implants

The proportion of females with one or more dead implants was computed, each treatment compared to control by chi-square test and Armitage's trend used for linear proportions to see if proportions were linearly related to either arithmetic or log dose. Also, probit regression analysis was used to determine whether the probit of the proportions was related to log dose.

g. Two or more dead implants

The proportion of females with two or more dead implants computed was treated same as above (f).

h. Dead implants per total implants

Dead implants per total implants were computed for each female and used Freeman-Tukey arc-sine transformation on data for each female; then used t-test to compare each treatment to control.

Historical control data was compiled on a continuous basis as studies were completed. In addition to comparing each treatment to control, as outlined above, each treatment was compared to a historical control.

In order to take variation between males into account, a nested model was used. An analysis of across weeks is also provided.

In addition to these tests, the distribution forms of the various parameters were tested in order to evaluate the appropriateness of some of the tests being used. Certain correlations between parameters may exist and were examined as one step to determine the appropriateness of models. If necessary, alternate test methods were implemented.



The results are presented in tabular form with the addition of historical control information. In addition to these tables, a written report of all findings is provided. As information became available from the on-going investigation of these data, it was reported and suggestions included for changes to the methods of analysis. The statistical reports give the level of significance using both a one-tailed and two-tailed test. Finally, a summary sheet for each study is provided.



MODEL

$$y_{ijk} = \mu + \alpha_i + c_{ij} + e_{ijk}$$

$i = 1, 2$ Group

$j = 1, 2, \dots, 10$ Males within each group

$k = 1, 2$ Females within Males within Groups

ASSUMPTIONS:

$$\alpha_1 + \alpha_2 = 0, \quad c_{ij} \sim \text{nid}(0, \sigma_c^2),$$

$$e_{ijk} \sim \text{nid}(0, \sigma^2)$$

Males are randomly drawn from infinite population

S.V.	d.f.	S.S.	MS	E(MS)	F
TOTAL	39	$\sum \sum \sum (y_{ijk} - \bar{y}_{...})^2$			
GROUPS	1	$20 \sum (\bar{y}_{i..} - \bar{y}_{...})^2$	S_1^2	$\sigma^2 + 20\sigma_c^2 + 20\sigma_e^2$	
MALES WITHIN GROUPS	18	$2 \sum \sum (\bar{y}_{ij.} - \bar{y}_{i..})^2$	S_2^2	$\sigma^2 + 2\sigma_c^2$	
REMAINDER	20	$\sum \sum \sum (y_{ijk} - \bar{y}_{ij.})^2$	S_3^2	σ^2	

E. References

1. Host-Mediated Assay

- a. Gabridge, M.G., Denunzio, A. and Legator, M.S.:
Nature, 221:68, 1969.
- b. Gabridge, M.G., Denunzio, A. and Legator, M.S.:
Science, 163:689, 1969.
- c. Gabridge, M.G. and Legator, M.S.: Proc. Soc.
Exptl. Biol. Med., 130:831, 1969.
- d. Gabridge, M.G., Oswald, E.J. and Legator, M.S.:
Mut. Res., 7:117, 1969.
- e. Legator, M.S. and Malling, H.V.: In, Environmental
Chemical Mutagens, A. Hollaender (Ed.), Plenum
Publishing Corp., New York, in press.

2. Cytogenetics

- a. Nichols, V.W.: Personal communication.
- b. Legator, M.S.: In, Laboratory Diagnosis of Diseases
Caused by Toxic Agents, F. W. Sunderman and F. W.
Sunderman (Ed.), Warren H. Green, Inc., St. Louis,
pp. 17-22, 1970.
- c. Hsu, T.C. and Patton, J.L.: Technical Addendum in,
Comparative Mammalian Cytogenetics, K. Benirschke
(Ed.), Springer-Verlag, New York, pp. 454-460, 1969.
- d. Legator, M.S. et al.: Cytogenetic studies in rats
of cyclohexylamine, a metabolite of cyclamate.
Science, 165:1139, 1969.

3. Dominant Lethal

- a. Bateman, A.J.: Genet. Res. Comb., 1:381, 1960.
- b. Bateman, A.J.: Nature, 210:205, 1966.
- c. Ehling, U.H., Cumming, R.B. and Malling, H.V.:
Mut. Res., 5:417, 1968.
- d. Epstein, S.S. and Shafner, H.: Nature, 219:
385, 1968.



F. Abbreviations

1. mu = micron
2. mcg = ug = microgram
3. g = gram
4. kg = kilogram
5. ml = milliliter
6. rpm = revolutions per minute
7. °C = degrees centigrade
8. pH = power of the hydrogen ion concentration to the base 10
9. M = molar solution
10. conc. = concentration
11. MTD = maximum tolerated dosage = High = LD₅ if determined
or else exceedingly high dose, such as 5 g/kg
12. INT = intermediate = medium level
13. USE = usage level if known = low level
14. BSS = balanced salt solution
15. C-metaphase = cells arrested in metaphase, using colchine
or colcemid
16. LD₅₀ = that dosage which produced 50% mortality in the
group of animals treated
17. LD₅ = that dosage which produced 5% mortality in the group
of animals treated
18. NC = negative control
19. PC = positive control
20. AU = acute usage level (low level)
21. AI = acute intermediate level (medium level)
22. AMTD = acute maximum tolerated dose level (LD₅ level,
high level)



- 23. SAU = subacute usage level (low level)
- 24. SAI = subacute intermediate level (medium level)
- 25. SA LD₅ = subacute LD₅ level (MTD level, high level)
- 26. CO₂ = carbon dioxide
- 27. DMN = Dimethyl nitrosamine
- 28. EMS = Ethyl methane sulfonate
- 29. TEM = Triethylene melamine
- 30. DMSO = Dimethyl sulfoxide
- 31. MEM = minimal essential medium (Eagle's)
- 32. CPE = cytopathic effect
- 33. his = histidine marker
- 34. D-3 = mitotic recombinant strain of Saccharomyces
- 35. mf = mean mutant frequency
- 36. MFt/MFc = mean mutant frequency of the test compound group compared to mean mutant frequency of the negative control group
- 37. CFU = colony forming units
- 38. WI-38 = code name for a strain of human embryonic lung tissue culture cells
- 39. Rec x 10⁵ = mitotic recombinants x 10⁵
- 40. Mean B/A = mean frequency
- 41. tot. scr. = total scored
- 42. tot. = total
- 43. X² = a test of variation in the data from the computed regression line - tested in these studies at the 5% level
- 44. Aber. = aberrations
- 45. Frag. = fragment
- 46. HMA = host-mediated assay