



# BIONETICS

Litton

SUMMARY OF MUTAGENICITY  
SCREENING STUDIES  
CONTRACT FDA 71-268  
COMPOUND FDA 71-1  
AMMONIATED GLYCERRHIZIN  
HOST-MEDIATED ASSAY  
CYTOGENETICS  
DOMINANT LETHAL ASSAY

Summary of mutagenicity screening studies, host-mediated assay cytogenetics dominant  
lethal assay-Contract FDA 71-268 & Compound FDA 71-1 (Ammoniated Glycerrhizin)  
11/24/72

7315 Wisconsin Avenue  
Bethesda, Maryland  
20014

LBI PROJECT #2311

SUMMARY OF MUTAGENICITY  
SCREENING STUDIES  
CONTRACT FDA 71-268  
COMPOUND FDA 71-1  
AMMONIATED GLYCERRHIZIN  
HOST-MEDIATED ASSAY  
CYTOGENETICS  
DOMINANT LETHAL ASSAY

SUBMITTED TO

FOOD & DRUG ADMINISTRATION  
DEPARTMENT OF HEALTH, EDUCATION AND WELFARE  
ROCKVILLE, MARYLAND

SUBMITTED BY

LITTON BIONETICS, INC.  
7315 WISCONSIN AVENUE  
BETHESDA, MARYLAND

NOVEMBER 24, 1972



BIONETICS



**BIONETICS**

7315 Wisconsin Avenue, Bethesda, Maryland 20014 301 881-5600

November 24, 1972

Mr. Leonard Appleby, Contracting Officer  
Department of Health, Education and Welfare  
Public Health Service  
Food and Drug Administration, CA-212  
5600 Fishers Lane, Room 5C-13  
Rockville, Maryland 20852

Reference: Contract FDA 71-268; LBI Project #2311

Dear Mr. Appleby:

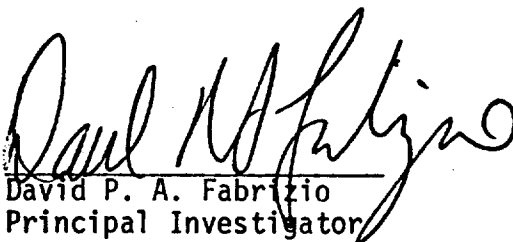
Litton Bionetics, Inc. is pleased to submit a report for the referenced contract entitled "Mutagenicity Screening Studies" for compound FDA 71-1, Ammoniated Glycerrhizin.

Included in this report are the results and raw data of the three tests conducted: Host-Mediated Assay; Cytogenetic Studies; and Dominant Lethal Assay. Eight (8) copies are being submitted for your review.

If there are any questions concerning this report, or, if additional information is required, please do not hesitate to contact us.

Sincerely,

LITTON BIONETICS, INC.

  
David P. A. Fabrizio  
Principal Investigator

DPAF:11s  
Enclosures (8)

## TABLE OF CONTENTS

	Page No.
I. REPORT .....	1
A. Introduction .....	1
B. Objective .....	2
C. Compound .....	3
1. Test Material .....	3
2. Dosages .....	3
D. Methods .....	4
E. Summary .....	4
1. Host-Mediated Assay .....	4
2. Cytogenetics .....	4
a. <u>In vivo</u> .....	4
b. <u>In vitro</u> .....	4
3. Dominant Lethal Assay .....	5
F. Results and Discussion .....	5
1. Toxicity .....	5
a. <u>In vivo</u> .....	5
b. <u>In vitro</u> .....	6
c. Toxicity data sheets .....	7
2. Host-Mediated Assay .....	9
3. Host-Mediated Assay - Repeat .....	10
a. Evaluation of retest .....	11
b. Host-mediated assay summary sheets .....	12
c. Host-mediated assay data sheets....	25
4. Cytogenetics .....	70
a. <u>In vivo</u> .....	70
b. <u>In vitro</u> .....	70
c. Cytogenetics summary sheets .....	71
5. Dominant Lethal Study .....	75
a. Acute study .....	75
b. Subacute study .....	75
c. Dominant lethal assay summary tables .....	76
II. MATERIALS AND METHODS .....	93
A. Animal Husbandry .....	93
1. Animals (Rats and Mice) .....	93
2. Preparation of Diet .....	93
3. Husbandry .....	93
B. Dosage Determination .....	93
1. Acute LD <sub>50</sub> and LD <sub>5</sub> Determination .....	93
2. Subacute Studies .....	95
C. Mutagenicity Testing Protocols .....	95
1. Host-Mediated Assay .....	95
a. Acute study .....	96
b. Subacute study .....	98
c. <u>In vitro</u> study .....	98



**BIONETICS**

# TABLE OF CONTENTS (continued)

	Page No.
2. Cytogenetic Studies .....	99
a. <u>In vivo</u> study .....	99
b. <u>In vitro</u> study .....	101
3. Dominant Lethal Assay .....	103
D. Supplementary Materials and Methods .....	104
1. Host-Mediated Assay <u>In Vitro</u> and Formulae. ....	104
a. Bacterial <u>in vitro</u> plate tests ....	104
b. <u>In vitro</u> for mitotic recombination. ....	104
c. Minimal medium (bacteria) .....	105
d. Complete medium (bacteria) .....	106
e. Complete medium (yeast) .....	106
2. Cytogenetics <u>In Vitro</u> Preparation of Ana- phase Chromosomes .....	107
3. Statistical Analyses of Dominant Lethal Studies .....	108
a. The fertility index .....	108
b. Total number of implantations ....	108
c. Total number of <u>corpora lutea</u> ....	108
d. Preimplantation losses .....	108
e. Dead implants .....	109
f. One or more dead implants .....	109
g. Two or more dead implants .....	109
h. Dead implants per total implants ..	109
E. References .....	112
1. Host-Mediated Assay .....	112
2. Cytogenetics .....	112
3. Dominant Lethal .....	113
F. Abbreviations .....	114



## I. REPORT

### A. Introduction

Litton Bionetics, Inc. (LBI) has investigated the possible mutagenicity of compounds selected and provided by the Food and Drug Administration under Contract 71-268. LBI's investigation utilized the three mammalian test systems herein described -- Host-Mediated Assay, Cytogenetic Studies and Dominant Lethal Assay. These tests provide information as to the types of genetic damage caused by environmental compounds -- pesticides, chemicals, food additives, drugs and cosmetics.

The Host-Mediated Assay is based upon the assumption that the action of a mutagen on the genetics of bacteria is similar to that in man. This is further strengthened by the use of an eukaryotic organism (Saccharomyces cerevisiae). Since the mutation frequencies are well established for the indicator organism, any deviation due to the action of the test compound is readily detectable. As some compounds are mutagenic in bacteria and not in the host animal, and vice versa, this test is able to differentiate an action which may have been due to hosts' ability to detoxify or potentiate a suspected mutagen. This action is dependent upon the ability of the compound to gain access to the peritoneal cavity. Coupled with the direct action of the compound on the indicator organism in vitro, the assay provides a clear insight into host-mediation of mutagenicity.

Cytogenetics provides a valuable tool for the direct observation of chromosomal damage in somatic cells. Alteration of the chromosome number and/or form in somatic cells may be an index of mutation. These studies utilized examination of bone marrow cells arrested in C-metaphase from rats exposed to the test compound as compared to positive and negative control animals. If mutational



changes occur, the types of damage expected due to the action of chemicals are structural rearrangements, breaks and other forms of damage to the chromosomal complement of the cells exposed.

For the in vitro cytogenetic studies, we have a more rapid and inexpensive means of determining chromosomal damage. This is accomplished by observing cells in anaphase. As the chromatids separate and move along the spindle, aberrations may occur. Chromatids which do not migrate to the daughter cells may lead to uneven distribution of parts or of entire chromatids (mitotic nondysjunction). These give rise to "side arm" bridges which have been interpreted as point stickiness or localized failures of chromosome duplication point errors. These aberrations (bridges, pseudochiasmata, multipolar cells, acentric fragments, etc.) are extremely sensitive indicators of genetic damage.

The Dominant Lethal Test is an accurate and sensitive measure of the amount and type of fetal wastage which may occur following administration of a potential mutagen. Dominant lethal mutations are indicators of lethal genetic lesions. The effects of mutagens on the chromosomal complement of the spermatozoa of treated males results in alterations of form and number of chromosomes. Structural rearrangements and aneuploidy may lead to the production of non-viable zygotes, early and late fetal deaths, abortions and congenital malformations. In addition, aberrations could lead to sterility or reduced reproductive capacity of the  $F_1$  generation. The action of a mutagen on specific portions of spermatogenesis is also apparent in this test.

#### B. Objective

The purpose of these studies is to determine any mutagenic effect of the test compound by employing the Host-Mediated Assay, Cytogenetic Studies

and the Dominant Lethal Assay, both in vivo and in vitro tests are employed with the cytogenetic and microbial test systems. These tests and their descriptions are referenced in the Appendices A through F.

C. Compound

1. Test Material

Compound FDA 71-1, Ammoniated Glycerrhizin, as supplied by the Food and Drug Administration.

2. Dosages

The animals employed, the determination of the dosage levels and the route of administration are contained in the technical discussion.

The dosage levels employed for compound FDA 71-1 are as follows for Cytogenetics Studies in vivo in rats.

Low Level	30 mg/kg
Intermediate Level	2500 mg/kg
High Level	5000 mg/kg
Negative Control	Saline
Positive Control (TEM*)	0.3 mg/kg

The dosage levels employed for compound FDA 71-1 are as follows for Host-Mediated Assay in vivo in mice.

Low Level	30 mg/kg
Intermediate Level	2500 mg/kg
High Level	5000 mg/kg
Negative Control	Saline
Positive Control (EMS**)	350 mg/kg
(DMN***)	100 mg/kg

- \* Triethylene Melamine
- \*\* Ethyl Methane Sulfonate
- \*\*\* Dimethyl Nitrosamine



The dosage levels employed for compound FDA 71-1 are as follows for the Dominant Lethal Assay in vivo in rats.

Low Level	30 mg/kg
Intermediate Level	2500 mg/kg
High Level	5000 mg/kg
Negative Control	Saline
Positive Control (TEM*)	0.5 mg/kg

The in vitro cytogenetics studies were performed employing three logarithmic dose levels.

Low Level	10 mcg/ml
Medium Level	100 mcg/ml
High Level	1000 mcg/ml
Negative Control	Saline
Positive Control (TEM*)	0.1 mcg/ml

\*Triethylene Melamine

The discussion of this test is contained in the technical discussion.

D. Methods

The protocols employed are explained in Appendices C and D.

E. Summary

1. Host-Mediated Assay

This compound is considered a possible mutagen at the dosage levels employed in this study.

2. Cytogenetics

a. In vivo

The compound produced no detectable significant aberration of the bone marrow metaphase chromosomes of rats when administered orally at the dosage levels employed in this study.

b. In vitro

The compound produced no significant aberration in the anaphase chromosomes of human tissue culture cells when tested at the



dosage levels employed in this study.

### 3. Dominant Lethal Assay

This compound was considered to be non-mutagenic in rats in the Dominant Lethal Assay when using the dosages employed in this study.

## F. Results and Discussion

### 1. Toxicity

#### a. In vivo

A group of ten male rats with an average body weight of 335 grams was given compound FDA 71-1 on an acute basis of 5,000 mg/kg of body weight. The compound was in a solution of 0.85% saline and 1 ml/rat was administered by gastric intubation. All animals appeared normal during treatment and for an additional nine days post-treatment observation. Necropsies of these animals on day 10 revealed no gross morphological change in the organs examined. The work was repeated with a group of ten male albino rats with an average body weight of 335 grams with the same findings. In the experiment 5,000 mg/kg was administered at the high level, 2,500 mg/kg at the intermediate level, and 30 mg/kg at the low level. These dosages were employed in both the acute and subacute in vivo studies.

b. In vitro

<u>Tube Number</u>	<u>Number of Cells</u>	<u>Conc. mcg/ml</u>	<u>CPE</u>	<u>Mitoses</u>
1	$5 \times 10^5$	10	-	+
2	$5 \times 10^5$	10	-	+
3	$5 \times 10^5$	100	-	+
4	$5 \times 10^5$	100	-	+
5	$5 \times 10^5$	1000	-	+
6	$5 \times 10^5$	1000	-	+
7	$5 \times 10^5$	10000	-	+
8	$5 \times 10^5$	10000	+	-
9	$5 \times 10^5$	10000	+	-
10	$5 \times 10^5$	10000	+	-

The high level employed was 1000 mcg/ml, the intermediate level was 100 mcg/ml and the low level was 10 mcg/ml.



c. TOXICITY DATA SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-1

AMMONIATED GLYCERRHIZIN



**BIONETICS**

TOXICITY DATA  
CONTRACT FDA 71-268  
COMPOUND FDA 71-1  
AMMONIATED GLYCERRHIZIN

This compound was administered at an extremely high concentration of 5000 mg/kg with no abnormal effects observed on the animals. Therefore, as agreed to in the protocol the doses employed were as follows:

High Level	5000 mg/kg
Medium Level	2500 mg/kg
Low Level	30 mg/kg

There was no abnormal gross pathology on the animals used and a determination of an LD<sub>50</sub> was not performed.



## 2. Host-Mediated Assay

This compound was considered mutagenic when tested using Salmonella TA-1530 at all acute dose levels. The subacute levels did not produce mutation frequencies that were significantly increased.

The studies with Salmonella G-46 showed no significant differences in the acute studies. The subacute studies, however, were borderline.

The Saccharomyces D-3 studies indicated that the acute usage level values were significantly higher than the control, the other groups were not considered significant.



### 3. Host-Mediated Assay - Repeat

The repeat tests on Compound FDA 71-1 against Saccharomyces D-3 gave results identical to the original tests. The acute levels showed a somewhat increased recombinant frequency, however, the compound appears negative. The better response of both the positive and negative controls, however, give increased confidence to the retest data.

The results of retests using Salmonella TA-1530 were acceptable and indicated the compound was non-mutagenic. Since this result was not entirely comparable to the original, the compound was again repeated at the acute levels. The two repeat acute tests were essentially identical. Therefore, it is concluded that the first acute test results were in error. Error was most probably due to contamination of (a) inoculum (b) diluent/saline collection fluid or (c) Spizzens plates. Since the total counts were not elevated in the acute trials and controls it is more probable that the contamination was in the Spizzens. The actual explanation may be another cause, however, if so, that cause is not immediately apparent. The mutant frequencies of the subacute tests were also elevated, however, the subacute trials were negative when the Mft/MFc values were examined.



a. Evaluation of retest

The results of the TA-1530 repeat of compound 71-1 are acceptable and indicate that unlike the original test in which the three acute dose levels gave positive results, this compound does not exhibit genetic activity against TA-1530. From an examination of both sets of data I cannot see any obvious explanation for the difference in the results of the two tests. I would assume that the results of the repeat run are more accurate than the original because (a) the control values are close to what is expected, and (b) the results in the repeat should reflect experience gained in conducting this type of assay between the first (1971) and the repeat (1973) trials.

The results of the D3 repeat with compound 71-1 are similar to the original test with respect to the overall conclusions. In both tests the compound appears negative. The confidence with which this conclusion can be made, however, is definitely enhanced with the retest data.



David Brusick



b. HOST-MEDIATED ASSAY SUMMARY SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-1

AMMONIATED GLYCERRHIZIN



**BIONETICS**

# HOST MEDIATED ASSAY

## SUMMARY SHEET

OUTLIERS REMOVED

TEST I

COMPOUND: FDA 71-1

SALMONELLA

SACCHAROMYCES D-3

TA1530

G-46

	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC	MRF (X 10E-5)	MRT/MRC
ACUTE						
NC	4.83		1.00		5.83	
PC	73.26	15.17	10.79	10.79	31.58	5.42
AL	33.04	6.84	.68	.68	22.61	3.88
AI	37.27	7.72	1.47	1.47	11.66	2.00
AH	76.41	15.82	.92	.92	16.56	2.84
SUBACUTE						
NC	4.83		1.00		5.83	
SL	8.92	1.85	3.80	3.80	3.46	.59
SI	10.94	2.27	2.82	2.82	9.11	1.56
SH	5.80	1.20	2.55	2.55	5.46	.94

IN VITRO

TA1530

G-46

D-3

% CONC

% SURVIVAL

R X 10E5

NC  
PC

# HOST MEDIATED ASSAY

## SUMMARY SHEET

### OUTLIERS INCLUDED

COMPOUND: FDA 71-1

#### TEST I

#### SALMONELLA

TA1530

G-46

#### SACCHAROMYCES D-3

	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC	MRF (X 10E-5)	MRT/MRC
ACUTE						
NC	4.83		1.00		5.83	
PC	73.26	15.17	15.77	15.77	31.58	5.42
AU	33.04	6.84	.77	.77	22.61	3.88
AI	37.27	7.72	1.88	1.88	11.66	2.00
AH	76.41	15.82	1.08	1.08	16.56	2.84
SUBACUTE						
NC	4.83		1.00		5.83	
SU	12.70	2.63	5.98	5.98	4.42	.76
SI	13.15	2.72	4.21	4.21	12.73	2.18
SII	6.58	1.36	3.45	3.45	5.46	.94

#### IN VITRO

TA1530

G-46

D-3

% CONC

% SURVIVAL

R X 10E5

NC  
PC

# HOST MEDIATED ASSAY

## SUMMARY SHEET TEST I

COMPOUND: FDA 71-1

SALMONELLA

SACCHAROMYCES D-3

TA1530

G-46

	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC	MRF (X 10E-5)	MRT/MRC
ACUTE						
NC	4.83		1.00		9.09	
PC	73.26	15.17	15.77	15.77	48.72	5.36
AU	33.04	6.84	.77	.77	37.40	4.11
AI	37.27	7.72	1.88	1.88	10.73	1.18
AH	76.41	15.82	1.08	1.08	33.33	3.67
SUBACUTE						
NC	4.83		1.00		9.09	
SU	12.70	2.63	5.98	5.98	5.38	.59
SI	13.15	2.72	4.21	4.21	18.81	2.07
SH	6.58	1.36	3.45	3.45	15.90	1.75

IN VITRO

TA1530

G-46

D-3

			% CONC	% SURVIVAL	R X 10E5
TCPD	-	-	5	70	8
NC	-	-	-	100	2
PC	+	+	5	72	370

CSCX CSC85F 22 NOV 72 18:23:38 USER CFU007 200

CARDS IN 74 OUT 0 LINES 52 PROCESSING TIME 2.99 SECONDS

# HOST MEDIATED ASSAY (OUTLIERS REMOVED)

## SUMMARY SHEET

COMPOUND: FDA 71-1

TEST I

SALMONELLA

SACCHAROMYCES D-3

TA1530

G-46

### ACUTE

	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC	MRF (X 10E-5)	MRT/MRC
NC	4.83		1.00		9.09	
PC	73.26	15.17	10.79	10.79	48.72	5.36
AU	33.04	6.84	.68	.68	37.40	4.11
AI	37.27	7.72	1.47	1.47	10.73	1.18
AH	76.41	15.82	.92	.92	33.33	3.67

### SUBACUTE

	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC	MRF (X 10E-5)	MRT/MRC
NC	4.83		1.00		9.09	
SU	8.92	1.85	3.80	3.80	4.10	.45
SI	10.94	2.27	2.82	2.82	11.55	1.27
SH	5.80	1.20	2.55	2.55	15.90	1.75

### IN VITRO

TA1530

G-46

% CONC

D-3

% SURVIVAL

R X 10E5

NC  
PC

SAME AS ON PRECEDING SUMMARY SHEET

CSCX CSC85F 24 NOV 72 15:13:15 USER CFU007 190  
CARDS IN 73 OUT 0 LINES 47 PROCESSING TIME

2.94 SECONDS

READY

# HOST MEDIATED ASSAY

## SUMMARY SHEET

OUTLIERS REMOVED

### TEST II

COMPOUND: FDA 71-1

SALMONELLA

SACCHAROMYCES D-3

TA1530

G-46

	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC	MRF (X 10E-5)	MRT/MRC
ACUTE						
NC	.55		1.00		3.17	
PC	12.69	23.07	0.	0.	30.48	9.62
AL	.59	1.07	0.	0.	11.80	3.72
AI	1.10	2.00	0.	0.	11.85	3.74
LD5	1.03	1.87	0.	0.	8.63	2.72
SUBACUTE						
NC	.65		1.00		5.47	
SL	1.83	2.82	0.	0.	7.02	1.28
SI	1.82	2.80	0.	0.	9.04	1.65
SLD5	1.37	2.11	0.	0.	7.04	1.29

IN VITRO

TA1530

G-46

D-3

% CONC

% SURVIVAL

R X 10E5

NC  
PC

STOP  
SRU'S: .6

# HOST MEDIATED ASSAY

## SUMMARY SHEET

### OUTLIERS INCLUDED

#### TEST II

COMPOUND: FDA 71-1

	SALMONELLA				SACCHAROMYCES D-3	
	TA1530		G-46			
	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC	MRF (X 10E-5)	MRT/MRC
ACUTE						
NC	.55		1.00		3.73	
PC	12.69	23.07	0.	0.	30.48	8.17
AL	.59	1.07	0.	0.	12.55	3.36
AI	1.21	2.20	0.	0.	11.85	3.18
LD5	1.16	2.11	0.	0.	8.63	2.31
SUBACUTE						
NC	.65		1.00		6.27	
SL	1.83	2.82	0.	0.	7.02	1.12
SI	1.82	2.80	0.	0.	9.04	1.44
SLD5	1.58	2.43	0.	0.	7.04	1.12

IN VITRO	TA1530	G-46	% CONC	% SURVIVAL	R X 10E5
----------	--------	------	--------	------------	----------

NC  
PC

STOP  
SRU'S:.5  
!

# HOST MEDIATED ASSAY

## SUMMARY SHEET

### OUTLIERS INCLUDED

#### TEST II

COMPOUND: FDA 71-1

	SALMONELLA				SACCHAROMYCES D-3	
	TA1530		G-46			
	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC	MRF (X 10E-5)	MRT/MRC
ACUTE						
NC	.55		1.00		3.73	
PC	12.69	23.07	0.	0.	30.48	8.17
AL	.59	1.07	0.	0.	12.55	3.36
AI	1.21	2.20	0.	0.	11.85	3.18
LD5	1.16	2.11	0.	0.	8.63	2.31
SUBACUTE						
NC	.65		1.00		6.27	
SL	1.83	2.62	0.	0.	7.02	1.12
SI	1.82	2.80	0.	0.	9.04	1.44
SLD5	1.58	2.43	0.	0.	7.04	1.12
PC*	21.67	33.34	0.	0.	54.34	8.67

IN VITRO	TA1530	G-46			
			% CONC	% SURVIVAL	R X 10E5

NC  
PC

STOP  
SRU'S:.5

\* Positive control performed by acute method done with subacute studies.



# HOST MEDIATED ASSAY

## SUMMARY SHEET

### OUTLIERS REMOVED

#### TEST II

COMPOUND: FDA 71-1

SALMONELLA

SACCHAROMYCES D-3

TA1530

G-46

	MMF (X 10E-8)	MFT/MFC	MMF (X 10E-8)	MFT/MFC	MRF (X 10E-5)	MRT/MRC
ACUTE						
NC	.55		1.00		3.17	
PC	12.69	23.07	0.	0.	30.48	9.62
AL	.59	1.07	0.	0.	11.80	3.72
AI	1.10	2.00	0.	0.	11.85	3.74
LD5	1.03	1.87	0.	0.	8.63	2.72
SUBACUTE						
NC	.65		1.00		5.47	
SL	1.83	2.82	0.	0.	7.02	1.28
SI	1.82	2.80	0.	0.	9.04	1.65
SLD5	1.37	2.11	0.	0.	7.04	1.29
PC*	19.23	29.58	0.	0.	51.55	9.42

IN VITRO

TA1530

G-46

% CONC

D-3  
% SURVIVAL

R X 10E5

NC  
PC

STOP  
SRU'S:.6

\* Positive control performed by acute method done with subacute studies.

# COMPARASION OF REPEATS TO ORIGINALS

Compound FDA 71-1  
AMMONIATED GLYCERRHIZEN

Outliers Removed

	<u>Salmonella</u>		<u>Salmonella</u>		<u>Saccharomyces</u>		<u>Saccharomyces</u>	
	TA-1530 Original		TA-1530 Repeat		D-3 Original		D-3 Repeat	
	MMF (x 10 <sup>-8</sup> )	MFT/MFC	MMF (x 10 <sup>-8</sup> )	MFT/MFC	MMR (x 10 <sup>-5</sup> )	MRT/MRC	MMR (x 10 <sup>-5</sup> )	MRT/MRC
ACUTE								
NC	4.83		.55		5.83		3.17	
PC	73.26	15.17	12.69	23.07	31.58	5.42	30.48	9.62
AL	33.04	6.84	.59	1.07	22.61	3.88	11.80	3.72
AI	37.27	7.72	1.10	2.00	11.66	2.00	11.85	3.74
AH	76.41	15.82	1.03	1.87	16.56	2.84	8.63	2.72
SUBACUTE								
NC	4.83		.65		5.83		5.47	
SL	8.92	1.85	1.83	2.82	3.46	.59	7.02	1.28
SI	10.94	2.27	1.82	2.80	9.11	1.56	9.04	1.65
SH	5.80	1.20	1.37	2.11	5.46	.94	7.04	1.29

# COMPARASION OF REPEATS TO ORIGINALS

Compound FDA 71-1  
AMMONIATED GLYCERRHIZEN

Outliers Included

	<u>Salmonella</u> TA-1530 Original		<u>Salmonella</u> TA-1530 Repeat		<u>Saccharomyces</u> D-3 Original		<u>Saccharomyces</u> D-3 Repeat	
	MMF (x 10 <sup>-8</sup> )	MFT/MFC	MMF (x 10 <sup>-8</sup> )	MFT/MFC	MMR (x 10 <sup>-5</sup> )	MRT/MRC	MMR (x 10 <sup>-5</sup> )	MRT/MRC
ACUTE								
NC	4.83		.55		5.83		3.73	
PC	73.26	15.17	12.69	23.07	31.58	5.42	30.48	8.17
AL	33.04	6.84	.59	1.07	22.61	3.88	12.55	3.36
AI	37.27	7.72	1.21	2.20	11.66	2.00	11.85	3.18
AH	76.41	15.82	1.16	2.11	16.56	2.84	8.63	2.31
SUBACUTE								
NC	4.83		.65		5.83		6.27	
SL	12.70	2.63	1.83	2.82	4.42	0.76	7.02	1.12
SI	13.15	2.72	1.82	2.80	12.73	2.18	9.04	1.44
SH	6.58	1.36	1.58	2.43	5.46	0.94	7.04	1.12

# COMPARASION OF REPEATS TO ORIGINALS

Compound FDA 71-1  
AMMONIATED GLYCERRHIZEN

Outliers Included

	<u>Salmonella</u>		<u>Salmonella</u>		<u>Saccharomyces</u>		<u>Saccharomyces</u>	
	TA-1530 Original		TA-1530 Repeat		D-3 Original		D-3 Repeat	
	MMF (x 10 <sup>-8</sup> )	MFT/MFC	MMF (x 10 <sup>-8</sup> )	MFT/MFC	MMR (x 10 <sup>-5</sup> )	MRT/MRC	MMR (x 10 <sup>-5</sup> )	MRT/MRC
ACUTE								
NC	4.83		.55		5.83		3.73	
PC	73.26	15.17	12.69	23.07	31.58	5.42	30.48	8.17
AL	33.04	6.84	.59	1.07	22.61	3.88	12.55	3.36
AI	37.27	7.72	1.21	2.20	11.66	2.00	11.85	3.18
AH	76.41	15.82	1.16	2.11	16.56	2.84	8.63	2.31
SUBACUTE								
NC	4.83		.65		5.83		6.27	
SL	12.70	2.63	1.83	2.82	4.42	0.76	7.02	1.12
SI	13.15	2.72	1.82	2.80	12.73	2.18	9.04	1.44
SH	6.58	1.36	1.58	2.43	5.46	0.94	7.04	1.12
PC*	-	-	21.67	53.34	-	-	54.34	8.67

\* Positive control performed by acute method done with subacute studies.

# COMPARASION OF REPEATS TO ORIGINALS

Compound FDA 71-1  
AMMONIATED GLYCERRHIZEN

Outliers Removed

	<u>Salmonella</u>		<u>Salmonella</u>		<u>Saccharomyces</u>		<u>Saccharomyces</u>	
	TA-1530 Original		TA-1530 Repeat		D-3 Original		D-3 Repeat	
	MMF (x 10 <sup>-8</sup> )	MFT/MFC	MMF (x 10 <sup>-8</sup> )	MFT/MFC	MMR (x 10 <sup>-5</sup> )	MRT/MRC	MMR (x 10 <sup>-5</sup> )	MRT/MRC
ACUTE								
NC	4.83		.55		5.83		3.17	
PC	73.26	15.17	12.69	23.07	31.58	5.42	30.48	9.62
AL	33.04	6.84	.59	1.07	22.61	3.88	11.80	3.72
AI	37.27	7.72	1.10	2.00	11.66	2.00	11.85	3.74
AH	76.41	15.82	1.03	1.87	16.56	2.84	8.63	2.72
SUBACUTE								
NC	4.83		.65		5.83		5.47	
SL	8.92	1.85	1.83	2.82	3.46	.59	7.02	1.28
SI	10.94	2.27	1.82	2.80	9.11	1.56	9.04	1.65
SH	5.80	1.20	1.37	2.11	5.46	.94	7.04	1.29
PC*	-	-	19.23	29.58	-	-	51.55	9.42

\* Positive control performed by acute method done with subacute studies.

c. HOST-MEDIATED ASSAY DATA SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-1

AMMONIATED GLYCERRHIZIN



**BIONETICS**

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: NEGATIVE CONTROL - WATER

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 17, 1971

	A	B	C	D	E
ANIMAL NUMBER	RAW CFU X 10E7/0.6ML	TOTAL CFU 10E8/1.0ML	RAW NO. MUTANTS X 10E0/1.2ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FRE (D/B) X 10E-8
1	18.10	3.02	7.00	5.83	1.93
2	12.20	2.03	20.00	16.66	8.19
3	30.20	5.03	60.00	49.98	9.93
4	30.60	5.10	20.00	16.66	3.27
5	24.10	4.02	11.00	9.16	2.28
6	8.00	1.33	8.00	6.66	5.00
7	55.90	9.32	30.00	24.99	2.68
8	9.80	1.63	11.00	9.16	5.61
9	21.60	3.60	36.00	29.99	8.33
10	48.00	8.00	10.00	8.33	1.04

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	4.31	17.74	4.83
RANGE	7.98	44.15	8.89
MAX	9.32	49.98	9.93
MIN	1.33	5.83	1.04

NO OUTLIERS

CSCX CSC85F 21 NOV 72 19:11:21 USER CFU007 100

CARDS IN 240 OUT 0 LINES 68 PROCESSING TIME 5.90 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: POSITIVE CONTROL - DMN - 100MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 17, 1971

	A	B	C	D	E
ANIMAL	RAW CFU X	TOTAL CFU	RAW NO.	TOTAL NO.	MUTATION
NUMBER	10E7/0.6ML	10E8/1.0ML	MUTANTS X	MUTANTS X	FRE (D/B)
			10E0/1.2ML	10E0/1.0ML	X 10E-8
1	9.10	1.52	228.00	189.92	125.22
2	42.00	7.00	240.00	199.92	26.56
3	16.80	2.80	264.00	219.91	76.54
4	8.00	1.33	265.00	220.74	165.56
5	54.00	9.00	220.00	183.26	20.36
6	24.20	4.03	229.00	190.76	47.29
7	42.90	7.15	102.00	84.97	11.88
8	6.00	1.00	204.00	169.93	169.93
9	30.20	5.03	269.00	224.08	44.52
10	21.10	3.52	172.00	143.28	40.74

NO. OF ANIMALS EQUALS 10

	COL. B	COL. D	COL. E
	(X 10E8)	(X 10E0)	(X 10E-8)
MEAN	4.24	102.68	73.26
RANGE	8.00	139.11	158.05
MAX	9.00	224.08	169.93
MIN	1.00	84.97	11.88

NO OUTLIERS

CSCX CSCB5F 21 NOV 72 19: 21 5 USER CFU007 100

CARDS IN 240 OUT 0 LINES 68 PROCESSING TIME 6.25 SECONDS



# HOST MEDIATED ASSAY REPORT SHEET

TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: LOW - 30 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 17, 1971

	A	B	C	D	E
ANIMAL NUMBER	RAW CFU X 10E7/0.6ML	TOTAL CFU 10E8/1.0ML	RAW NO. MUTANTS X 10E0/1.2ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FRE (D/B) X 10E-8
1	36.00	6.00	11.00	9.16	1.53
2	12.20	2.03	12.00	10.00	4.92
3	8.00	1.33	60.00	49.98	37.48
4	9.00	1.50	132.00	109.96	73.30
5	7.80	1.30	36.00	29.99	23.07
6	8.50	1.42	120.00	99.96	70.56
7	36.20	6.03	36.00	29.99	4.97
8	7.30	1.22	72.00	59.98	49.29
9	7.80	1.30	84.00	69.97	53.82
10	6.10	1.02	14.00	11.66	11.47

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	2.32	48.06	33.04
RANGE	5.02	100.79	71.78
MAX	6.03	109.96	73.30
MIN	1.02	9.16	1.53

NO OUTLIERS

DATA CARDS ENCOUNTERED BY SYSTEM - IGNORED.

CSCX CSC85F 21 NOV 72 19: 2:21 USER CFU007 100

CARDS IN 241 OUT 0 LINES 69 PROCESSING TIME 6. 7 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: INTERMEDIATE - 2500 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 17, 1971

	A	B	C	D	E
ANIMAL	RAW CFU X	TOTAL CFU	RAW NO.	TOTAL NO.	MUTATION
NUMBER	10E7/0.6ML	10E8/1.0ML	MUTANTS X	MUTANTS X	FRE (D/B)
			10E0/1.2ML	10E0/1.0ML	X 10E-8
1	52.90	8.82	84.00	69.97	7.94
2	43.20	7.20	120.00	99.96	13.88
3	18.00	3.00	36.00	29.99	10.00
4	16.80	2.80	60.00	49.98	17.85
5	6.80	1.13	36.00	29.99	26.46
6	9.70	1.62	180.00	149.94	92.74
7	9.00	1.50	96.00	79.97	53.31
8	20.40	3.40	132.00	109.96	32.34
9	13.20	2.20	120.00	99.96	45.44
10	6.60	1.10	96.00	79.97	72.70

NO. OF ANIMALS EQUALS 10

	COL. B	COL. D	COL. E
	(X 10E8)	(X 10E0)	(X 10E-8)
MEAN	3.28	79.97	37.27
RANGE	7.72	119.95	84.81
MAX	8.82	149.94	92.74
MIN	1.10	29.99	7.94

NO OUTLIERS

CSCX CSC85F 21 NOV 72 19: 3: 2 USER CFU007 100

CARDS IN 240 OUT 0 LINES 68 PROCESSING TIME 5.93 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC 17, 1971

	A	B	C	D	E
	RAW CFU X	TOTAL CFU	RAW NO.	TOTAL NO.	MUTATION
ANIMAL	10E7/0.6ML	10E8/1.0ML	MUTANTS X	MUTANTS X	FRE (D/B)
NUMBER			10E0/1.2ML	10E0/1.0ML	X 10E-8
1	12.00	2.00	48.00	39.98	19.99
2	18.00	3.00	108.00	89.96	29.99
3	42.20	7.03	32.00	26.66	3.79
4	9.30	1.55	168.00	139.94	90.28
5	6.20	1.03	229.00	190.76	184.60
6	6.90	1.15	304.00	253.23	220.20
7	7.80	1.30	182.00	151.61	116.62
8	7.40	1.23	92.00	76.64	62.14
9	16.40	2.73	73.00	60.81	22.25
10	14.00	2.33	40.00	33.32	14.28

NO. OF ANIMALS EQUALS 10

	COL. B	COL. D	COL. E
	(X 10E8)	(X 10E0)	(X 10E-8)
MEAN	2.34	106.29	76.41
RANGE	6.00	226.58	216.41
MAX	7.03	253.23	220.20
MIN	1.03	26.66	3.79

NO OUTLIERS

CSCX CSC85F 21 NOV 72 191 3:24 USER CFU007 100

CARDS IN 240 OUT 0 LINES 68 PROCESSING TIME 5.93 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: LOW - 30 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: DEC. 17, 1971

	A	B	C	D	E
ANIMAL NUMBER	RAW CFU X 10E7/0.6ML	TOTAL CFU 10E8/1.0ML	RAW NO. MUTANTS X 10E0/1.2ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FRE (D/B) X 10E-8
1	29.50	4.92	38.00	31.65	6.44
2	17.60	2.93	36.00	29.99	10.22
3	25.20	4.20	90.00	74.97	17.85
4	40.80	6.80	53.00	44.15	6.49
5	6.20	1.03	58.00	48.31	46.75 *
6	39.80	6.63	50.00	41.65	6.28
7	36.20	6.03	44.00	36.65	6.07
8	33.60	5.60	37.00	30.82	5.50
9	36.70	6.12	35.00	29.15	4.77
10	6.00	1.00	20.00	16.66	16.66

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	4.53	38.40	12.70
RANGE	5.80	58.31	41.99
MAX	6.80	74.97	46.75
MIN	1.00	16.66	4.77

\* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	4.91	37.30	8.92
RANGE	5.80	58.31	13.08
MAX	6.80	74.97	17.85
MIN	1.00	16.66	4.77

CSCX CSC85F 21 NOV 72 19: 3:42 USER CFU007 100

CARDS IN 240 OUT 0 LINES 77 PROCESSING TIME 6.4 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: INTERMEDIATE - 2500 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: DEC. 17, 1971

	A	B	C	D	E
ANIMAL	RAW CFU X	TOTAL CFU	RAW NO.	TOTAL NO.	MUTATION
NUMBER	10E7/0.6ML	10E8/1.0ML	MUTANTS X	MUTANTS X	FRE (D/B)
			10E0/1.2ML	10E0/1.0ML	X 10E-6
1	6.00	1.00	37.00	30.82	30.82 *
2	24.10	4.02	18.00	14.99	3.73
3	12.00	2.00	14.00	11.66	5.63
4	10.80	1.80	23.00	19.16	10.64
5	23.60	3.93	18.00	14.99	3.81
6	18.20	3.03	46.00	38.32	12.63
7	12.20	2.03	49.00	40.82	20.07
8	6.30	1.05	22.00	18.33	17.45
9	12.00	2.00	32.00	26.66	13.33

NO. OF ANIMALS EQUALS 9

NO. OF DEAD ANIMALS EQUALS 1

	COL. B	COL. D	COL. E
	(X 10E8)	(X 10E0)	(X 10E-6)
MEAN	2.32	23.07	13.15
RANGE	3.02	29.15	27.09
MAX	4.02	40.82	30.82
MIN	1.00	11.66	3.73

\* SUMMARY WITH OUTLIERS REMOVED

	COL. B	COL. D	COL. E
	(X 10E8)	(X 10E0)	(X 10E-6)
MEAN	2.48	23.12	10.94
RANGE	2.97	29.15	16.34
MAX	4.02	40.82	20.07
MIN	1.05	11.66	3.73

DATA CARDS ENCOUNTERED BY SYSTEM - IGNORED

CSCX CSC85F 21 NOV 72 19: 41 0 USER CFU007 100

CARDS IN 240 OUT 0 LINES 78 PROCESSING TIME 6.1 SECONDS 32

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1530

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: DEC 17, 1971

	A	B	C	D	E
	RAW CFU X	TOTAL CFU	RAW NO.	TOTAL NO.	MUTATION
ANIMAL	10E7/0.6ML	10E8/1.0ML	MUTANTS X	MUTANTS X	FRE (D/B)
NUMBER			10E0/1.2ML	10E0/1.0ML	X 10E-8
1	29.60	4.93	36.00	29.99	6.08
2	35.40	5.90	37.00	30.82	5.22
3	30.10	5.02	29.00	24.16	4.82
4	29.40	4.90	40.00	33.32	6.80
5	51.60	8.60	41.00	34.15	3.97
6	8.60	1.43	22.00	18.33	12.79 *
7	21.20	3.53	38.00	31.65	8.96
8	39.20	6.53	42.00	34.99	5.35
9	36.60	6.10	38.00	31.65	5.19

NO. OF ANIMALS EQUALS 9

NO. OF CONTAMINATED EQUALS 1

	COL. B	COL. D	COL. E
	(X 10E8)	(X 10E0)	(X 10E-8)
MEAN	5.22	29.90	6.58
RANGE	7.17	16.66	8.81
MAX	8.60	34.99	12.79
MIN	1.43	18.33	3.97

\* SUMMARY WITH OUTLIERS REMOVED

	COL. B	COL. D	COL. E
	(X 10E8)	(X 10E0)	(X 10E-8)
MEAN	5.69	31.34	5.80
RANGE	5.07	10.83	4.99
MAX	8.60	34.99	8.96
MIN	3.53	24.16	3.97

DATA CARDS ENCOUNTERED BY SYSTEM - IGNORED

CSCX CSC85F 21 NOV 72 19: 4:16 USER CFU007 100

CARDS IN 240 OUT 0 LINES 78 PROCESSING TIME 5.89 SECONDS

# HOST-MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA G-46

DOSE LEVEL: NEGATIVE CONTROL - WATER

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 10, 1971

	A	B	C	D	E
	RAW CFU X	TOTAL CFU	RAW NO.	TOTAL NO.	MUTATION
ANIMAL	10E7/0.6ML	10E8/1.0ML	MUTANTS X	MUTANTS X	FRE (D/B)
NUMBER			10E0/1.2ML	10E0/1.0ML	X 10E-8
1	570.00	95.00	24.00	19.99	.21
2	66.00	11.00	19.00	15.83	1.44
3	92.00	15.33	47.00	39.15	2.55
4	60.00	10.00	14.00	11.66	1.17
5	126.00	21.00	60.00	49.98	2.38
6	350.00	58.33	40.00	33.32	.57
7	260.00	43.33	7.00	5.83	.13
8	403.00	67.17	36.00	29.99	.45
9	528.00	88.00	12.00	10.00	.11
10	189.00	31.50	37.00	30.82	.98

NO. OF ANIMALS EQUALS 10

	COL. B	COL. D	COL. E
	(X 10E8)	(X 10E0)	(X 10E-8)
MEAN	44.07	24.66	1.00
RANGE	85.00	44.15	2.44
MAX	95.00	49.98	2.55
MIN	10.00	5.83	.11

NO OUTLIERS

CSCX CSC85F 21 NOV 72 19:17:11 USER CFU007 100

CARDS IN 240 OUT 0 LINES 68 PROCESSING TIME 6.8 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA G-46

DOSE LEVEL: POSITIVE CONTROL - DMN - 100 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 10, 1971

	A	B	C	D	E
ANIMAL	RAW CFU X	TOTAL CFU	RAW NO.	TOTAL NO.	MUTATION
NUMBER	10E7/0.6ML	10E8/1.0ML	MUTANTS X	MUTANTS X	FRE (D/B)
			10E0/1.2ML	10E0/1.0ML	X 10E-8
1	966.00	161.00	361.00	300.71	1.87
2	368.00	61.33	302.00	251.57	4.10
3	222.00	37.00	661.00	550.61	14.88
4	146.00	24.33	300.00	249.90	10.27
5	109.00	18.17	180.00	149.94	8.25
6	66.00	11.00	305.00	254.06	23.10
7	416.00	69.33	660.00	549.78	7.93
8	318.00	53.00	244.00	203.25	3.83
9	80.00	13.33	970.00	808.01	60.60 *
10	240.00	40.00	1098.00	914.63	22.87

NO. OF ANIMALS EQUALS 10

	COL. B	COL. D	COL. E
	(X 10E8)	(X 10E0)	(X 10E-8)
MEAN	48.85	423.25	15.77
RANGE	150.00	764.69	58.73
MAX	161.00	914.63	60.60
MIN	11.00	149.94	1.87

\* SUMMARY WITH OUTLIERS REMOVED

	COL. B	COL. D	COL. E
	(X 10E8)	(X 10E0)	(X 10E-8)
MEAN	52.80	380.50	10.79
RANGE	150.00	764.69	21.23
MAX	161.00	914.63	23.10
MIN	11.00	149.94	1.87

CSCX CSC85F 21 NOV 72 19:17:20 USER CFU007 100

CARDS IN 240 OUT 0 LINES 77 PROCESSING TIME 5.93 SECONDS



# HOST-MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA G-46

DOSE LEVEL: LOW - 30 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 10, 1971

	A	B	C	D	E
ANIMAL NUMBER	RAW CFU X 10E7/0.6ML	TOTAL CFU 10E8/1.0ML	RAW NO. MUTANTS X 10E0/1.2ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FRE (D/B) X 10E-8
1	380.00	63.33	60.00	49.98	.79
2	248.00	41.33	24.00	19.99	.48
3	109.00	18.17	18.00	14.99	.83
4	408.00	68.00	24.00	19.99	.29
5	210.00	35.00	30.00	24.99	.71
6	80.00	13.33	18.00	14.99	1.12
7	188.00	31.33	60.00	49.98	1.60 *
8	131.00	21.83	12.00	10.00	.46
9	103.00	17.17	18.00	14.99	.87
10	174.00	29.00	18.00	14.99	.52

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	33.85	23.49	.77
RANGE	54.67	39.98	1.30
MAX	68.00	49.98	1.60
MIN	13.33	10.00	.29

\* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	34.13	20.55	.68
RANGE	54.67	39.98	.83
MAX	68.00	49.98	1.12
MIN	13.33	10.00	.29

CSCX CSC85F 21 NOV 72 19:17:30 USER CFU007 100

CARDS IN 240 OUT 0 LINES 77 PROCESSING TIME 5.71 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA G-46

DOSE LEVEL: INTERMEDIATE - 2500 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 10, 1971

	A	B	C	D	E
ANIMAL NUMBER	RAW CFU X 10E7/0.6ML	TOTAL CFU 10E8/1.0ML	RAW NO. MUTANTS X 10E0/1.2ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FRE (D/B) X 10E-8
1	176.00	29.33	42.00	34.99	1.19
2	258.00	43.00	60.00	49.98	1.16
3	68.00	11.33	18.00	14.99	1.32
4	122.00	20.33	60.00	49.98	2.46
5	180.00	30.00	30.00	24.99	.83
6	288.00	48.00	72.00	59.98	1.25
7	70.00	11.67	78.00	64.97	5.57 *
8	519.00	86.50	48.00	39.98	.46
9	182.00	30.33	30.00	24.99	.82
10	99.00	16.50	73.00	60.81	3.69

NO. OF ANIMALS EQUALS 10

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	32.70	42.57	1.88
RANGE	75.17	49.98	5.11
MAX	86.50	64.97	5.57
MIN	11.33	14.99	.46

\* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	35.04	40.08	1.47
RANGE	75.17	45.81	3.22
MAX	86.50	60.81	3.69
MIN	11.33	14.99	.46

CSCX CSC85F 21 NOV 72 19117:39 USER CFU007 100

CARDS IN 240 OUT 0 LINES 77 PROCESSING TIME 5.89 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA 6-46

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 10, 1971

	A	B	C	D	E
ANIMAL NUMBER	RAW CFU X 10E7/0.6ML	TOTAL CFU 10E8/1.0ML	RAW NO. MUTANTS X 10E0/1.2ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FRE (D/B) X 10E-6
1	152.00	25.33	72.00	59.98	2.37 *
2	204.00	34.00	48.00	39.98	1.18
3	500.00	83.33	144.00	119.95	1.44
4	464.00	77.33	108.00	89.96	1.16
5	66.00	11.00	12.00	10.00	.91
6	248.00	41.33	16.00	13.33	.32
7	342.00	57.00	30.00	24.99	.44
8	164.00	27.33	18.00	14.99	.55
9	444.00	74.00	120.00	99.96	1.35

NO. OF ANIMALS EQUALS 9  
SAMPLES WITH ZERO MUTANTS EQUAL 1

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-6)
MEAN	47.85	52.57	1.08
RANGE	72.33	109.96	2.04
MAX	83.33	119.95	2.37
MIN	11.00	10.00	.32

\* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-6)
MEAN	50.67	51.65	.92
RANGE	72.33	109.96	1.12
MAX	83.33	119.95	1.44
MIN	11.00	10.00	.32

DATA CARDS ENCOUNTERED BY SYSTEM - IGNORED

CSCX CSC85F 21 NOV 72 19:17:48 USER CFU007 100

ARDS IN 240 OUT 0 LINES 78 PROCESSING TIME 5.88 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA G-46

DOSE LEVEL: LOW - 30 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: DEC. 10, 1971

	A	B	C	D	E	
ANIMAL NUMBER	RAW CFU X 10E7/0.6ML	TOTAL CFU 10E8/1.0ML	RAW NO. MUTANTS X 10E0/1.2ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FRE (D/6) X 10E-8	
1	9.80	1.63	46.00	38.32	23.46	*
2	25.40	4.23	12.00	10.00	2.36	
3	47.70	7.95	14.00	11.66	1.47	
4	44.50	7.42	91.00	75.80	10.22	
5	81.60	13.60	16.00	13.33	.98	
6	78.60	13.10	18.00	14.99	1.14	
7	8.60	1.43	16.00	13.33	9.30	
8	12.50	2.08	11.00	9.16	4.40	
9	57.80	9.63	6.00	5.00	.52	

NO. OF ANIMALS EQUALS 9  
SAMPLES WITH ZERO MUTANTS EQUAL 1

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	6.79	21.29	5.98
RANGE	12.17	70.80	22.94
MAX	13.60	75.80	23.46
MIN	1.43	5.00	.52

\* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	7.43	19.16	3.80
RANGE	12.17	70.80	9.70
MAX	13.60	75.80	10.22
MIN	1.43	5.00	.52

DATA CARDS ENCOUNTERED BY SYSTEM - IGNORED

CSCX CSC85F 21 NOV 72 19:17:58 USER CFU007 100

CARDS IN 240 OUT 0 LINES 78 PROCESSING TIME 5.85 SECONDS 39

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA G-46

DOSE LEVEL: INTERMEDIATE - 2500 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: DEC. 10, 1971

	A	B	C	D	E
ANIMAL NUMBER	RAW CFU X 10E7/0.6ML	TOTAL CFU 10E8/1.0ML	RAW NO. MUTANTS X 10E0/1.2ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FRE (D/B) X 10E-8
1	23.60	3.93	6.00	5.00	1.27
2	20.10	3.35	4.00	3.33	.99
3	42.00	7.00	8.00	6.66	.95
4	30.20	5.03	13.00	10.83	2.15
5	7.40	1.23	12.00	10.00	8.10
6	114.00	19.00	114.00	94.96	5.80
7	39.00	6.50	109.00	90.80	13.97 *
8	68.00	11.33	17.00	14.16	1.25

NO. OF ANIMALS EQUALS 8

SAMPLES WITH ZERO MUTANTS EQUAL 2

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	7.17	29.67	4.21
RANGE	17.77	91.83	13.02
MAX	19.00	94.96	13.97
MIN	1.23	3.33	.95

\* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	7.27	20.71	2.82
RANGE	17.77	91.83	7.15
MAX	19.00	94.96	8.10
MIN	1.23	3.33	.95

DATA CARDS ENCOUNTERED BY SYSTEM - IGNORED

CSCX CSC85F 21 NOV 72 19:18: 8 USER CFU007 100

CARDS IN 240 OUT 0 LINES 77 PROCESSING TIME 6.13 SECONDS 40

# HOST MEDIATED ASSAY REPORT SHEET TEST I

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA G-46

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: DEC. 10, 1971

	A	B	C	D	E
ANIMAL NUMBER	RAW CFU X 10E7/0.6ML	TOTAL CFU 10E8/1.0ML	RAW NO. MUTANTS X 10E0/1.2ML	TOTAL NO. MUTANTS X 10E0/1.0ML	MUTATION FRE (D/B) X 10E-8
1	71.00	11.83	36.00	29.99	2.53
2	122.00	20.33	13.00	10.83	.53
3	234.00	39.00	84.00	69.97	1.79
4	170.00	28.33	24.00	19.99	.71
5	39.00	6.50	39.00	32.49	5.00
6	19.20	3.20	13.00	10.83	3.38
7	21.60	3.60	17.00	14.16	3.93
8	30.80	5.13	60.00	49.98	9.74 *

NO. OF ANIMALS EQUALS 8  
SAMPLES WITH ZERO MUTANTS EQUAL 2

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	14.74	29.78	3.45
RANGE	35.80	59.14	9.20
MAX	39.00	69.97	9.74
MIN	3.20	10.83	.53

\* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. D (X 10E0)	COL. E (X 10E-8)
MEAN	16.11	26.89	2.55
RANGE	35.80	59.14	4.47
MAX	39.00	69.97	5.00
MIN	3.20	10.83	.53

DATA CARDS ENCOUNTERED BY SYSTEM - IGNORED

CSCX CSC85F 21 NOV 72 19:18:18 USER CFU007 100

CARDS IN 240 OUT 0 LINES 77 PROCESSING TIME 5.94 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: NEGATIVE CONTROL - WATER

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 24, 1971

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	58.00	.06	1.00	17.24
2	630.00	.63	1.00	1.59
3	36.00	.04	.00	.00
4	18.00	.02	.00	.00
5	14.00	.01	.00	.00
6	69.00	.07	.00	.00
7	190.00	.19	1.00	5.26
8	45.00	.04	1.00	22.22
9	78.00	.08	1.00	12.82
10	63.00	.06	2.00	31.75

TOTAL

1.20

7.00

NO. OF ANIMALS EQUALS 10

MEAN C/MEAN B = 5.83

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.12	.70	9.09
RANGE	.62	2.00	31.75
MAX	.63	2.00	31.75
MIN	.01	.00	.00

NO OUTLIERS

CSCX CSC85F 21 NOV 72 19:35:33 USER CFU007 200

ARDS IN 236 OUT 0 LINES 70 PROCESSING TIME 6.0 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: POSITIVE CONTROL - EMS - 350 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 24, 1971

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	12.00	.01	1.00	83.33
2	23.00	.02	2.00	86.96
3	31.00	.03	2.00	64.52
4	42.00	.04	2.00	47.62
5	87.00	.09	3.00	34.48
6	90.00	.09	1.00	11.11
7	170.00	.17	12.00	70.59
8	740.00	.74	14.00	18.92
9	130.00	.13	5.00	38.46
10	480.00	.48	15.00	31.25
TOTAL		1.80	57.00	

NO. OF ANIMALS EQUALS 10

MEAN C/MEAN B = 31.58

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.18	5.70	48.72
RANGE	.73	14.00	75.85
MAX	.74	15.00	86.96
MIN	.01	1.00	11.11

NO OUTLIERS

CSCX CSC85F 21 NOV 72 19:35:44 USER CFU007 200

CARDS IN 236 OUT 0 LINES 70 PROCESSING TIME 5.80 SECONDS



# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: LOW - 30 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 24, 1971

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	60.00	.06	4.00	66.67
2	630.00	.63	2.00	3.17
3	30.00	.03	.00	.00
4	360.00	.36	8.00	22.22
5	170.00	.17	9.00	52.94
6	100.00	.10	3.00	30.00
7	13.00	.01	1.00	76.92
8	610.00	.61	11.00	18.03
9	150.00	.15	10.00	66.67

TOTAL

2.12

48.00

NO. OF ANIMALS EQUALS 9

TOTAL SCREENED OUT OF RANGE EQUALS 1

MEAN C/MEAN B = 22.61

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.24	5.33	37.40
RANGE	.62	11.00	76.92
MAX	.63	11.00	76.92
MIN	.01	.00	.00

NO OUTLIERS

CSCX CSC85F 21 NOV 72 19:35:54 USER CFU007 200

CARDS IN 236 OUT 0 LINES 70 PROCESSING TIME 5.69 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: INTERMEDIATE - 2500 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 24, 1971

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	52.00	.05	1.00	19.23
2	750.00	.75	12.00	16.00
3	80.00	.08	2.00	25.00
4	160.00	.16	1.00	6.25
5	270.00	.27	2.00	7.41
6	280.00	.28	2.00	7.14
7	40.00	.04	.00	.00
8	200.00	.20	1.00	5.00
9	620.00	.62	8.00	12.90
10	120.00	.12	1.00	8.33
TOTAL		2.57	30.00	

NO. OF ANIMALS EQUALS 10

MEAN C/MEAN B = 11.66

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.26	3.00	10.73
RANGE	.71	12.00	25.00
MAX	.75	12.00	25.00
MIN	.04	.00	.00

NO OUTLIERS

CSCX CSC85F 21 NOV 72 19136: 3 USER CFU007 200

CARDS IN 236 OUT 0 LINES 70 PROCESSING TIME 5.79 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: DEC. 24, 1971

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	19.00	.02	1.00	52.63
2	70.00	.07	2.00	28.57
3	30.00	.03	2.00	66.67
4	240.00	.24	3.00	12.50
5	130.00	.13	4.00	30.77
6	27.00	.03	1.00	37.04
7	390.00	.39	2.00	5.13
TOTAL		.91	15.00	

NO. OF ANIMALS EQUALS 7

TOTAL SCREENED OUT OF RANGE EQUALS 3

MEAN C/MEAN B = 16.56

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.13	2.14	33.33
RANGE	.37	3.00	61.54
MAX	.39	4.00	66.67
MIN	.02	1.00	5.13

NO OUTLIERS

CSCX CSC85F 21 NOV 72 19:36:13 USER CFU007 200

CARDS IN 236 OUT 0 LINES 68 PROCESSING TIME 5.76 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: LOW - 30 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: DEC. 24, 1971

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	230.00	.23	2.00	8.70
2	280.00	.28	4.00	14.29 *
3	360.00	.36	2.00	5.56
4	490.00	.49	1.00	2.04
5	460.00	.46	1.00	2.17
6	150.00	.15	1.00	6.67
7	370.00	.37	.00	.00
8	830.00	.83	3.00	3.61
TOTAL		3.17	14.00	

NO. OF ANIMALS EQUALS 8

NO. OF DEAD ANIMALS EQUALS 2

MEAN C/MEAN B = 4.42

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.40	1.75	5.38
RANGE	.68	4.00	14.29
MAX	.83	4.00	14.29
MIN	.15	.00	.00

## \* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 3.46

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.41	1.43	4.11
RANGE	.68	3.00	8.70
MAX	.83	3.00	8.70
MIN	.15	.00	.00

# HOST-MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: INTERMEDIATE - 2500 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: DEC. 24, 1971

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	370.00	.37	2.00	5.41
2	530.00	.53	2.00	3.77
3	280.00	.28	3.00	10.71
4	130.00	.13	10.00	76.92 *
5	180.00	.18	8.00	44.44
6	160.00	.16	2.00	12.50
7	85.00	.08	.00	.00
8	170.00	.17	2.00	11.76
9	530.00	.53	2.00	3.77

TOTAL

2.43

31.00

NO. OF ANIMALS EQUALS 9

NO. OF DEAD ANIMALS EQUALS 1

MEAN C/MEAN B = 12.73

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.27	3.44	18.81
RANGE	.45	10.00	76.92
MAX	.53	10.00	76.92
MIN	.08	.00	.00

\* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 9.11

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.29	2.63	11.55
RANGE	.45	8.00	44.44
MAX	.53	8.00	44.44
MIN	.08	.00	.00

# HOST-MEDIATED ASSAY REPORT SHEET

## TEST I

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: DEC. 24, 1971

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	160.00	.16	6.00	37.50
2	200.00	.20	2.00	10.00
3	350.00	.35	12.00	34.29
4	630.00	.63	4.00	6.35
5	400.00	.40	5.00	12.50
6	330.00	.33	6.00	18.18
7	160.00	.16	3.00	18.75
8	5600.00	5.60	14.00	2.50
9	3900.00	3.90	12.00	3.08
TOTAL		11.73	64.00	

NO. OF ANIMALS EQUALS 9

NO. OF DEAD ANIMALS EQUALS 1

MEAN C/MEAN B = 5.46

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	1.30	7.11	15.90
RANGE	5.44	12.00	35.00
MAX	5.60	14.00	37.50
MIN	.16	2.00	2.50

NO OUTLIERS

CSCX CSC85F 21 NOV 72 19:37:41 USER CFU007 200

CARDS IN 234 OUT 0 LINES 70 PROCESSING TIME 5.94 SECONDS

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: NEGATIVE CONTROL - SALINE (ACUTE)

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 21, 1973

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/A) X 10E-8
1	97.40	16.23	8.00	.49
2	71.10	11.85	5.00	.42
3	91.80	15.30	5.00	.33
4	73.30	12.22	6.00	.49
5	66.10	11.02	6.00	.54
6	60.30	10.05	5.00	.80
7	42.20	7.03	6.00	.85
8	67.40	11.23	5.00	.45

NO. OF ANIMALS EQUALS 8  
TOTAL CFU OUT OF RANGE EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	11.87	6.13	.55
RANGE	9.20	3.00	.53
MAX	16.23	8.00	.85
MIN	7.03	5.00	.33

NO OUTLIERS

STOP

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: POSITIVE CONTROL - DMN - 100 MG/KG (ACUTE)

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 21, 1973

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/D) X 10E-8
1	32.40	5.40	67.00	12.41
2	35.50	5.92	94.00	15.89
3	43.60	7.27	107.00	14.72
4	55.10	9.18	85.00	9.26
5	60.00	10.00	105.00	10.00
6	52.40	8.73	124.00	14.26
7	58.10	9.68	112.00	11.57

NO. OF ANIMALS EQUALS 7

NO. OF CONTAMINATED EQUALS 1

TOTAL CFU OUT OF RANGE EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	8.85	99.57	12.60
RANGE	4.60	57.00	6.63
MAX	10.00	124.00	15.89
MIN	5.40	67.00	9.26

NO OUTLIERS

STOP



HOST MEDIATED ASSAY REPORT SHEET  
TEST II

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: LOW - 30 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 21, 1973

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/D) X 10E-8
1	67.00	11.17	6.00	.54
2	141.20	23.53	7.00	.30
3	243.00	40.50	9.00	.22
4	97.40	16.23	8.00	.40
5	94.00	15.67	9.00	.57
6	49.20	8.20	9.00	1.10
7	113.10	18.65	10.00	.53
8	66.10	11.02	11.00	1.00

NO. OF ANIMALS EQUALS 8  
NO. OF CONTAMINATED EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	18.15	8.63	.59
RANGE	32.38	9.00	.88
MAX	40.50	11.00	1.10
MIN	8.20	6.00	.22

NO OUTLIERS

STOP

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: INTERMEDIATE - 2500 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 21, 1973

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/D) X 10E-8
1	64.50	10.75	14.00	1.30
2	61.50	10.25	8.00	.78
3	73.10	12.18	8.00	.64
4	76.70	12.78	11.00	.86
5	57.00	9.50	14.00	1.47
6	60.50	10.05	20.00	1.90
7	75.90	12.65	19.00	1.50
8	86.40	14.40	16.00	1.11

NO. OF ANIMALS EQUALS 8

TOTAL CFU OUT OF RANGE EQUALS 2

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	11.57	13.75	1.21
RANGE	4.90	12.00	1.33
MAX	14.40	20.00	1.90
MIN	9.50	8.00	.66

## \* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	11.75	12.86	1.10
RANGE	4.90	11.00	.85
MAX	14.40	19.00	1.50
MIN	9.50	8.00	.66

STOP

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 21, 1973

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/A) X 10E-3
1	77.00	12.83	11.00	.86
2	37.20	6.20	5.00	.01
3	30.80	5.13	10.00	1.05
4	64.70	16.78	14.00	1.30
5	81.00	13.53	16.00	1.19
6	52.60	8.77	12.00	1.37
7	94.10	15.68	10.00	.64

NO. OF ANIMALS EQUALS 7

NO. OF CONTAMINATED EQUALS 2

TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-3)
MEAN	10.41	11.14	1.16
RANGE	10.55	11.00	1.31
MAX	15.68	16.00	1.05
MIN	5.13	5.00	.64

## \* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-3)
MEAN	11.29	11.33	1.03
RANGE	9.48	11.00	.73
MAX	15.68	16.00	1.37
MIN	6.20	5.00	.64

STOP

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: NEGATIVE CONTROL - SALINE (SUBACUTE)

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 23, 1973

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E6/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/D) X 10E-6
1	40.40	6.73	5.00	.72
2	65.00	10.83	6.00	.55
3	31.90	5.32	3.00	.56
4	47.70	7.95	6.00	.75
5	52.80	8.80	6.00	.68
6	59.40	9.90	7.00	.71
7	94.40	15.73	10.00	.64
8	41.10	6.65	4.00	.58

NO. OF ANIMALS EQUALS 8  
TOTAL CFU OUT OF RANGE EQUALS 2

	COL. B (X 10E6)	COL. C (X 10E0)	COL. D (X 10E-6)
MEAN	9.81	5.88	.67
RANGE	10.42	7.00	.20
MAX	15.73	10.00	.75
MIN	5.32	3.00	.55

NO OUTLIERS

STOP

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: POSITIVE CONTROL - DMN - 100 MG/KG (SUBACUTE)

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 23, 1973

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/D) X 10E-8
1	37.10	6.18	125.00	20.22
2	30.80	5.13	184.00	35.84
3	31.00	5.17	147.00	28.45
4	50.00	8.33	207.00	24.84
5	51.70	8.62	144.00	16.71
6	52.60	8.80	119.00	13.52
7	67.40	11.23	183.00	16.20
8	51.20	8.63	170.00	19.62
9	47.20	7.87	111.00	14.11

NO. OF ANIMALS EQUALS 9  
TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	7.77	154.44	21.67
RANGE	6.10	96.00	22.32
MAX	11.23	207.00	35.84
MIN	5.13	111.00	13.52

## \* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	8.10	153.75	19.23
RANGE	6.07	96.00	14.93
MAX	11.23	207.00	28.45
MIN	5.17	111.00	13.52

STOP

# HOST MEDIATED ASSAY REPORT SHEET TEST II

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: LOW - 50 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: FEBRUARY 23, 1973

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/D) X 10E-8
1	45.10	7.52	17.00	2.26
2	34.60	5.77	14.00	2.43
3	32.20	5.37	8.00	1.49
4	45.90	7.65	13.00	1.70
5	51.20	8.53	10.00	1.17
6	55.10	9.18	12.00	1.31
7	38.60	6.47	16.00	2.47

NO. OF ANIMALS EQUALS 7

TOTAL CFU OUT OF RANGE EQUALS 3

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	7.27	12.86	1.83
RANGE	3.02	9.00	1.30
MAX	9.18	17.00	2.47
MIN	5.37	8.00	1.17

NO OUTLIERS

STOP

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: INTERMEDIATE - 2500 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: FEBRUARY 23, 1975

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/D) X 10E-8
1	34.00	5.67	8.00	1.41
2	33.50	5.58	9.00	1.61
3	31.50	5.25	15.00	2.86
4	36.20	6.37	17.00	2.67
5	36.40	6.07	16.00	2.64
6	48.50	8.05	12.00	1.49
7	78.50	13.08	11.00	.88
8	74.20	12.37	13.00	1.05

NO. OF ANIMALS EQUALS 8

NO. OF CONTAMINATED EQUALS 1

TOTAL CFU OUT OF RANGE EQUALS 1

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	7.86	12.63	1.82
RANGE	7.85	9.00	2.02
MAX	13.08	17.00	2.86
MIN	5.25	8.00	.88

NO OUTLIERS

STOP

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SALMONELLA TA1538

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: FEBRUARY 23, 1973

ANIMAL NUMBER	A RAW CFU X 10E7/0.6ML	B TOTAL CFU X 10E8/1.0ML	C TOTAL NO. MUTANTS X 10E0/1.0ML	D MUTATION FRE (C/B) X 10E-8
1	49.60	8.27	15.00	1.81
2	70.90	11.82	15.00	1.27
3	49.90	8.32	10.00	1.20
4	58.90	9.82	28.00	2.85
5	31.90	5.32	7.00	1.32
6	97.40	16.23	9.00	.55
7	34.90	5.82	12.00	2.06

NO. OF ANIMALS EQUALS 7  
TOTAL CFU OUT OF RANGE EQUALS 3

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	9.37	13.71	1.58
RANGE	10.92	21.00	2.35
MAX	16.23	28.00	2.85
MIN	5.32	7.00	.55

### \* SUMMARY WITH OUTLIERS REMOVED

	COL. B (X 10E8)	COL. C (X 10E0)	COL. D (X 10E-8)
MEAN	9.29	11.33	1.37
RANGE	10.92	8.00	1.51
MAX	16.23	15.00	2.06
MIN	5.32	7.00	.55



# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: NEGATIVE CONTROL - SALINE (ACUTE)

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 5, 1973

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	585.00	.58	1.00	1.71
2	319.00	.32	1.00	3.13
3	1060.00	1.06	5.00	4.72
4	336.00	.34	3.00	8.93
5	317.00	.32	0.	0.
6	419.00	.42	1.00	2.39
7	450.00	.45	2.00	4.44
TOTAL		3.49	13.00	

NO. OF ANIMALS EQUALS 7  
TOTAL SCREENED OUT OF RANGE EQUALS 3

MEAN C/MEAN B = 3.73

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.50	1.86	3.62
RANGE	.74	5.00	8.93
MAX	1.06	5.00	8.93
MIN	.32	0.	0.

### \* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 3.17

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.52	1.67	2.73
RANGE	.74	5.00	4.72
MAX	1.06	5.00	4.72
MIN	.32	0.	0.

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: POSITIVE CONTROL - EMS - 350 MG/KG I.M. (ACUTE)

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 5, 1973

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	943.00	.94	40.00	42.42
2	611.00	.61	30.00	49.10
3	478.00	.48	28.00	58.58
4	387.00	.39	17.00	43.93
5	2653.00	2.65	41.00	15.45
6	1894.00	1.89	24.00	12.67
7	514.00	.51	28.00	54.47
8	653.00	.65	37.00	56.66
9	987.00	.99	33.00	33.43
TOTAL		9.12	278.00	

NO. OF ANIMALS EQUALS 9  
TOTAL SCREENED OUT OF RANGE EQUALS 1

MEAN C/MEAN B = 30.48

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	1.01	30.89	40.75
RANGE	2.27	24.00	45.91
MAX	2.65	41.00	58.58
MIN	.39	17.00	12.67

NO OUTLIERS

STOP

**HOST MEDIATED ASSAY REPORT SHEET**  
**TEST II**

**COMPOUND: FDA 71-1**

**ORGANISM: SACCHAROMYCES D-3**

**DOSE LEVEL: LOW - 30 MG/KG**

**TREATMENT: IN VIVO, ORAL, ACUTE**

**DATE STARTED: FEBRUARY 5, 1973**

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	804.00	.80	5.00	6.22
2	392.00	.39	6.00	15.31
3	370.00	.37	8.00	21.62
4	762.00	.76	9.00	11.81
5	1127.00	1.13	17.00	15.08
6	593.00	.59	4.00	6.75
7	390.00	.39	6.00	15.38
8	424.00	.42	6.00	14.15
<b>TOTAL</b>		<b>4.86</b>	<b>61.00</b>	

NO. OF ANIMALS EQUALS 8  
NO. OF CONTAMINATED EQUALS 2

MEAN C/MEAN B = 12.55

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.61	7.63	13.29
RANGE	.76	13.00	15.40
MAX	1.13	17.00	21.62
MIN	.37	4.00	6.22

**\* SUMMARY WITH OUTLIERS REMOVED**

MEAN C/MEAN B = 11.80

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.64	7.57	12.10
RANGE	.74	13.00	9.17
MAX	1.13	17.00	15.38
MIN	.39	4.00	6.22

TOP  
F10021 E ILLG I-FORMAT INPUT  
F0777 INS

# HOST MEDIATED ASSAY REPORT SHEET

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: INTERMEDIATE - 2500 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 5, 1973

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	417.00	.42	7.00	16.79
2	364.00	.36	8.00	21.98
3	433.00	.43	6.00	13.86
4	544.00	.54	4.00	7.35
5	928.00	.93	3.00	3.23
6	1067.00	1.07	9.00	8.43
7	710.00	.71	11.00	15.49
8	517.00	.52	11.00	21.28
TOTAL		4.98	59.00	

NO. OF ANIMALS EQUALS 8  
TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = 11.85

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.62	7.38	13.55
RANGE	.70	8.00	18.75
MAX	1.07	11.00	21.98
MIN	.36	3.00	3.23

NO OUTLIERS

STOP  
SRU'S: .7

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: FEBRUARY 5, 1973

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	367.00	.37	4.00	10.90
2	493.00	.49	8.00	16.23
3	1473.00	1.47	7.00	4.75
4	384.00	.38	2.00	5.21
5	705.00	.70	3.00	4.26
6	1272.00	1.27	8.00	6.29
7	480.00	.48	9.00	18.75
8	1196.00	1.20	14.00	11.71

TOTAL

6.37

55.00

NO. OF ANIMALS EQUALS 8

NO. OF CONTAMINATED EQUALS 1

TOTAL SCREENED OUT OF RANGE EQUALS 1

MEAN C/MEAN B = 8.63

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.80	6.88	9.76
RANGE	1.11	12.00	14.49
MAX	1.47	14.00	18.75
MIN	.37	2.00	4.26

NO OUTLIERS

STOP

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: NEGATIVE CONTROL - SALINE - (SUBACUTE)

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: MARCH 2, 1973

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	608.00	.61	3.00	4.93
2	785.00	.78	5.00	6.37
3	411.00	.41	3.00	7.30
4	513.00	.51	2.00	3.90
5	981.00	.98	4.00	4.08
6	670.00	.67	3.00	4.48
7	832.00	.83	9.00	10.82
8	785.00	.78	6.00	7.64
TOTAL		5.58	35.00	

NO. OF ANIMALS EQUALS 8  
TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = 6.27

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.70	4.38	6.19
RANGE	.57	7.00	6.92
MAX	.98	9.00	10.82
MIN	.41	2.00	3.90

## \* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 5.47

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.68	3.71	5.53
RANGE	.57	4.00	3.74
MAX	.98	6.00	7.64
MIN	.41	2.00	3.90

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: POSITIVE CONTROL - EMS - 350 MG/KG I.M. (SUBACUTE)

TREATMENT: IN VIVO, ORAL, ACUTE

DATE STARTED: MARCH 2, 1973

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	706.00	.71	36.00	50.99
2	524.00	.52	44.00	83.97
3	956.00	.96	37.00	38.70
4	657.00	.66	38.00	57.84
5	543.00	.54	37.00	68.14
6	1080.00	1.08	50.00	46.30
7	1154.00	1.15	61.00	52.86
8	471.00	.47	28.00	59.45
TOTAL		6.09	331.00	

NO. OF ANIMALS EQUALS 8  
TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = 54.34

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.76	41.38	57.28
RANGE	.68	33.00	45.27
MAX	1.15	61.00	83.97
MIN	.47	28.00	38.70

## \* SUMMARY WITH OUTLIERS REMOVED

MEAN C/MEAN B = 51.55

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.80	41.00	53.47
RANGE	.68	33.00	29.44
MAX	1.15	61.00	68.14
MIN	.47	28.00	38.70

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: LOW - 30 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: MARCH 2, 1973

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	954.00	.95	6.00	6.29
2	643.00	.64	5.00	7.78
3	872.00	.87	8.00	9.17
4	771.00	.77	7.00	9.08
5	821.00	.82	7.00	8.53
6	973.00	.97	3.00	3.08
7	379.00	.38	2.00	5.28

TOTAL

5.41

38.00

NO. OF ANIMALS EQUALS 7

TOTAL SCREENED OUT OF RANGE EQUALS 3

MEAN C/MEAN B = 7.02

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.77	5.43	7.03
RANGE	.59	6.00	6.09
MAX	.97	8.00	9.17
MIN	.38	2.00	3.08

NO OUTLIERS



# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: INTERMEDIATE - 2500 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: MARCH 2, 1973

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	911.00	.91	4.00	4.39
2	422.00	.42	8.00	18.96
3	556.00	.56	11.00	19.78
4	974.00	.97	7.00	7.19
5	422.00	.42	3.00	7.11
6	388.00	.39	3.00	7.73
7	973.00	.97	6.00	6.17

TOTAL 4.65 42.00

NO. OF ANIMALS EQUALS 7  
TOTAL SCREENED OUT OF RANGE EQUALS 3

MEAN C/MEAN B = 9.04

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.66	6.00	10.19
RANGE	.59	8.00	15.39
MAX	.97	11.00	19.78
MIN	.39	3.00	4.39

NO OUTLIERS

# HOST MEDIATED ASSAY REPORT SHEET

## TEST II

COMPOUND: FDA 71-1

ORGANISM: SACCHAROMYCES D-3

DOSE LEVEL: HIGH - 5000 MG/KG

TREATMENT: IN VIVO, ORAL, SUBACUTE

DATE STARTED: MARCH 2, 1973

ANIMAL NUMBER	A RAW CFU X 10E5/1.0ML	B TOTAL CFU SCREENED X 10E5/1.0ML	C TOTAL RECOMBINANTS /1.0ML	D RECOMB/CFU SCREENED X 10E-5
1	545.00	.54	9.00	16.51
2	325.00	.33	7.00	21.54
3	961.00	.96	2.00	2.08
4	894.00	.89	6.00	6.71
5	428.00	.43	3.00	7.01
6	718.00	.72	5.00	6.96
7	411.00	.41	3.00	7.30
8	1396.00	1.40	5.00	3.58

TOTAL

5.68

40.00

NO. OF ANIMALS EQUALS 8

TOTAL SCREENED OUT OF RANGE EQUALS 2

MEAN C/MEAN B = 7.04

	COL. B (X 10E5)	COL. C (X 10E0)	COL. D (X 10E-5)
MEAN	.71	5.00	8.96
RANGE	1.07	7.00	19.46
MAX	1.40	9.00	21.54
MIN	.33	2.00	2.08

NO OUTLIERS

#### 4. Cytogenetics

##### a. In vivo

##### (1) Acute study

The negative control group of animals were within normal limits for breaks. The positive control exhibited the expected severe damage due to the positive control compound, TEM. The intermediate and low levels contained breaks within normal values. The high level 48 hours group was above the normal historical controls but was not considered to be significant. Both the 48 hours intermediate and high level groups contained one reunion each. Although this finding is significant it has been observed infrequently in negative control groups. The mitotic indices compare favorably with the negative control group.

##### (2) Subacute study

All groups within this study were essentially negative. The mitotic indices were within normal limits.

##### b. In vitro

The negative and the positive control groups were within normal limits. The low level contained 2% cells with centric fragments and the high level contained 1% cells with budges. The intermediate dosage group was negative.



c. CYTOGENETICS SUMMARY SHEETS

CONTRACT FDA 71-268

COMPOUND FDA 71-1

AMMONIATED GLYCERRHIZIN



**BIONETICS**

FDA 71-1  
ACUTE STUDY  
METAPHASE SUMMARY SHEET

<u>Compound</u>	<u>Dosage (mg/kg)</u>	<u>Time*</u>	<u>No. of Animals</u>	<u>No. of Cells</u>	<u>Mitotic Index %</u>	<u>% Cells with Breaks</u>	<u>% Cells with Reunions</u>	<u>% Cells other Aber.**</u>	<u>% Cells with Aber.</u>
Negative Control	Saline	6	3	150	6	0	0	0	0
	Saline	24	3	150	10	0	0	0	0
	Saline	48	3	150	12	4	0	0	4
Low Level	30	6	5	250	9	0	0	0	0
	30	24	5	250	9	3	0	0	3
	30	48	5	250	9	2	0	0	2
Intermediate	2500	6	5	250	8	4	0	0	4
	2500	24	5	250	10	2	0	0	2
	2500	48	5	250	11	4	1	0	5
High Level	5000	6	5	250	6	4	0	0	4
	5000	24	5	250	8	6	0	0	6
	5000	48	5	250	6	8	1	0	9
Positive Control (TEM)***	0.3	48	5	250	2	31	21	4 (a)	46

\*Time of sacrifice after injection (hours).

\*\*Cells that have polyploidy (P), pulverization (pp), or greater than 10 aberrations (a).

\*\*\*Acute dose only one time. Sample taken at 48 hours.

FDA 71-1  
SUBACUTE STUDY  
METAPHASE SUMMARY SHEET

<u>Compound</u>	<u>Dosage*</u> <u>(mg/kg)</u>	<u>No. of</u> <u>Animals</u>	<u>No. of</u> <u>Cells</u>	<u>Mitotic</u> <u>Index %</u>	<u>%</u> <u>Cells</u> <u>with</u> <u>Breaks</u>	<u>%</u> <u>Cells</u> <u>with</u> <u>Reunions</u>	<u>% Cells</u> <u>other</u> <u>Aber.**</u>	<u>%</u> <u>Cells</u> <u>with</u> <u>Aber.</u>
Negative Control	Saline	3	150	10	0	0	0	0
Low	30	5	250	12	0	0	0	0
Medium	2500	5	250	8	0	0	0	0
High	5000	5	250	6	1	0	0	1

\*Dosage 1x/day x 5 days

\*\*Cells that have polyploidy (P), pulverization (pp), or greater than 10 aberrations (a).

FDA 71-1  
ANAPHASE SUMMARY SHEET

<u>Compound</u>	<u>Dosage** (mcg/ml)</u>	<u>Mitotic Index</u>	<u>No. of Cells</u>	<u>% Cells with Acentric Frag.</u>	<u>% Cells with Bridges</u>	<u>% Multipolar Cells</u>	<u>% Cells Other Aber.*</u>	<u>% Cells with Aber.</u>
Low Level	10	3	100	2	0	0	0	2
Medium Level	100	3	100	0	0	0	0	0
High Level	1000	2	100	0	1	0	0	1
Negative Control	Saline	3	100	0	0	0	0	0
Positive Control (TEM)	0.1	3	100	11	12	2	2 (pp)	23

\*Cells that have polyploidy (P), pulverization (pp), or greater than 10 aberrations (a).

\*\* Cells harvested 48 hours after addition of compound.

5. Dominant Lethal Study

a. Acute study

In general, significant differences between the negative control and experimental groups were noted in a few instances at various weeks throughout the parameters. However, no strong indications were seen.

b. Subacute study

The overall results are similar to those found in the acute study with the exception of preimplantation losses. Significant increases were shown in this parameter in the low and intermediate dosage groups at several weeks.



c. DOMINANT LETHAL ASSAY

SUMMARY TABLES

CONTRACT FDA 71-268

COMPOUND FDA 71-1

AMMONIATED GLYCERRHIZIN



**BIONETICS**

TABLE I  
COMPOUND 1 STUDY ACUTE

FERTILITY INDEX

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG	POSITIVE CONTROL
		1	36/ 40=0.90	7/20=0.35 **	6/20=0.30 **	7/20=0.35 **	8/20=0.40 **	7/20=0.35 **
!!	!!	2	36/ 40=0.90	11/20=0.55 **	13/20=0.65 *	14/20=0.70	6/20=0.30 **	9/20=0.45 **
!!	!	3	36/ 40=0.90	17/20=0.85	14/20=0.70	15/20=0.75	11/20=0.55* **	13/20=0.65 *
!!	!	4	37/ 40=0.93	18/20=0.90	15/20=0.75	14/20=0.70 *	13/20=0.65 **	13/20=0.65 **
		5	36/ 40=0.90	16/20=0.80	16/20=0.80	16/20=0.80	15/20=0.75	17/20=0.85
!	!	6	36/ 40=0.90	15/20=0.75	15/20=0.75	13/20=0.65 *	15/20=0.75	17/20=0.85
!	!	7	37/ 40=0.93	15/20=0.75	14/20=0.70 *	14/19=0.74 *	14/20=0.70 *	14/20=0.70 *
		8	36/ 40=0.90	16/20=0.80	15/20=0.75	14/16=0.88	13/20=0.65 *	16/20=0.80

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE II  
COMPOUND 1 STUDY ACUTE

AVERAGE NUMBER OF IMPLANTATIONS PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG	POSITIVE CONTROL
		1	431/ 36=12.0	86/ 7=12.3	67/ 6=11.2	86/ 7=12.3	84/ 8=10.5	86/ 7=12.3
1		2	433/ 36=12.0	114/11=10.4	152/13=11.7	171/14=12.2	72/ 6=12.0	88/ 9= 9.8 * $\phi$ D
		3	433/ 36=12.0	191/17=11.2	176/14=12.6	165/15=11.0	138/11=12.6	159/13=12.2
		4	423/ 37=11.4	219/18=12.2	182/15=12.1	178/14=12.7 $\phi$ I	142/13=10.9	139/13=10.7
8 1		5	434/ 36=12.1	185/16=11.6	176/16=11.0	179/16=11.2	198/15=13.2 $\phi$ I $\phi$ I	212/17=12.5
8 11 8 11		6	409/ 36=11.4	199/15=13.3 ** $\phi$ $\phi$ I	187/15=12.5	157/13=12.1	207/15=13.8 ** $\phi$ $\phi$ I	222/17=13.1 ** $\phi$
		7	454/ 37=12.3	180/15=12.0	170/14=12.1	177/14=12.6	172/14=12.3	177/14=12.6
8 1		8	405/ 36=11.3	200/16=12.5 * $\phi$ I	197/15=13.1 $\phi$ I	190/14=13.6 ** $\phi$ $\phi$ I	156/13=12.0	179/16=11.2

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

8 AND \* = TWO-TAILED TEST

1 AND  $\phi$  = ONE-TAILED TEST

ONE 1,8, $\phi$ ,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO 1,8, $\phi$ ,\* = SIGNIFICANT AT P LESS THAN 0.01

\* $\phi$  SIGNIFICANTLY DIFFERENT FROM CONTROL

8,1 SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE III  
COMPOUND 1 STUDY ACUTE

AVERAGE CORPORA LUTEA PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG	POSITIVE CONTROL
		1	454/ 36=12.6	92/ 7=13.1	78/ 6=13.0	90/ 7=12.9	108/ 8=13.5	93/ 7=13.3
		2	461/ 36=12.8	132/11=12.0	162/13=12.5	176/14=12.6	76/ 6=12.7	99/ 9=11.0 * $\partial\partial$
$\& \text{ ! ! } \& \text{ !}$		3	451/ 36=12.5	222/17=13.1	199/14=14.2 * $\partial \text{ I}$	201/15=13.4	160/11=14.6 * $\partial \text{ I}$	176/13=13.5
$\& \text{ ! !}$		4	436/ 37=11.8	253/18=14.1 ** $\partial\partial \text{ I}$	232/15=15.5 ** $\partial\partial \text{ I}$	191/14=13.6 * $\partial\partial \text{ I}$	176/13=13.5 $\partial \text{ I}$	159/13=12.2* $\partial\partial$
$\& \text{ ! ! } \& \text{ ! ! !}$		5	445/ 36=12.4	221/16=13.8 $\partial \text{ I}$	197/16=12.3 $\partial\partial$	214/16=13.4	215/15=14.3 * $\partial\partial \text{ I}$	237/17=13.9 * $\partial\partial$
$\& \text{ ! ! } \& \text{ ! ! !}$		6	427/ 36=11.9	220/15=14.7 ** $\partial\partial \text{ I}$	212/15=14.1 ** $\partial\partial \text{ I}$	182/13=14.0 * $\partial \text{ I}$	233/15=15.5 ** $\partial\partial \text{ I}$	255/17=15.0 ** $\partial$
		7	466/ 37=12.6	198/15=13.2	186/14=13.3	182/14=13.0	189/14=13.5	187/14=13.4 * $\partial \text{ I}$
$\& \text{ ! ! ! } \& \text{ ! !}$		8	427/ 36=11.9	233/16=14.6 ** $\partial\partial \text{ I}$	222/15=14.8 ** $\partial\partial \text{ I}$	211/14=15.1 ** $\partial\partial \text{ I}$	187/13=14.4 ** $\partial\partial \text{ I}$	204/16=12.8* $\partial\partial$

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

$\&$  AND \* = TWO-TAILED TEST  
! AND  $\partial$  = ONE-TAILED TEST

ONE !,  $\&$ ,  $\partial$ , \* = SIGNIFICANT AT P LESS THAN 0.05  
TWO !,  $\&$ ,  $\partial$ , \* = SIGNIFICANT AT P LESS THAN 0.01

\* $\partial$  SIGNIFICANTLY DIFFERENT FROM CONTROL  
 $\&$ , ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE IV  
COMPOUND 1 STUDY ACUTE

AVERAGE PREIMPLANTATION LOSSES PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG	POSITIVE CONTROL
8	1	1	23/ 36= 0.6	6/ 7= 0.9	11/ 6= 1.8 *@I	4/ 7= 0.6	24/ 8= 3.0 @I	7/ 7= 1.0
	1	2	28/ 36= 0.8	18/11= 1.6	10/13= 0.8	5/14= 0.4@D	4/ 6= 0.7	11/ 9= 1.2
8811	8	3	18/ 36= 0.5	31/17= 1.8 **@@I	23/14= 1.6 **@@I	36/15= 2.4 *@I	22/11= 2.0 *@@I	17/13= 1.3 *@I
8811	8	4	13/ 37= 0.4	34/18= 1.9 **@@I	50/15= 3.3 **@@I	13/14= 0.9 *@I	34/13= 2.6 **@@I	20/13= 1.5 **@
8811	8	5	11/ 36= 0.3	36/16= 2.3 **@@I	21/16= 1.3 **@@I	35/16= 2.2 **@@I	17/15= 1.1@D *@@I	25/17= 1.5 **@
8811		6	18/ 36= 0.5	21/15= 1.4 @I	25/15= 1.7 **@@I	25/13= 1.9 @I	26/15= 1.7 *@I	33/17= 1.9 **@
	1	7	12/ 37= 0.3	18/15= 1.2 *@I	16/14= 1.1	5/14= 0.4@D	17/14= 1.2 *@I	10/14= 0.7 @I
8811	8811	8	22/ 36= 0.6	33/16= 2.1 **@@I	25/15= 1.7	21/14= 1.5 *@I	31/13= 2.4 **@@I	25/16= 1.6 @I

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

8 AND \* = TWO-TAILED TEST

1 AND @ = ONE-TAILED TEST

ONE 1,8,@,\* = SIGNIFICANT AT P LESS THAN 0.05

8 TWO 1,8,@,\* = SIGNIFICANT AT P LESS THAN 0.01

\*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL

8,1 SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE V  
COMPOUND 1 STUDY ACUTE

AVERAGE RESORPTIONS (DEAD IMPLANTS) PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG	POSITIVE CONTROL
		1	9/ 36=0.25	0/ 7=0.0 ***@D	7/ 6=1.17	2/ 7=0.29	3/ 8=0.38	16/ 7=2.29***@I ***@I
		2	11/ 36=0.31	9/11=0.82	7/13=0.54	5/14=0.36	1/ 6=0.17	46/ 9=5.12***@I ***@I
		3	15/ 36=0.42	10/17=0.59	5/14=0.36	9/15=0.60	1/11=0.10@D @D	56/13=4.31***@I ***@I
		4	20/ 37=0.55	7/18=0.39	6/15=0.40	4/14=0.29	6/13=0.47	**/13=8.62***@I ***@I
		5	21/ 36=0.59	7/16=0.44	4/16=0.25	19/16=1.19@I	6/15=0.40	58/17=3.42***@I ***@I
		6	16/ 36=0.45	11/15=0.74	14/15=0.94	7/13=0.54	15/15=1.00 @I	15/17=0.89 @I
		7	26/ 37=0.71	6/15=0.40	14/14=1.00***@I *@I	4/14=0.29 @D	15/14=1.08@I	12/14=0.86
6611	1	8	13/ 36=0.37	17/16=1.07 ***@I	16/15=1.07 @I	11/14=0.79 *@I	11/13=0.85 *@I	12/16=0.75 @I

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

& AND \* = TWO-TAILED TEST

! AND @ = ONE-TAILED TEST

ONE !, &, @, \* = SIGNIFICANT AT P LESS THAN 0.05

TWO !, &, @, \* = SIGNIFICANT AT P LESS THAN 0.01

\*. @ SIGNIFICANTLY DIFFERENT FROM CONTROL

&. ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VI  
COMPOUND 1 STUDY ACUTE

PROPORTION OF FEMALES WITH ONE OR MORE DEAD IMPLANTATIONS

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG	POSITIVE CONTROL
		1	9/ 36=0.25	0/ 7=0.0	2/ 6=0.34	2/ 7=0.29	2/ 8=0.25	6/ 7=0.86**
		2	9/ 36=0.25	5/11=0.46	6/13=0.47	5/14=0.36	1/ 6=0.17	9/ 9=1.00**
		3	10/ 36=0.28	6/17=0.36	3/14=0.22	8/15=0.54	1/11=0.10	12/13=0.93**
		4	15/ 37=0.41	6/18=0.34	4/15=0.27	4/14=0.29	6/13=0.47	13/13=1.00**
		5	14/ 36=0.39	4/16=0.25	4/16=0.25	10/16=0.63*	4/15=0.27	16/17=0.95**
		6	13/ 36=0.37	8/15=0.54	4/15=0.27	6/13=0.47	9/15=0.60	11/17=0.65
		7	17/ 37=0.46	5/15=0.34	12/14=0.86**	3/14=0.22	8/14=0.58	7/14=0.50
11	11	8	9/ 36=0.25	11/16=0.69	8/15=0.54	9/14=0.65	9/13=0.70	9/16=0.57
11	11			**		**	**	*

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VII  
COMPOUND 1 STUDY ACUTE

PROPORTION OF FEMALES WITH TWO OR MORE DEAD IMPLANTATIONS

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG	POSITIVE CONTROL
		1	0/ 36=0.0	0/ 7=0.0	1/ 6=0.17 *	0/ 7=0.0	1/ 8=0.13 *	4/ 7=0.58* **
		2	2/ 36=0.06	4/11=0.37 **	1/13=0.08	0/14=0.0 *	0/ 6=0.0	9/ 9=1.00** **
		3	4/ 36=0.12	3/17=0.18	1/14=0.08	1/15=0.07	0/11=0.0	10/13=0.77** **
		4	5/ 37=0.14	1/18=0.06	2/15=0.14	0/14=0.0	0/13=0.0	13/13=1.00** **
		5	6/ 36=0.17	2/16=0.13	0/16=0.0	3/16=0.19	2/15=0.14	11/17=0.65** **
		6	3/ 36=0.09	3/15=0.20	4/15=0.27	1/13=0.08	4/15=0.27	3/17=0.18
		7	5/ 37=0.14	1/15=0.07	1/14=0.08	1/14=0.08	5/14=0.36	4/14=0.29
		8	3/ 36=0.09	5/16=0.32 *	4/15=0.27	1/14=0.08	2/13=0.16	2/16=0.13

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)



TABLE VIII  
COMPOUND 1 STUDY ACUTE

DEAD IMPLANTS / TOTAL IMPLANTS

WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG	POSITIVE CONTROL
1	9/ 431=0.03	0/ 86=0.0	7/ 67=0.11	2/ 86=0.03	3/ 84=0.04	16/ 86=0.19
2	11/ 433=0.03	9/114=0.08	7/152=0.05	5/171=0.03	1/ 72=0.02	46/ 88=0.53
3	15/ 433=0.04	10/191=0.06	5/176=0.03	9/165=0.06	1/138=0.01	56/159=0.36
4	20/ 423=0.05	7/219=0.04	6/182=0.04	4/178=0.03	6/142=0.05	**/139=0.81
5	21/ 434=0.05	7/185=0.04	4/176=0.03	19/179=0.11	6/198=0.04	58/212=0.28
6	16/ 409=0.04	11/199=0.06	14/187=0.08	7/157=0.05	15/207=0.08	15/222=0.07
7	26/ 454=0.06	6/180=0.04	14/170=0.09	4/177=0.03	15/172=0.09	12/177=0.07
8	13/ 405=0.04	17/200=0.09	16/197=0.09	11/190=0.06	11/156=0.08	12/179=0.07

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT DIFFERENCES USING  
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT DIFFERENCES USING  
THE HISTORICAL CONTROL GROUP

\* = TWO-TAILED TEST

@ = ONE-TAILED TEST

ONE \*,@ = SIGNIFICANT AT P LESS THAN 0.05

TWO \*,@ = SIGNIFICANT AT P LESS THAN 0.01

\*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL

TABLE I  
COMPOUND 1 STUDY SUBACUTE

FERTILITY INDEX

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG
11 11	!	1	35/ 40=0.88	9/20=0.45 **	15/20=0.75	12/20=0.60 *	12/20=0.60 *
11 11	11	2	36/ 40=0.90	8/20=0.40 **	13/20=0.65 *	11/19=0.58 **	10/20=0.50 **
		3	35/ 40=0.88	13/20=0.65 *	19/20=0.95*	15/20=0.75	16/20=0.80
1 1	11 11	4	36/ 40=0.90	12/20=0.60 **	16/20=0.80	15/20=0.75	12/20=0.60 **
1 1	!	5	37/ 40=0.93	11/20=0.55 **	18/20=0.90*	16/20=0.80	14/20=0.70 *
	11 11	6	35/ 40=0.88	15/20=0.75	19/20=0.95	18/20=0.90	11/20=0.55 **
		7	36/ 38=0.95	13/20=0.65 **	15/20=0.75 *	18/20=0.90	11/20=0.55 **

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE II  
COMPOUND 1 STUDY SUBACUTE

AVERAGE NUMBER OF IMPLANTATIONS PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG
		1	382/ 35=10.9	110/ 9=12.2 @I	175/15=11.7	137/12=11.4	137/12=11.4
6 11 6 11 !		2	432/ 36=12.0	108/ 8=13.5 @I	162/13=12.5	131/11=11.9	104/10=10.4*@@D
		3	416/ 35=11.9	164/13=12.6	233/19=12.3	188/15=12.5	195/16=12.2
		4	407/ 36=11.3	154/12=12.8 **@@I	189/16=11.8	207/15=13.8 **@@I	135/12=11.3
6 1 6 1		5	445/ 37=12.0	134/11=12.2	222/18=12.3	209/16=13.1 *@I	188/14=13.4
		6	420/ 35=12.0	190/15=12.7	246/19=13.0	218/18=12.1	135/11=12.3
		7	389/ 36=10.8	156/13=12.0 @I	184/15=12.3 @I	218/18=12.1	125/11=11.4

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

6 AND \* = TWO-TAILED TEST  
! AND @ = ONE-TAILED TEST

ONE !, @, @, \* = SIGNIFICANT AT P LESS THAN 0.05  
TWO !, @, @, \* = SIGNIFICANT AT P LESS THAN 0.01

\*. @ SIGNIFICANTLY DIFFERENT FROM CONTROL  
6, ! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE III  
COMPOUND 1 STUDY SUBACUTE

AVERAGE CORPORA LUTEA PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG
		1	409/ 35=11.7	114/ 9=12.7	182/15=12.1	155/12=12.9 @I	149/12=12.4
		2	453/ 36=12.6	113/ 8=14.1	186/13=14.3 *@I	163/11=14.8 @I	125/10=12.5
!		3	437/ 35=12.5	175/13=13.5	280/19=14.7 **@@I	205/15=13.7 @I	222/16=13.9 @I
! 8811	!	4	422/ 36=11.7	172/12=14.3 **@@I	224/16=14.0 **@@I	223/15=14.9 **@@I	147/12=12.3*@D
! 8811 8811		5	455/ 37=12.3	150/11=13.6 @I	280/18=15.6@I **@@I	244/16=15.3 **@@I	221/14=15.8*@I **@@I
		6	435/ 35=12.4	206/15=13.7 *@I	270/19=14.2 **@@I	233/18=12.9	153/11=13.9
8 11		7	416/ 36=11.6	167/13=12.9 @I	210/15=14.0 **@@I	244/18=13.6 **@@I	140/11=12.7

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

8 AND \* = TWO-TAILED TEST  
! AND @ = ONE-TAILED TEST

ONE !,8,@,\* = SIGNIFICANT AT P LESS THAN 0.05  
TWO !,8,@,\* = SIGNIFICANT AT P LESS THAN 0.01

\*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL  
8,! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE IV  
COMPOUND 1 STUDY SUBACUTE

AVERAGE PREIMPLANTATION LOSSES PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG
8 1	1	1	27/ 35= 0.8	4/ 9= 0.4	7/15= 0.5	18/12= 1.5@I	12/12= 1.0
8 8 1 1 8 1		2	21/ 36= 0.6	5/ 8= 0.6	24/13= 1.9@I *@I	32/11= 2.9*@@I **@I	21/10= 2.1
1		3	21/ 35= 0.6	11/13= 0.9	47/19= 2.5**@@I **@I	17/15= 1.1	27/16= 1.7 @I
8 8 1 1	1	4	15/ 36= 0.4	18/12= 1.5 *@I	35/16= 2.2 **@I	16/15= 1.1 **@I	12/12= 1.0 *@I
8 8 1 1 8 8 1 1		5	10/ 37= 0.3	16/11= 1.5 **@I	58/18= 3.2@I **@I	35/16= 2.2 **@I	33/14= 2.4 **@@I
8 1 1 8 1		6	15/ 35= 0.4	16/15= 1.1	24/19= 1.3 *@I	15/18= 0.8	18/11= 1.6 *@@I
8 1 1		7	27/ 36= 0.8	11/13= 0.9	26/15= 1.7 *@I	26/18= 1.4 **@@I	15/11= 1.4

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

8 AND \* = TWO-TAILED TEST  
1 AND @ = ONE-TAILED TEST

ONE 1,8,@,\* = SIGNIFICANT AT P LESS THAN 0.05  
TWO 1,8,@,\* = SIGNIFICANT AT P LESS THAN 0.01

\*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL  
8,1 SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE V  
COMPOUND 1 STUDY SUBACUTE

AVERAGE RESORPTIONS (DEAD IMPLANTS) PER PREGNANT FEMALE

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG
E 1	EE11	1	10/ 35=0.29	2/ 9=0.23	3/15=0.20	5/12=0.42	12/12=1.00* $\phi$ I * $\phi$ I
E 1	EE11	2	16/ 36=0.45	5/ 8=0.63	9/13=0.70	4/11=0.37	7/10=0.70
		3	23/ 35=0.66	8/13=0.62	19/19=1.00	6/15=0.40	10/16=0.63
		4	10/ 36=0.28	10/12=0.84	11/16=0.69 $\phi$ I	5/15=0.34	8/12=0.67
		5	24/ 37=0.65	10/11=0.91	23/18=1.28	14/16=0.88	4/14=0.29
		6	17/ 35=0.49	8/15=0.54	8/19=0.43	4/18=0.23	7/11=0.64
		7	31/ 36=0.87	5/13=0.39	19/15=1.27	16/18=0.89	8/11=0.73

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

E AND \* = TWO-TAILED TEST  
1 AND  $\phi$  = ONE-TAILED TEST

ONE !,E, $\phi$ ,\* = SIGNIFICANT AT P LESS THAN 0.05  
TWO !,E, $\phi$ ,\* = SIGNIFICANT AT P LESS THAN 0.01

\*, $\phi$  SIGNIFICANTLY DIFFERENT FROM CONTROL  
E,! SIGNIFICANT RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VI  
CONPOUND 1 STUDY SUBACUTE

PROPORTION OF FEMALES WITH ONE OR MORE DEAD IMPLANTATIONS

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG
1	1	1	10/ 35=0.29	2/ 9=0.23	2/15=0.14	4/12=0.34	7/12=0.59
		2	13/ 36=0.37	3/ 8=0.38	6/13=0.47	4/11=0.37	5/10=0.50
		3	15/ 35=0.43	5/13=0.39	9/19=0.48	4/15=0.27	8/16=0.50
		4	8/ 36=0.23	5/12=0.42	8/16=0.50*	4/15=0.27	6/12=0.50
		5	17/ 37=0.46	6/11=0.55	8/18=0.45	8/16=0.50	4/14=0.29
		6	12/ 35=0.35	7/15=0.47	8/19=0.43	4/18=0.23	4/11=0.37
		7	12/ 36=0.34	3/13=0.24	7/15=0.47	8/18=0.45	4/11=0.37

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)

TABLE VII  
COMPOUND 1 STUDY SUBACUTE

PROPORTION OF FEMALES WITH TWO OR MORE DEAD IMPLANTATIONS

LOG DOSE	ARITH DOSE	WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG
11 11	11 11	1	0/ 35=0.0	0/ 9=0.0	1/15=0.07	1/12=0.09	3/12=0.25 **
		2	2/ 36=0.06	1/ 8=0.13	2/13=0.16	0/11=0.0	2/10=0.20
		3	4/ 35=0.12	3/13=0.24	3/19=0.16	2/15=0.14	1/16=0.07
		4	2/ 36=0.06	4/12=0.34 *	3/16=0.19	1/15=0.07	1/12=0.09
		5	7/ 37=0.19	2/11=0.19	4/18=0.23	3/16=0.19	0/14=0.0
		6	3/ 35=0.09	1/15=0.07	0/19=0.0	0/18=0.0	2/11=0.19
		7	9/ 36=0.25	1/13=0.08	4/15=0.27	4/18=0.23	3/11=0.28

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT RELATIONSHIPS AND DIFFERENCES USING THE HISTORICAL CONTROL GROUP

ONE !,\* = SIGNIFICANT AT P LESS THAN 0.05

TWO !,\* = SIGNIFICANT AT P LESS THAN 0.01

\* SIGNIFICANTLY DIFFERENT FROM CONTROL

! SIGNIFICANT LINEAR RELATIONSHIP WITH ARITH OR LOG DOSE (HEADING OF COLUMN)



TABLE VIII  
COMPOUND 1 STUDY SUBACUTE

DEAD IMPLANTS / TOTAL IMPLANTS

WEEK	HISTORICAL CONTROL	NEGATIVE CONTROL	DOSE LEVEL 30.000 MG/KG	DOSE LEVEL 2500.000 MG/KG	DOSE LEVEL 5000.000 MG/KG
1	10/ 382=0.03	2/110=0.02	3/175=0.02	5/137=0.04	12/137=0.09
2	16/ 432=0.04	5/108=0.05	9/162=0.06	4/131=0.04	7/104=0.07
3	23/ 416=0.06	8/164=0.05	19/233=0.09	6/188=0.04	10/195=0.06
4	10/ 407=0.03	10/154=0.07	11/189=0.06	5/207=0.03	8/135=0.06
5	24/ 445=0.06	10/134=0.08	23/222=0.11	14/209=0.07	4/188=0.03
6	17/ 420=0.05	8/190=0.05	8/246=0.04	4/218=0.02	7/135=0.06
7	31/ 389=0.08	5/156=0.04	19/184=0.11	16/218=0.08	8/125=0.07

SYMBOLS ON FIRST LINE DENOTE SIGNIFICANT DIFFERENCES USING  
THE NEGATIVE CONTROL GROUP

SYMBOLS ON SECOND LINE DENOTE SIGNIFICANT DIFFERENCES USING  
THE HISTORICAL CONTROL GROUP

\* = TWO-TAILED TEST

@ = ONE-TAILED TEST

ONE \*,@ = SIGNIFICANT AT P LESS THAN 0.05

TWO \*,@ = SIGNIFICANT AT P LESS THAN 0.01

\*,@ SIGNIFICANTLY DIFFERENT FROM CONTROL

## APPENDICES

### II. MATERIALS AND METHODS

#### A. Animal Husbandry

##### 1. Animals (Rats and Mice)

Ten to twelve week old rats (280 to 350 g) and male mice (25 to 30 g) were fed a commercial 4% fat diet and water ad libitum until they were put on experiment. Flow Laboratories random-bred, closed colony, Sprague-Dawley CD strain rats were used in the cytogenetic studies. Flow Laboratories ICR male mice were employed in the Host-Mediated Assay.

##### 2. Preparation of Diet

A commercial 4% fat diet was fed to all animals. Periodic tests to verify the absence of coliforms, Salmonella and Pseudomonas sp. were performed.

##### 3. Husbandry

Animals were held in quarantine for 4-11 days. Mice were housed five to a cage and rats one to five to a cage. Animals were identified by ear punch. Sanitary cages and bedding were used, and changed two times per week, at which time water containers were cleaned, sanitized and filled. Once a week, cages were repositioned on racks; racks were repositioned within rooms monthly. Personnel handling animals or working within animal facilities wore head coverings and face masks, as well as suitable garments. Individuals with respiratory or other overt infections were excluded from the animal facilities.

#### B. Dosage Determination

##### 1. Acute LD<sub>50</sub> and LD<sub>5</sub> Determination

Since the compounds proposed for testing are included in



the food additive regulations as "generally recognized as safe" (GRAS), it was expected that a large number of them would be sufficiently non-toxic so that determination of a  $LD_{50}$  or a  $LD_5$  would be of no practical value. In fact, this has been our experience with previously tested compounds from this list. In the case of these relatively non-toxic compounds, attempts were made to assure that the amounts to be administered would not affect the animals by means (mechanical, physical, etc.) related to their bulk rather than to their toxicity. In the cases of certain compounds where a  $LD_{50}$  or a  $LD_5$  could not be determined, an exceedingly high concentration, 5 g/kg, was employed and accepted as the  $LD_5$  level. In cases where the toxicity was high enough to allow determination of a  $LD_5$ , the following protocol was used.

Thirty rats of the strain chosen for studies described below and of approximately the age and weight specified were assigned at random to six groups. Each group was then given, using the chosen route of administration, one of a series of dosages of the test compound following a logarithmic dosage scheme. The series of dosages were derived from a consideration of whatever toxicity information was available for the particular test compound. The objective in selecting dosages was to choose values which would cause mortalities between 10% and 90%.

When information was inadequate to derive a suitable series of dosages, five rats were used to identify the proper range. Each of these was given one of a widely spaced (differing by 10X) series of doses. This was confidently expected to suffice for derivation of the series of dosages to be used in the  $LD_{50}$  determination.



**BIONETICS**

The mortalities observed when the series of dosages were given to the 30 rats were then subjected to a probit analysis and calculation of  $LD_{50}$ ,  $LD_5$ , slope and confidence limits by the method of Litchfield and Wilcoxon. The highest dose level used was either a finite  $LD_5$  or 5000 mg/kg. The intermediate level used was either 1/10 of the finite  $LD_5$  or 2500 mg/kg. The low level used was either 1/100 of the finite  $LD_5$  or 30 mg/kg.

## 2. Subacute Studies

Subacute doses were identical to those used in the acute studies. Each subacute study animal was given the acute dosage once a day for each of five consecutive days (24 hours apart).

### C. Mutagenicity Testing Protocols

#### 1. Host-Mediated Assay

Flow Laboratories ICR random-bred male mice were used in this study. In the acute and subacute studies ten animals, 25-30 g each, were employed at each dose level. Solvent and positive controls were run at all times. The positive control (dimethyl nitrosamine) was run by the acute system only at a dose of 100 mg/kg for Salmonella. For yeast, ethyl methane sulfonate (EMS) intramuscularly injected at a dose of 350 mg/kg was used. The solvents used and the toxicity data are presented in the Results and Discussion Section of the report.

The indicator organisms used in this study were: (1) two histidine auxotrophs (his G-46, TA-1530) of Salmonella typhimurium, and (2) a diploid strain (D-3) of Saccharomyces cerevisiae. The induction of reverse mutation was determined with the Salmonella; mitotic recombination was determined with yeast. Chemicals were evaluated directly by in vitro bacterial and yeast studies prior to, or concurrent with, the studies in



**BIONETICS**

Litton

mice. Only animals on the subacute studies were not fed the evening prior to compound administration. The Salmonella were carried in tryptone yeast extract gel, transferred weekly. They were transferred to tryptone yeast extract broth 48 hours before use: they were transferred a second time from broth to broth 24 hours prior to use, and again 8 hours before use. The mouse inoculum was prepared by transferring 4 ml of the 8-hour broth culture to 50 ml broth bottles which had been prewarmed at 37°C. Exponential log-phase organisms were inoculated intraperitoneally into the mice approximately 2-1/2 hours later when the appropriate density indicating  $3.0 \times 10^8$  cells/ml was reached. The Saccharomyces was carried in yeast complete agar. The inoculum was prepared by harvesting the organisms from the surface of the plates with sterile saline. The cells were washed three times with sterile saline and suspended in a concentration of  $5.0 \times 10^8$  cells/ml. Two ml of the suspension was inoculated into each mouse intraperitoneally. Total plate counts on Salmonella were on tryptone yeast extract and for Saccharomyces on yeast complete medium.

a. Acute study

Three dosage levels (usage, intermediate [determined as discussed previously], and  $LD_5$ ) were administered orally by intubation to ten mice. Positive controls and negative vehicle controls were included in each study. All animals received 2 ml of the indicator organism intraperitoneally. Each ml contained  $3.0 \times 10^8$  cells for Salmonella and  $5.0 \times 10^8$  cells for Saccharomyces. Three hours later, each animal was killed and 2 ml of sterile saline was introduced intraperitoneally. As much fluid as possible was then aseptically removed from the peritoneal cavity. Dilution blanks for bacteria containing 4.5 ml of sterile saline were prepared in advance. Tenfold serial



dilutions were made of each peritoneal exudate (0.5 ml exudate + 4.5 ml saline) yielding a concentration series from  $10^0$  (undiluted peritoneal exudate) through  $10^{-7}$ . For enumeration of total bacterial counts, the  $10^{-6}$  and  $10^{-7}$  dilutions were plated on tryptone yeast extract agar, 3 plates/sample, 0.2 ml sample/plate. Each sample was spread over the surface of the plate using a bent glass rod immersed in 95% ethanol and flamed just prior to use. In plating for the total mutant counts on minimal agar, the  $10^0$  dilution was used, 0.2 ml being plated on each of 5 plates. The plating procedure was identical to that followed for the tryptone yeast extract agar plates. All plates were incubated at 37°C, tryptone yeast extract agar plates for 18 hours and minimal agar plates for 40 hours. For yeast mitotic recombination, dilution blanks containing 4.5 ml of sterile saline were prepared in advance. Tenfold serial dilutions were made of each sample yielding a series from  $10^0$  to  $10^{-5}$ . Samples of 0.1 ml of the  $10^{-5}$ ,  $10^{-4}$ , and  $10^{-3}$  dilutions were removed and plated on complete medium (10 plates each). All plates were incubated at 30°C for 40 hours. The  $10^{-5}$  dilutions were used to determine total populations and the  $10^{-4}$  and  $10^{-3}$  plates were examined after an additional 40 hours at 4°C for red sectors indicating a mutation. Bacterial scoring was calculated as follows:

Total mutants on 5 plates x appropriate exponent =  
CFU/ml (CFU is Colony Forming Units) of sample plated CFU/ml x one/dilution  
factor ( $10^0 - 10^{-7}$ ) = CFU/ml in undiluted exudate. The mutation frequency (MF)  
calculated for each sample was:

$$MF = \frac{\text{total mutant cells}}{\text{total population}}$$

$$MF_t/MF_c = \frac{\text{MF of experimental sample}}{\text{MF of control sample}}$$

( $MF_t/MF_c = 1.00$  for  
control sample)



**BIONETICS**

Yeast mitotic recombinants (presumptive ade 2, his 8 homozygotes) were seen as red colonies or as red sectors on a normally white yeast colony. The plates (from  $10^{-4}$  and  $10^{-3}$  dilutions) were scanned under the 10X lens of a dissecting scope to enumerate the red colonies and sectors. Population determinations were made from the  $10^{-5}$  dilution plates. A recombinant frequency (RF) was calculated:

$$RF = \frac{\text{total recombinants counted}}{\text{total number colonies screened}}$$

b. Subacute study

Similar groups of animals at each dose level received five oral doses of the test compound 24 hours apart. Within 30 minutes after the last dosing, the animals were inoculated with the test organism and handled in the same fashion as those in the acute study.

c. In vitro study

Cultures of S. typhimurium histidine auxotrophs (G-46 and TA-1530) were plated on appropriate media. The test compound was then added to the plate, either in the form of a microdrop of solution (0.01 to 0.25 ml) applied to a small filter paper disc resting on the agar or a small crystal applied directly to the agar. Tenfold serial dilutions of the culture were employed and plated so as not to miss the optimum cell density for mutant growth. Mutant colonies were observed and scored. Strain D-3 Saccharomyces cells at proper dilutions were shaken with the test compound, diluted, and plated at 50% survival level or above (see HMA Supplementary Materials and Methods). Red sectors were then scored and the frequency calculated after suitable incubation. Negative and positive controls were run concurrently. The positive control was EMS for Salmonella and Saccharomyces. The in vitro Salmonella tests were reported



as (+) or (-) or questionable; the in vitro Saccharomyces tests were reported as sample concentrations, percent survival, and recombinants/ $10^5$  survivors. For the Saccharomyces a 50% survival level, e.g., an arbitrary 5.0% w/v test level, was used when no LD<sub>50</sub> was determinable.

## 2. Cytogenetic Studies

### a. In vivo study

Ten to twelve week old, male, albino rats obtained from a closed colony (random-bred) were used. A total of 59 animals in the acute study and 18 animals in the subacute study was used, as illustrated in the following protocol.

#### Number of Animals Used

##### Acute Study

<u>Treatment</u>	<u>Time Killed After Administration</u>		
	<u>6 Hours</u>	<u>24 Hours</u>	<u>48 Hours</u>
High Level	5	5	5
Intermediate Level	5	5	5
Low Level	5	5	5
Positive Control	0	0	5
Negative Control	3	3	3

##### Subacute Study

Five doses 24 hours apart; animals killed 6 hours after last dose.

<u>Treatment</u>	<u>Killed After Administration</u>
High Level	5
Intermediate Level	5
Low Level	5
Negative Control	3

All animals were dosed by gastric intubation.

Four hours after the last compound administration, and two hours prior to killing, each animal was given 4 mg/kg of colcemid intra-



**BIONETICS**



peritoneally in order to arrest the bone marrow cells in C-mitosis. Animals were killed by using CO<sub>2</sub>, and the adhering muscle and epiphysis of one femur were removed. The marrow "plug" was removed with a tuberculin syringe and an 18 gauge needle, aspirated into 5 ml of Hanks' balanced salt solution (BSS) in a test tube and capped. The specimens were centrifuged at 1,500 RPM in a table-top centrifuge for 5 minutes, decanted, and 2 ml of hypotonic 0.5% KCl solution was added with gentle agitation to resuspended the cells. The specimens were then placed in a 37°C water bath for 20 minutes in order to swell the cells. Following centrifugation for 5 minutes at 1,500 RPM, the supernatant was decanted and 2 ml of fixative (3:1 absolute methanol:glacial acetic acid) was added. The cells were resuspended in the fixative with gentle agitation, capped, and placed at 4°C for 30 minutes. The specimens were again centrifuged, decanted, 2 ml of prepared fixative was added, and the cells were resuspended and placed at 4°C overnight.

The following day the specimens were again centrifuged, decanted and 0.3 - 0.6 ml of freshly prepared fixative was added to obtain a suitable density. The cells were resuspended and 2 - 3 drops of the suspension were allowed to drop onto a clean, dry slide held at 15° from the horizontal. As the suspension flowed to the edge of the slide, it was ignited by an alcohol burner and allowed to flame. Following ignition, the slides were allowed to dry at room temperature overnight. Duplicate slides were prepared. The slides were stained using a 5% Giemsa solution (Giemsa buffer pH 7.2) for 20 minutes, rinsed in acetone, 1:1 acetone:xylene, and placed in fresh xylene for 30 minutes. The slides were then mounted using Permount (Fisher Scientific) and 24 x 50 mm coverglasses. The coverglasses were selected to be 0.17 mm  $\pm$  0.005 mm in thickness by use of a coverglass micrometer. The preparations



were examined using Leitz Ortholux I & II microscopes with brightfield optics and xenon light sources. These specimens were scanned with 10X and 24X objectives and suitable metaphase spreads that were countable were then examined critically using 40X, 63X or 100X oil immersion flatfield apochromatic objectives. Oculars were either 12X or 16X widefield periplanatics and the tube magnification either 1X or 1.25X. The filters used were either a didymium (BG20) or a Schott IL570  $m\mu$  interference filter.

The chromosomes of each cell were counted and only diploid cells were analyzed. They were scored for chromatid gaps and breaks, chromosome gaps and breaks, reunions, cells with greater than ten aberrations, polyploidy, pulverization, and any other chromosomal aberrations which were observed. They were recorded on the currently used forms and expressed as percentages on the summary sheets. Fifty metaphase spreads were scored per animal. Mitotic indices were obtained by counting at least 500 cells and the ratio of the number of cells in mitosis/the number of cells observed was expressed as the mitotic index.

Positive controls in the acute study consisted of animals which had been given the known mutagen Triethylene Melamine (TEM) administered intraperitoneally at a level of 0.30 mg/kg. Negative controls on the acute and subacute studies consisted of the vehicle in which the compound was administered. The dosage levels, solvents and toxicity data are included in the Results and Discussion Section of the report.

b. In vitro study

Human embryonic lung cultures (WI-38) which were negative for adventitious agents (viruses, mycoplasma) which may interfere

were used. These cells were employed at passage level 19. The cells had been transferred using 0.025% trypsin and planted in 32 oz. prescription bottles containing 40 ml of tissue culture medium. When growth was approximately 95% confluent the cells were removed from the glass using trypsin, centrifuged, and frozen in tissue culture medium containing dimethyl sulfoxide (DMSO). Cells were frozen in vials in the vapor phase of liquid nitrogen at a concentration of  $2 \times 10^6$  cells/ml. When needed, the vials were removed from liquid nitrogen, quick-thawed in a 37°C water bath, washed free of DMSO, suspended in tissue culture medium (minimal essential medium [MEM] plus 1% glutamine, 200 units/ml of penicillin and 200 µg/ml of streptomycin and 15% fetal calf serum) and planted in milk dilution bottles at a concentration of  $5 \times 10^5$  cells/ml. The test compound was added at three dose levels using three bottles for each level, 24 hours after planting. The dose levels required a preliminary determination of a tissue culture toxicity. This was accomplished by adding logarithmic doses of the compound in saline to a series of tubes containing  $5 \times 10^5$  cells/ml which were almost confluent. The cells were examined at 24, 48, and 72 hours. Any cytopathic effect (CPE) or inhibition of mitoses was scored as toxicity. Five more closely spaced dose levels were employed within the two logarithmic dosages, the higher of which showed toxicity and the lower no effect. The solvents used and the range finding data are presented in the toxicity data report under Results and Discussion. The dose level below the lowest toxic level was employed as the high level. Logarithmic dose levels were employed for the medium and low levels.

Cells were incubated at 37°C and examined twice daily to determine when an adequate number of mitoses were present. Cells were harvested by shaking when sufficient mitoses were observed, usually 24 - 48



**BIONETICS**

hours after planting, centrifuged, and fixed in absolute methanol:glacial acetic acid (3:1) for 30 minutes.

The specimens were centrifuged, decanted, and suspended in acetic acid-orcein stain (2.0%) and a drop of suspension placed on a clean dry slide. Selected coverglasses 0.17 mm in thickness were placed on the suspension and the excess stain gently expressed from the slide. The coverglasses were sealed with clear nail polish and examined immediately.

The microscopes, objectives, oculars, filters and light sources were enumerated under the metaphase description. Positive controls used were TEM (at a concentration of 0.1 mcg/ml dissolved in saline) and negative controls which consisted of the vehicle in which the test compound was dissolved, which was 0.85% saline. Data were reported on forms currently used and expressed as percentages on the anaphase summary sheets.

### 3. Dominant Lethal Assay

In this test, male and female random bred rats from a closed colony were employed. These animals were 10-12 weeks old at the time of use. Ten male rats were assigned to each of 5 groups; 3 dose levels selected as described above, a positive control (triethylene melamine) (TEM) and a negative control (solvent only). The positive control was administered intraperitoneally. Administration of the test compound was orally by intubation in both the acute study (1 dose) and in the subacute study (1 dose per day for 5 days). Following treatment, the males were sequentially mated to 2 females per week for 8 weeks (7 weeks in the subacute study). Two virgin female rats were housed with a male for 5 days (Monday through Friday). These two females were removed and housed in a cage until killed. The male was rested on Saturday and Sunday and two new females introduced to the cage on



**BIONETICS**

Monday. It has been our experience that conception has taken place in more than 90% of the females by Friday and that the two day rest is beneficial to the male as regards subsequent weekly matings. Females were killed using CO<sub>2</sub> at 14 days after separating from the male, and at necropsy the uterus was examined for deciduomata (early deaths), late fetal deaths and total implantations.

Sufficient animals were provided in our experimental design to accommodate for any reduction in the number of conceptions. Each male was mated with two females per week, and this provided for an adequate number of implantations per group per week (200 minimum) for negative controls, even if there was a fourfold reduction in fertility of implantations. Results were analyzed according to the statistical procedures described in Supplementary Materials and Methods. Corpora lutea, early fetal deaths, late fetal deaths and total implantations per uterine horn were recorded on the raw data sheets, which are submitted separately.

D. Supplementary Materials and Methods

1. Host-Mediated Assay In Vitro and Formulae

a. Bacterial in vitro plate tests

This method has been published by Ames: The Detection of Chemical Mutagens with Enteric Bacteria, in Chemical Mutagens; Principles and Methods for Their Detection, Vol. 1, Chapter 9, pp. 267-282, A. Hollaender, Editor, Plenum Press, New York (1971).

b. In vitro for mitotic recombination

(1) Strain D-3 was grown to stationary phase on complete medium agar plates at 30°C (3-4 days). Cells were rinsed from the plates and washed twice in saline and cell concentration determined spectro-



**BIONETICS**

photometrically. (A standard curve previously determined for colony forming units versus % transmittance at 545 mu was easily used.)

(2) Cells from the concentration suspension were diluted appropriately into 0.067 M Phosphate buffer pH 7.2 to provide  $5 \times 10^7$  cells/ml in a total of 25 ml.

(3) The test chemical was first tested for 4 hours at 30°C, with shaking, at concentrations which permitted determination of the 50% survival level. Then, if not included in the first experiment, the compound was tested again only at the 50% survival level. If 50% survival level could not be determined, the arbitrary test level of 5% w/v was used.

(4) Following treatment, cells were diluted and plated on complete agar medium for determination of total population and red sectors. Total surviving population was conveniently measured on plates of  $10^{-4}$  and  $10^{-5}$  dilutions using 0.2 ml per plate (5 plates), and sectors determined on plates of  $10^{-3}$  and  $10^{-4}$  dilutions using 0.2 ml per plate (5 plates). Plates were incubated for 2 days at 30°C followed by a holding period of 2 days at 4°C to promote color development with limited enlargement of the colonies. Red sectors were scored by systematically scanning the plates with a dissecting microscope at 10X magnification.

(5) The frequency of red sectors can then be calculated and may be expressed conveniently as sectors per  $10^5$  survivors for comparison with untreated controls.

(6) Ethyl Methane Sulfonate (EMS) was employed as the positive control in both in vitro systems.

c. Minimal medium (bacteria):

Spizizen's Minimal Medium:



**BIONETICS**

4X Salt Solution:

$(\text{NH}_4) \text{SO}_4$	8.0 gm
$\text{K}_2\text{HPO}_4$	56.0 gm
$\text{KH}_2\text{PO}_4$	24.0 gm
Na Citrate	4.0 gm
Mg $\text{SO}_4$	0.8 gm
Biotin	0.004 gm
$\text{H}_2\text{O}$	qs to 1 liter
Sterilize by autoclaving (121°C/15 min.)	

Medium:

4X Salt Solution	:250 ml	
5.0% Glucose (sterile)	:100 ml	(If histidine is added at concentration of 30 mg/liter, this becomes a complete bacterial medium.)
1.5% Bacto-agar (sterile)	:650 ml	

d. Complete medium (bacteria):

Bacto-Tryptone	1.0 gm
Yeast-Extract	0.5 gm
Bacto-Agar	2.0 gm
Distilled $\text{H}_2\text{O}$	100.0 ml

Sterilize by autoclaving (121°C for 15 minutes).

e. Complete medium (yeast):

$\text{KH}_2\text{PO}_4$	1.5 gm
$\text{MgSO}_4$	0.5 gm
$(\text{NH}_4)_2\text{SO}_4$	4.5 gm



**BIONETICS**

Peptone	3.5 gm
Yeast-Extract	5.0 gm
Glucose	20.0 gm
Agar	20.0 gm
Distilled H <sub>2</sub> O	1000.0 ml

Sterilize by autoclaving (121°C for 15 minutes).

## 2. Cytogenetics In Vitro Preparation of Anaphase Chromosomes (from Nichols, 1970)

"Anaphase preparations may be made by several methods. One convenient approach is to grow cells directly on coverslips in petri dishes. With human fibroblasts 400,000 cells added to a 22 x 44 mm coverslip in a 50 mm petri dish grown in a 5% CO<sub>2</sub> atmosphere in air has proved very satisfactory. When adequate numbers of mitoses are visualized directly utilizing an inverted microscope (usually 48 to 92 hours after planting) the coverslip is transferred to absolute ethanol for 15 minutes for fixation. They are then stained with any one of a number of suitable stains (Fuelgen, May-Grunwald-Giemse, orcein) and attached to a slide with mounting media for evaluation. Anaphase preparations may also be prepared on cells grown in suspension or cells from a monolayer that have been put into suspension. In this instance the cells are centrifuged and fixed with the squash fixative. They are then suspended in the stain and a drop of the suspension put on the slide and covered with a coverslip. However, in this case, only the excess stain is gently expressed from under the coverslip and no squashing is carried out. In anaphase preparations no pretreatment with colchicine or hypotonic expansion is used and no technique for spreading the cells is used, so that the spindle and normal relationships of the chromosomes are not disturbed."



**BIONETICS**



### 3. Statistical Analyses of Dominant Lethal Studies

The following statistical analyses were employed as a means of analyzing the results of the dominant lethal studies.

#### a. The fertility index

The number of pregnant females/number of mated females with the chi-square was used to compare each treatment to the control. Armitage's trend was used for linear proportions to test whether the fertility index was linearly related to arithmetic or log dose.

#### b. Total number of implantations

The t-test was used to determine significant differences between average number of implantations per pregnant female for each treatment compared to the control. Regression techniques were used to determine whether the average number of implantations per female was related to the arithmetic or log dose.

#### c. Total number of corpora lutea

The t-test was used to determine significant differences between average number of corpora lutea per pregnant female for each treatment compared to the control.

#### d. Preimplantation losses

Preimplantation losses were computed for each female by subtracting the number of implantations from the number of corpora lutea. Freeman-Tukey transformation was used on the preimplantation losses for each female and then the t-test was used to compare each treatment to control. Regression technique was used to determine whether the average number of preimplantation losses per female was related to the arithmetic or log dose.



e. Dead implants

Dead implants were treated the same as pre-implantation losses.

f. One or more dead implants

The proportion of females with one or more dead implants was computed, each treatment compared to control by chi-square test and Armitage's trend used for linear proportions to see if proportions were linearly related to either arithmetic or log dose. Also, probit regression analysis was used to determine whether the probit of the proportions was related to log dose.

g. Two or more dead implants

The proportion of females with two or more dead implants computed was treated same as above (f).

h. Dead implants per total implants

Dead implants per total implants were computed for each female and used Freeman-Tukey arc-sine transformation on data for each female; then used t-test to compare each treatment to control.

Historical control data was compiled on a continuous basis as studies were completed. In addition to comparing each treatment to control, as outlined above, each treatment was compared to a historical control.

In order to take variation between males into account, a nested model was used. An analysis of across weeks is also provided.

In addition to these tests, the distribution forms of the various parameters were tested in order to evaluate the appropriateness of some of the tests being used. Certain correlations between parameters may exist and were examined as one step to determine the appropriateness of models. If necessary, alternate test methods were implemented.



The results are presented in tabular form with the addition of historical control information. In addition to these tables, a written report of all findings is provided. As information became available from the on-going investigation of these data, it was reported and suggestions included for changes to the methods of analysis. The statistical reports give the level of significance using both a one-tailed and two-tailed test. Finally, a summary sheet for each study is provided.



# MODEL

$$y_{ijk} = \mu + \alpha_i + c_{ij} + e_{ijk}$$

$i = 1, 2$  Group

$j = 1, 2, \dots, 10$  Males within each group

$k = 1, 2$  Females within Males within Groups

ASSUMPTIONS:

$$\alpha_1 + \alpha_2 = 0, \quad c_{ij} \sim \text{nid}(0, \sigma_c^2),$$

$$e_{ijk} \sim \text{nid}(0, \sigma^2)$$

Males are randomly drawn from infinite population

S.U.	d.f.	S.S.	MS	E(MS)	F
TOTAL	39	$\sum \sum \sum (y_{ijk} - \bar{y} \dots)^2$			
GROUPS	1	$20 \sum (\bar{y}_{i..} - \bar{y} \dots)^2$	$S_1^2$	$\sigma^2 + 20\sigma_c^2 + 20\sigma^2$	
MALES WITHIN GROUPS	18	$2 \sum \sum (\bar{y}_{ij.} - \bar{y}_{i..})^2$	$S_2^2$	$\sigma^2 + 2\sigma_c^2$	
REMAINDER	20	$\sum \sum \sum (y_{ijk} - \bar{y}_{ij.})^2$	$S_3^2$	$\sigma^2$	

E. References

1. Host-Mediated Assay

- a. Gabridge, M.G., Denunzio, A. and Legator, M.S.:  
Nature, 221:68, 1969.
- b. Gabridge, M.G., Denunzio, A. and Legator, M.S.:  
Science, 163:689, 1969.
- c. Gabridge, M.G. and Legator, M.S.: Proc. Soc.  
Exptl. Biol. Med., 130:831, 1969.
- d. Gabridge, M.G., Oswald, E.J. and Legator, M.S.:  
Mut. Res., 7:117, 1969.
- e. Legator, M.S. and Malling, H.V.: In, Environmental  
Chemical Mutagens, A. Hollaender (Ed.), Plenum  
Publishing Corp., New York, in press.

2. Cytogenetics

- a. Nichols, V.W.: Personal communication.
- b. Legator, M.S.: In, Laboratory Diagnosis of Diseases  
Caused by Toxic Agents, F. W. Sunderman and F. W.  
Sunderman (Ed.), Warren H. Green, Inc., St. Louis,  
pp. 17-22, 1970.
- c. Hsu, T.C. and Patton, J.L.: Technical Addendum in,  
Comparative Mammalian Cytogenetics, K. Benirschke  
(Ed.), Springer-Verlag, New York, pp. 454-460, 1969.
- d. Legator, M.S. et al.: Cytogenetic studies in rats  
of cyclohexylamine, a metabolite of cyclamate.  
Science, 165:1139, 1969.



3. Dominant Lethal

- a. Bateman, A.J.: Genet. Res. Comb., 1:381, 1960.
- b. Bateman, A.J.: Nature, 210:205, 1966.
- c. Ehling, U.H., Cumming, R.B. and Malling, H.V.:  
Mut. Res., 5:417, 1968.
- d. Epstein, S.S. and Shafner, H.: Nature, 219:  
385, 1968.



F. Abbreviations

1. mu = micron
2. mcg = ug = microgram
3. g = gram
4. kg = kilogram
5. ml = milliliter
6. rpm = revolutions per minute
7. °C = degrees centigrade
8. pH = power of the hydrogen ion concentration to the base 10
9. M = molar solution
10. conc. = concentration
11. MTD = maximum tolerated dosage = High = LD<sub>5</sub> if determined  
or else exceedingly high dose, such as 5 g/kg
12. INT = intermediate = medium level
13. USE = usage level if known = low level
14. BSS = balanced salt solution
15. C-metaphase = cells arrested in metaphase, using colchine  
or colcemid
16. LD<sub>50</sub> = that dosage which produced 50% mortality in the  
group of animals treated
17. LD<sub>5</sub> = that dosage which produced 5% mortality in the group  
of animals treated
18. NC = negative control
19. PC = positive control
20. AU = acute usage level (low level)
21. AI = acute intermediate level (medium level)
22. AMTD = acute maximum tolerated dose level (LD<sub>5</sub> level,  
high level)



23. SAU = subacute usage level (low level)
24. SAI = subacute intermediate level (medium level)
25. SA LD<sub>5</sub> = subacute LD<sub>5</sub> level (MTD level, high level)
26. CO<sub>2</sub> = carbon dioxide
27. DMN = Dimethyl nitrosamine
28. EMS = Ethyl methane sulfonate
29. TEM = Triethylene melamine
30. DMSO = Dimethyl sulfoxide
31. MEM = minimal essential medium (Eagle's)
32. CPE = cytopathic effect
33. his = histidine marker
34. D-3 = mitotic recombinant strain of Saccharomyces
35. mf = mean mutant frequency
36. MFt/MFc = mean mutant frequency of the test compound group compared to mean mutant frequency of the negative control group
37. CFU = colony forming units
38. WI-38 = code name for a strain of human embryonic lung tissue culture cells
39. Rec x 10<sup>5</sup> = mitotic recombinants x 10<sup>5</sup>
40. Mean B/A = mean frequency
41. tot. scr. = total scored
42. tot. = total
43.  $\chi^2$  = a test of variation in the data from the computed regression line - tested in these studies at the 5% level
44. Aber. = aberrations
45. Frag. = fragment
46. HMA = host-mediated assay

